

Eicher DCM Spare parts

	Description of Item (2)	Unit	Qty	Eastern Automobile Workshop
1	A/C filter	per piece	1	1
2	AC Belt	Pcs	1	1
3	Accelerator cable	Each	1	800
4	Accelerator cable assy	Each	1	1600
5	Air filter	Each	1	2450
6	Air filter hose pipe	Each	1	650
7	Air filter inside	Each	1	1
8	Air filter outside	Each	1	1
9	Air unloader opening & new ser	Each	1	600
10	Alternator Assy	Each	1	11500
11	Alternator carbon bush	Each	1	350
12	Alternator cut out	Each	1	1000
13	Alternator Fan belt pully bearing	Each	1	580
14	Alternator magnet pully	Each	1	1
15	Alternator overhauling	Each	1	450
16	Alternator rectifile	Each	1	1280
17	Anabond	No	1	1
18	Anabond GUM (Big)	Each	1	90
19	Anabond GUM (Small)	Each	1	65
20	Arm Bush Lower	Set	1	1
21	Arm Bush Upper	Set	1	1
22	Arm bushing	Each	1	1
23	Arm bushing lower big	Each	1	1
24	Arm bushing lower small	Each	1	1
25	Arm Lower	set	1	1
26	Arm Upper	Set	1	1
27	Axel lock	Each	1	40
28	Axel shaft	Each	1	7300

Eicher DCM Labour charge

	Description of Item (2)	Eastern Automobile Workshop
1	A/C filter changing	1
2	AC Belt changing	1
3	AC gas refilling labour charge	1
4	Accelerator cable assy changing	1
5	Accelerator cable changing	130
6	Air cleaner filter changing	50
7	Air compressor leakage repairing	350
8	Air Element changing	1
9	Air filter changing	80
10	Air filter hose pipe changing	80
11	Air filter inside changing	50
12	Air filter outside changing	1
13	Air filter servicing	50
14	Air tank opening & refitting	350
15	Air unloader opening & new servi	380
16	Alternator Assy changing	250
17	Alternator carbon bush changing	70
18	Alternator cut out changing	180
19	Alternator Fan belt pully bearing c	100
20	Alternator magnet pully changing	1
21	Alternator overhauling changing	600
22	Alternator rectifile changing	200
23	Anabond changing	1
24	Anabond GUM (Big) changing	1
25	Anabond GUM (Small) changing	1
26	Arm Bush Lower changing	1
27	Arm Bush Upper changing	1
28	Arm bushing changing	1

29	Axel shaft oil seal	Each	1	1
30	Axel spacer	Each	1	1
31	Axle	Set	1	1
32	Axle Oil Seal Outer	No	1	1
33	Axle Tube Oil Seal	No	1	1
34	Back bumper	Each	1	1
35	Back gear bearing	Each	1	1
36	Back glass	Each	1	1400
37	Back Light	No	1	1
38	Back light Assy (Left)	Each	1	1000
39	Back light Assy (Right)	Each	1	1000
40	Back Light Bulb	No	1	20
41	ball joint	per piece	1	1
42	Ball Joint Lower	Set	1	1
43	Ball Joint Upper	Set	1	1
44	Battery	No	1	1
45	Battery (Amaron)	Each	1	8500
46	Battery (Bosch)	Each	1	7800
47	Battery box new making	Each	1	650
48	Battery cable -ive	Each	1	320
49	Battery cable +ive	Each	1	320
50	Battery terminal end	Each	1	80
51	Bear Box	Set	1	1
52	Bearing 6202	Each	1	220
53	Bearing 6302	Each	1	220
54	Belt power string A/B	Each	1	1
55	Bendix pinion	Each	1	1800
56	Benjo washer	Each	1	10
57	Benzu Bolt	Each	1	150
58	Black tape	per piece	1	20
59	Brake Booster	No	1	1
60	Brake Booster Assy	Each	1	9300

29	Arm bushing lower big changing	1
30	Arm bushing lower small changing	1
31	Arm Lower changing	1
32	Arm Upper changing	1
33	Axel lock changing	50
34	Axel shaft changing	350
35	Axel shaft oil seal changing	250
36	Axel spacer changing	150
37	Axle changing	1
38	Axle oil seal changing	150
39	Axle Oil Seal Outer Labour Charge	1
40	Axle Tube Oil Seal Labour Charge	1
41	Back bumper Labour Charge	1
42	Back gear bearing Labour Charge	1
43	Back glass Labour Charge	500
44	Back light Assy (Left) Labour Charge	100
45	Back light Assy (Right) Labour Charge	100
46	Back Light Bulb Labour Charge	40
47	Back Light Labour Charge	80
48	ball joint Labour Charge	1
49	Ball Joint Lower Labour Charge	1
50	Ball Joint Upper Labour Charge	1
51	Battery box new making Labour Charge	750
52	Battery cable -ive Labour Charge	40
53	Battery cable +ive Labour Charge	40
54	Battery change Labour Charge	50
55	Battery terminal end Labour Charge	50
56	Bear Box Labour Charge	1
57	Bearing 6202 Labour Charge	50
58	Bearing 6302 Labour Charge	50
59	Belt power string A/B Labour Charge	200
60	Bendix pinion Labour Charge	250

61	Brake Booster kit	Each	1	820
62	Brake bucket	Each	1	180
63	Brake Bucket Kit	Set	1	220
64	Brake calliper lock	Each	1	120
65	Brake cam	Each	1	1700
66	Brake cam Arm	Each	1	1600
67	Brake cam Arm lock	Each	1	80
68	Brake cam bush	Each	1	380
69	brake disc	Each	1	1
70	Brake flexible pipe front	Each	1	450
71	Brake fluid	Each	1	120
72	Brake fluid dot3	Each	1	120
73	Brake Hub Front	Set	1	1
74	Brake Hub Rear	Set	1	1
75	brake light bulb	per piece	1	20
76	Brake light switch	Each	1	230
77	Brake lining	Each	1	750
78	Brake lining back and front	Each	1	2200
79	Brake Oil	Lts	1	230
80	Brake Pad	Set	1	1
81	Brake pad	Each	1	1
82	Brake pipe (Rear)	Each	1	480
83	brake pipe bleasting	each	1	120
84	Brake servo	Each	1	10200
85	Brake Shoe	Set	1	2500
86	Brake shoe	Each	1	750
87	Brake shoe	Each	1	1
88	Brake shoe lock with spring	Each	1	550
89	Brass blezzing	Each	1	120
90	Bulb 1016	Each	1	20
91	Bulb 1141	Each	1	20
92	Bulb 67	Each	1	10

61	Bendix pinion repairing & replacin	380
62	Benjo washer Labour Charge	10
63	Benzu Bolt Labour Charge	10
64	Black tape Labour Charge	5
65	Brake adjuster opening & refitting	180
66	Brake Booster Assy Labour Charg	1
67	Brake Booster kit Labour Charge	1
68	Brake Booster Labour Charge	1
69	Brake Bucket Kit Labour Charge	1
70	Brake bucket Labour Charge	50
71	Brake cable changing	1
72	Brake calliper lock Labour Charge	1
73	Brake cam Arm Labour Charge	450
74	Brake cam Arm lock Labour Char	100
75	Brake cam bush Labour Charge	200
76	Brake cam bush opening & fitting	200
77	Brake cam Labour Charge	250
78	Brake diafam opening & new serv	250
79	brake disc Labour Charge	1
80	Brake dise cutting	1
81	Brake drum cutting	800
82	Brake dual valve kit changing	750
83	Brake flexible pipe changing	150
84	Brake flexible pipe front Labour C	150
85	Brake fluid dot3 Labour Charge	1
86	Brake Hub Front Labour Charge	1
87	Brake Hub Rear Labour Charge	1
88	brake light bulb Labour Charge	100
89	Brake light switch Labour Charge	50
90	Brake lining back and front Labou	600
91	Brake lining Labour Charge	350
92	Brake Oil Labour Charge	1

93	Bumper indicator light assy	Each	1	380
94	bush stabilzer	per piece	1	110
95	Bypass filter	Each	1	650
96	C.V joint	per piece	1	1
97	Cam shaft	Each	1	7200
98	Cam Shaft Bearing	Set	1	450
99	Cam shaft bush	Each	1	250
100	Cam shaft gear	Each	1	1600
101	Carbon bush 12 v	Each	1	270
102	Carbon holder	Each	1	270
103	Carbon rocker 12v	Each	1	1100
104	Carbon soldering	Each	1	100
105	Center Bolt	No	1	120
106	Center lock	Each	1	500
107	Center lock remote key	Each	1	2500
108	Check nut front	Each	1	220
109	Check nut lock	No	1	150
110	Clamp for pipe	Each	1	40
111	Clutch cylinder (lower)	Each	1	1850
112	Clutch cylinder (Upper)	Each	1	1700
113	Clutch cylinder Assy	Each	1	1
114	Clutch cylinder kit	Each	1	350
115	Clutch Cylinder Lower	Set	1	1
116	Clutch Cylinder Upper	Set	1	1
117	Clutch kit	Each	1	220
118	Clutch kit box	Each	1	80
119	Clutch Plate	Set	1	4800
120	Clutch plate (Fan Type)	Each	1	1
121	Clutch plate (Round Type)	Each	1	1
122	Clutch relese bearing	Each	1	1400
123	Clutch rod	Each	1	120
124	Connecting Bearing	Set	1	1450

93	Brake Pad Labour Charge	1
94	Brake pipe (Rear) Labour Charge	150
95	brake pipe bleasting Labour Charge	150
96	Brake pipe changing	120
97	Brake pipe leakage repairing	180
98	Brake servicing 4 wheel changing	800
99	Brake servo Labour Charge	300
100	Brake servo repairing & servicing	430
101	Brake Shoe Labour Charge	1
102	Brake shoe lock with spring Labour Charge	1
103	Brass blezzing Labour Charge	120
104	Bulb 1016 Labour Charge	20
105	Bulb 1141 Labour Charge	20
106	Bulb 67 Labour Charge	10
107	Bumper indicator light assy Labour Charge	150
108	bush stabilzer Labour Charge	1
109	Bypass filter Labour Charge	100
110	C.V joint Labour Charge	1
111	Cam Shaft Bearing Labour Charge	200
112	Cam shaft bush Labour Charge	200
113	Cam shaft gear Labour Charge	100
114	Cam shaft Labour Charge	300
115	Carbon bush 12 v Labour Charge	100
116	Carbon holder Labour Charge	150
117	Carbon rocker 12v Labour Charge	100
118	Carbon soldering Labour Charge	90
119	Center bearing changing	280
120	Center Bolt Labour Charge	800
121	Center lock Labour Charge	500
122	Center lock remote key Labour Charge	1500
123	Centre bolt changing	700
124	Chain socket changing	1

125	Connecting bearing	Each	1	150
126	Connecting bush	Each	1	450
127	Connecting rod	Each	1	800
128	Connection Rod	Set	1	3300
129	Controlling cylinder Assy	Each	1	2700
130	Controlling overhauling	Each	1	1200
131	Controlling pipe	Each	1	270
132	Controlling switch Assy	Each	1	2750
133	Coolant	per litres	1	280
134	Crank Shaft	set	1	28000
135	Crank shaft	Each	1	1
136	Crank shaft oil seal	Each	1	1100
137	Cross	Each	1	1
138	Cross Bearing	set	1	1300
139	Cross bearing	Each	1	1
140	Cross holder	Each	1	1350
141	Cross propeller shaft	Each	1	1300
142	Crown & Tail Assy	Set	1	24000
143	Crown Overhauling	Each	1	2500
144	Crown tail assy	Each	1	1
145	CV Joint Assembly	set	1	1
146	Cycle pin	Each	1	650
147	Dashboard polish	each	1	250
148	Dial wrench (6-32mm)	Set	1	1050
149	Diesel filter	Each	1	1700
150	distilled water	per litre	1	25
151	Door agrnish inner	Each	1	280
152	Door agrnish outer	Each	1	280
153	Door lock new making	Each	1	250
154	Drag link kit	Each	1	850
155	Drain plug	Each	1	60
156	Dual brake valve Assy	Each	1	12300

125	Check nut front Labour Charge	100
126	Clamp for pipe Labour Charge	25
127	Clutch cable changing	1
128	Clutch cylinder (lower) Labour Ch	250
129	Clutch cylinder (Upper) Labour C	300
130	Clutch cylinder Assy Labour Char	1
131	Clutch cylinder kit Labour Charge	250
132	Clutch kit box Labour Charge	1
133	Clutch kit Labour Charge	200
134	Clutch plate (Fan Type) Labour Cl	1
135	Clutch plate (Round Type) Labour	1
136	Clutch Plate Labour Charge	2300
137	Clutch relese bearing Labour Char	1500
138	Clutch rod Labour Charge	50
139	Coil Spring changing	1
140	Complete electricial line checking	1200
141	Connecting Bearing changing	150
142	Connecting bush changing	200
143	Connecting rod changing	250
144	Controlling cylinder Assy changin	200
145	Controlling overhauling changing	800
146	Controlling pipe changing	150
147	Controlling switch Assy changing	150
148	Coolant Change	50
149	Crank shaft changing	500
150	Crank shaft oil seal changing	300
151	Cross Bearing changing	300
152	Cross bearing greasing changing	230
153	Cross change	1
154	Cross Coupling cutting by lath ma	700
155	Cross holder changing	300
156	Cross holder cutting and welding c	650

157	Dust Guard	Pcs	1	450
158	Dust guard back and front	Set	1	1100
159	Dynamo bearing	Each	1	360
160	Dynamo rocker	Each	1	1000
161	E/ paper	Each	1	20
162	EGR pipe	Each	1	1
163	Electric horn 2v	Each	1	500
164	Electric welding	Each	1	120
165	Element Assy, Fuel	Each	1	1
166	Element kit spin on	Each	1	1
167	Element sub assy, Air	Each	1	1
168	EML life max oil	Each	1	345
169	Engine Bolt	each	1	150
170	Engine head assy	each	1	12000
171	Engine head gasket	Each	1	1850
172	Engine mounting	Each	1	700
173	Engine oil 15w40	ltr	1	360
174	Engine Oil Filter	No	1	250
175	Engine oil seal	each	1	550
176	Engine pacing	Each	1	120
177	Engine ring	Each	1	650
178	Engine Twining	Each	1	220
179	Engine valve intake	each	1	480
180	Exhaust manifold	Each	1	2400
181	Fan belt	Each	1	650
182	Feed Pump	Set	1	1
183	Feed pump Assy	Each	1	3400
184	Fender liner front left	Each	1	1
185	Fender liner front right	Each	1	1
186	Fender liner rear left	Each	1	1
187	Fender liner rear right	Each	1	1
188	Flate washer	Each	1	50

157	Cross propeller shaft changing	300
158	Crown & Tail Assy changing	1200
159	Crown Overhauling changing	2500
160	Crown tail assy changing	1
161	CV Joint Assembly changing	1
162	CV joint Boot changing	1
163	CV Joint changing	1
164	CV joint oil seal changing	1
165	Cycle pin changing	180
166	Dashboard polish changing	1
167	denting and painting changing	2000
168	Dial wrench (6-32mm) changing	1
169	Diesel filter	150
	Changing	
170	distilled water changing	5
171	Door agrnish inner changing	350
172	Door agrnish outer changing	300
173	Door lock new making changing	200
174	Drag link kit changing	150
175	Drain plug changing	10
176	Driver shaft oil seal changing	1
177	Dual brake valve Assy changing	250
178	Dust guard back and front changin	400
179	Dust Guard changing	200
180	Dynamo bearing changing	150
181	Dynamo rocker changing	200
182	E/ paper changing	1
183	ECM scanned changing	1000
184	EGR pipe change	1
185	Electric horn 2v changing	50
186	Electric welding changing	80
187	Electrical line checking and rectifie	1200

189	Fly wheel	Each	1	7300
190	Fly wheel ring	Each	1	1100
191	Fog Light	Set	1	900
192	foot mat	Set	1	2400
193	Front bumper	Each	1	6500
194	Front door inner clamel rubber	Each	1	1
195	Front hub bearing inner	Each	1	1350
196	Front hub bearing outer	Each	1	1050
197	Front Windshield glass	Each	1	6750
198	fuel and water separator	per piece	1	1800
199	Fuel filter	Each	1	530
200	Fuel injection overflow pipe	Each	1	300
201	Fuel injector nozzel	Each	1	1700
202	Fuel injector pipe	Each	1	450
203	fuel pipe	per piece	1	300
204	Fuel pump Assy	Each	1	39000
205	Fuel pump washer	Each	1	10
206	Fuel strainer A/B	Each	1	1
207	Fuel Supply Pump	Set	1	1200
208	Full Engine Overhauling	Each	1	9000
209	Fuse	No	1	30
210	Fuse 10 Amp	Each	1	10
211	Fuse 15 Amp	Each	1	10
212	Fuse 20 Amp	Each	1	10
213	Fuse 25 Amp	Each	1	10
214	Fuse 30 Amp	Each	1	10
215	Fuse 5 Amp	Each	1	10
216	Gas kit	Each	1	1
217	Gear box assembly	Each	1	19000
218	Gear box mounting	Each	1	350
219	Gear box oil seal front	Each	1	170
220	Gear box oile seal rear	Each	1	200

188	Element Assy, Fuel changing	50
189	Element kit spin on changing	100
190	Element sub assy, Air changing	50
191	EML life max oil changing	1
192	Engine Bolt changing	20
193	Engine head assy changing	2000
194	Engine head gasket changing	2000
195	Engine mount changing	180
196	Engine oil changing	80
197	Engine Oil Changing with oil filter	100
198	Engine oil seal changing	100
199	Engine over hauling changing	5500
200	Engine pacing changing	1
201	Engine ring changing	250
202	Engine Twining changing	500
203	Engine valve changing and setting	500
204	Engine valve intake changing	250
205	Engine water pump changing	450
206	Exhaust manifold changing	300
207	Fan belt bearing changing	250
208	Fan belt changing	80
209	Feed pump assy changing	150
210	Feed Pump changing	1
211	Feed pump repairing changing	300
212	Fender liner front left changing	1
213	Fender liner front right changing	1
214	Fender liner rear left changing	1
215	Fender liner rear right changing	1
216	Flate washer changing	5
217	Fly wheel changing	1600
218	Fly wheel poolishing changing	1000
219	Fly wheel ring changing	500

221	Gear box packing	Each	1	400
222	Gear counter	Each	1	8400
223	Gear oil	per litre	1	360
224	Gear pinion	Each	1	2200
225	Gear pinion 2nd	Each	1	2100
226	Gear pinion shaft	Each	1	180
227	Glow Plug	Set	1	1
228	Glow plug	Each	1	1
229	Grease	per kg	1	500
230	Grease gun	Each	1	980
231	Half Engine Overhauling	Each	1	4000
232	Hand Brake Cable	Set	1	1
233	Hand brake cable	Each	1	1
234	Head Gasket	No	1	2200
235	Head light assembly	set	1	1
236	Head light Assy (Left)	Each	1	6400
237	Head light Assy (Right)	Each	1	6400
238	Head Light Bulb	Set	1	220
239	Head light bulb	Each	1	130
240	Head light bulb (Halogen)	Each	1	110
241	Head light cover	Each	1	680
242	Head light Set	Set	1	120
243	Helper leaf Spring	Each	1	850
244	Horn and switch	set	1	180
245	Horn high	Each	1	550
246	Horn low	Each	1	400
247	Horn relay	Each	1	230
248	horn switch	per piece	1	120
249	Hose pipe clamp	Each	1	40
250	Hour meter	Each	1	1
251	Hub Bearing Front Inner	Set	1	1200
252	Hub Bearing Front Outer	Set	1	750

220	Fog Light changing	100
221	foot mat changing	100
222	Front bumper opening & fitting	500
223	Front door inner clamel rubber cha	50
224	Front hub bearing inner changing	150
225	Front hub bearing outer changing	150
226	Front Windshield glass changing	1000
227	fuel and water separator changing	80
228	Fuel filter changing	80
229	Fuel injection overflow pipe chang	50
230	Fuel injection pump opening & fit	1500
231	Fuel injector nozzel changing	200
232	Fuel injector pipe changing	50
233	Fuel over flow pipe changing	1
234	fuel pipe changing	180
235	Fuel pump Assy changing	2300
236	Fuel pump washer changing	20
237	Fuel strainer A/B changing	1
238	Fuel Supply Pump changing	200
239	Fuel tank opening & fitting	550
240	Fuel tank servicing changing	750
241	Full Engine Overhauling	7500
242	Fuse 10 Amp changing	10
243	Fuse 15 Amp changing	10
244	Fuse 20 Amp changing	10
245	Fuse 25 Amp changing	10
246	Fuse 30 Amp changing	10
247	Fuse 5 Amp changing	10
248	Fuse changing	5
249	Gas kit changing	1
250	Gear box assembly change	800
251	Gear Box mounting & dismountin	200

253	Hub Check Nut	Set	1	220
254	Hub greasing (Front)	Each	1	500
255	Hub greasing (Rear)	Each	1	500
256	Hub Oil Seal	Set	1	220
257	Hub Splender	Set	1	2700
258	Hubs bearing	per piece	1	650
259	Hubs checknut	Each	1	90
260	Hubs checknut lock	Each	1	90
261	Hubs oil	Each	1	1
262	Hubs oil seal front	Each	1	200
263	Hubs oil seal rear	Each	1	220
264	Hydraulic filter	Each	1	1
265	Hydraulic jack (Heavy Duty)	Each	1	1
266	Hydraulic jack (Light Duty)	Each	1	2800
267	Hydraulic jack oil seal (Set of 12)	Each	1	280
268	Hydraulic oil	per litre	1	200
269	Hydraulic pipe	Each	1	1
270	Hydraulic pump & pipe line new	Each	1	1
271	Hydraulic tank servicing	Each	1	1
272	Ignition switch	Each	1	4300
273	Indicator light	Each	1	310
274	Inner door lock (R)	Each	1	650
275	Inner door lock(L)	Each	1	550
276	Intake manifold	Each	1	1900
277	Intake valve	Set	1	2800
278	Jack lever	Each	1	1100
279	Key Lock Set	Set	1	650
280	Kilimeter cable	Each	1	700
281	Kimpin Bearing	Set	1	1
282	King Pin Bearing	Set	1	580
283	King pin bush machinery cutting	Each	1	650
284	King pin kit	Set	1	550

252	Gear box mounting changing	250
253	Gear box oil seal front changing	150
254	Gear box oil seal rear changing	150
255	Gear Box Opening and fitting cha	2000
256	Gear box packing changing	450
257	Gear counter changing	350
258	Gear oil changing	200
259	Gear pinion 2nd changing	350
260	Gear pinion changing	200
261	Gear pinion shaft changing	300
262	Gear shaft changing	250
263	Gear shaft polishing changing	100
264	Glow plug changing	1
265	Grease changing	250
266	Grease gun changing	1
267	Half Engine Overhauling changing	3500
268	Hand Brake Cable changing	1
269	Head Gasket changing	1
270	Head light assembly changing	1
271	Head light Assy (Left) changing	80
272	Head light Assy (Right) changing	80
273	Head Light Bulb changing	40
274	Head light bulb fitting changing	40
275	Head light cover changing	30
276	Head light Set changing	160
277	Helper leaf Spring changing	450
278	horn and switch fitting changing	70
279	Horn fitting	200
280	Horn high changing	50
281	Horn low changing	50
282	Horn relay fitting	100
283	horn switch changing	150

285	King pin overhauling bothside	Each	1	1000
286	Link assy front	Each	1	1
287	Link assy rear	Each	1	1
288	Link Bush Front	Pcs	1	1
289	Link Bush Rear	Pcs	1	1
290	Link Rod	Pcs	1	1
291	Link rod Front	Each	1	1
292	Lock pati	Each	1	10
293	Looking glass (R)	Each	1	920
294	Looking glass (L)	Each	1	920
295	Lower bolt joine	Each	1	1
296	LT wire 5mm	Each	1	20
297	LT wire 6mm	Each	1	20
298	LT wire 8mm	Each	1	50
299	Main Bearing	Set	1	2250
300	Main bearing	Each	1	650
301	Main Bearing Oil Seal	Set	1	680
302	Main leaf spring (R)	Each	1	1
303	Main leaf spring (F)	Each	1	1
304	Master cylinder	Each	1	3200
305	Master Cylinder Kit	Set	1	800
306	Master cylinder kit	Each	1	320
307	Mobile	per litre	1	350
308	Mobile (15w40)	per litre	1	350
309	Mobile Filter	No	1	280
310	nozzle pipe	per piece	1	320
311	Number Plate	each	1	350
312	Nut & Bolts	Each	1	20
313	Nuts and Bolts(4 Wheel)	Set	1	30
314	Oil filter	Ltr	1	250
315	Oil seal	Each	1	1
316	Oil Supply Pump	No	1	2800

284	Hose pipe clamp changing	25
285	Hour meter changing	1
286	Hub Bearing Front Inner changing	200
287	Hub Bearing Front Outer changing	200
288	Hub Check Nut changing	50
289	Hub greasing (Front) changing	300
290	Hub greasing (Rear) changing	300
291	Hub Oil Seal changing	100
292	Hub Splender changing	450
293	hubs bearing changing	350
294	Hubs checknut changing	100
295	Hubs checknut lock changing	100
296	Hubs oil changing	1
297	Hubs oil seal front changing	100
298	Hubs oil seal rear changing	100
299	Hydraulic control valve opening se	1
300	Hydraulic filter changing	1
301	Hydraulic hose pipe changing	1
302	Hydraulic jack (Heavy Duty) chan	1
303	Hydraulic jack (Light Duty) chang	1
304	Hydraulic jack oil seal (Set of 12 p	1
305	Hydraulic oil changing	1
306	Hydraulic pipe changing	1
307	Hydraulic pipe leakage repairing	1
308	Hydraulic pump & pipe line new f	1
309	Hydraulic tank servicing	1
310	Ignition switch changing	1
311	Indicator light changing	100
312	Inner door lock (R) changing	150
313	Inner door lock(L) changing	150
314	Inner wheel bearing changing fron	200
315	Inner wheel bearing changing rear	200

317	Open end wrench set (6-32mm)	Set	1	1200
318	Pilot bearing	Each	1	420
319	Piston	set	1	2700
320	Piston	Each	1	0
321	Piston Ring	No	1	4300
322	Plastic lock	Each	1	10
323	Plastic tape	Each	1	15
324	Plastic washer	Each	1	20
325	Power steering bearing	Each	1	1050
326	Power Steering Belt	No	1	680
327	Power steering box Assy	Each	1	24000
328	Power Steering Oil	ltrs	1	350
329	Power steering overhauling	Each	1	2200
330	Power steering pipe	Each	1	420
331	Pressure Plate	Set	1	5250
332	Pressure plate	Each	1	1
333	Propeller shaft	Each	1	3800
334	Propeller shaft bolt	Each	1	30
335	PTO bracket new making	Each	1	1
336	PTO bracket removal	Each	1	1
337	PVC tape	Each	1	15
338	Radiator assy	Each	1	14200
339	Radiator cap	Each	1	320
340	Radiator coolant	each	1	280
341	radiator hose pipe lower	Each	1	320
342	Radiator hose pipe upper	Each	1	320
343	Rain guard	Set	1	1400
344	Rear Axle Corn	Set	1	1
345	Rear bush adjust	Each	1	1
346	Rear center bolt	Each	1	180
347	Rear Differential Assy	No	1	15500
348	Rear hub bearing inner	Each	1	1500

316	Inner wheel bearing oil seal chang	200
317	Inner wheel bearing oil seal chang	200
318	Intake manifold changing	350
319	Intake valve changing	1
320	Jack lever changing	1
321	Key Lock Set changing	500
322	Kilimeter cable changing	150
323	Kimpin Bearing changing	1
324	King Pin Bearing changing	500
325	King pin bush machinery cutting b	1100
326	King pin greasing changing	150
327	King pin kit changing	350
328	King pin overhauling bothside cha	1600
329	KM cable changing & refitting	180
330	Knuckle arm fitting	500
331	Link assy front changing	1
332	Link assy rear changing	1
333	Link Bush Front changing	1
334	Link Bush Rear changing	1
335	Link rod changing	1
336	Lock pati changing	5
337	Looking glass (R) changing	50
338	Looking glass (L) changing	50
339	Lower bolt joint changing	1
340	Lower clutch kit changing	200
341	Lower Radiator hose pipe changin	50
342	LT wire 5mm changing	50
343	LT wire 6mm changing	50
344	LT wire 8mm changing	50
345	Main Bearing changing	450
346	Main Bearing Oil Seal changing	250
347	Main leaf spring (R) changing	500

349	Rear hub bearing outer	Each	1	1350
350	Rear second leap	Each	1	1700
351	Rear shackle Assy	Each	1	850
352	Rear shackle pin	Each	1	550
353	rear shocker	Each	1	1680
354	Rear Spring cushion plastic plate	Each	1	120
355	Rear tail board railing	Each	1	1700
356	recovery van hiring charges	Per Km	1	1000
357	Rectifier	Each	1	1500
358	Red paper	Each	1	20
359	Relay 2 pin 12v	Each	1	120
360	Relay 3 pin 12v	Each	1	120
361	Relay 4 pin 12v	Each	1	120
362	Relay 5 pin 12v	Each	1	120
363	Release Bearing	Set	1	1200
364	Relese bearing fork	Each	1	720
365	Relese bearing lock	Each	1	60
366	Rocker Arm	Each	1	930
367	Rocker shaft	Each	1	2400
368	Rotor coil	Each	1	2700
369	Screw	Each	1	10
370	seat cover	Set	1	3500
371	Seat new making	Set	1	1500
372	Self Armaure	Set	1	1
373	Self Armerture 12v	Each	1	3800
374	Self bush 12V	Each	1	130
375	Self Carbon	Set	1	450
376	Self carbon 12V	Each	1	1000
377	Self Carnon Rocker	Set	1	1
378	Self field coil 12v	Each	1	1100
379	Self housing	Each	1	1300
380	Self Overhauling	Each	1	650

348	Main leaf spring (F) changing	500
349	Master cylinder changing	1
350	Master cylinder kit changing	1
351	Master cylinder repairing	1
352	Mobile (15w40) changing	200
353	Mobile changing	200
354	mobile filter changing	40
355	nozzle pipe changing	50
356	Number Plate change	40
357	Number Plate new making	300
358	Nut & Bolts changing	5
359	Nuts and Bolts(4 Wheel) changing	50
360	Oil filter changing	100
361	Oil Seal changing	1
362	Oil Supply Pump changing	450
363	Open end wrench set (6-32mm) ch	1
364	Opening and fitting of tyres	250
365	Opening and fitting tear spring	1
366	Outer wheel bearing changing fron	200
367	Outer wheel bearing changing rear	300
368	Outer wheel bearing oil seal chang	200
369	Outer wheel bearing oil seal chang	1
370	Overhual starter and change carbo	500
371	Pilot bearing changing	350
372	Piston changing	500
373	Piston Ring changing	450
374	Plastic lock changing	5
375	Plastic tape changing	1
376	Plastic washer changing	1
377	Power steering bearing changing	450
378	Power steering belt changing	200
379	Power steering box Assy changing	800

381	Self Plunge	No	1	1
382	Self rewinding	Each	1	800
383	Self top cover	Each	1	120
384	Shaft yoke & Teeth	No	1	3800
385	Shackle Pin Assy	set	1	680
386	Shock absorber	Each	1	1200
387	Shock Absorber Bush	set	1	80
388	Shock Absorber Front	Set	1	1450
389	Shock Absorber Rear	Set	1	1450
390	shocker bush	Each	1	80
391	Shocker Front	Each	1	1280
392	Shocker nut bolt	Each	1	80
393	Side Light	No	1	110
394	Side Light Bulb	No	1	20
395	Side Light Clamp	Set	1	50
396	Silencer box	Each	1	2600
397	Silencer pipe	Each	1	2050
398	Socket (6mm-32mm)	Set	1	4500
399	Solenoid switch 12v	Each	1	3000
400	Spark Plug	Set	1	1
401	Speedo meter Assy	Each	1	1700
402	Speedo meter cable	Each	1	500
403	Speedo meter pinion	Each	1	180
404	Spring 2nd leaf (F)	Each	1	1500
405	Spring 2nd leaf (R)	Each	1	1750
406	Spring 3rd leaf (F)	Each	1	1050
407	Spring 3rd leaf ®	Each	1	1400
408	Spring 4th leaf (F)	Each	1	1000
409	Spring 4th leaf ®	Each	1	1050
410	Spring 5th leaf (F)	Each	1	1100
411	Spring 5th leaf ®	Each	1	1050
412	Spring 6th leaf (F)	Each	1	850

380	Power Steering Oil changing	100
381	Power steering overhauling change	1700
382	Power steering pipe changing	130
383	Power steering pump change	380
384	Pressure plate changing	2200
385	Pressure water pump removal, ref	1
386	Propeller shaft bolt changing	50
387	Propeller shaft changing	350
388	Propeller shaft yoke changing	320
389	PTO bracket new making changing	1
390	PTO bracket removal changing	1
391	PTO pump servicing changing	1
392	PVC tape changing	10
393	Quarter pin changing	50
394	Radiator assy changing	600
395	Radiator cap changing	20
396	Radiator coolant changing	50
397	radiator hose pipe lower changing	50
398	Radiator hose pipe upper changing	50
399	Radiator opening and fitting	500
400	Radiator repairing	2500
401	Radiator Servicing	1500
402	Rain guard changing	50
403	Rain guard fitting	50
404	Rear Axle Corn changing	1
405	Rear bumper open fitting and weld	500
406	Rear bush adjust changing	1
407	Rear center bolt changing	600
408	Rear Differential Assy changing	1500
409	Rear hub bearing inner changing	200
410	Rear hub bearing outer changing	200
411	Rear hydraulic jack opening & new	1

413	Spring 6th leaf ®	Each	1	1000
414	Spring buffer mounting	Each	1	620
415	Spring bush	Each	1	120
416	Spring Bush Metal	No	1	380
417	Spring Clamp	No	1	320
418	Spring cycle pin	Each	1	580
419	Spring griping washer	Each	1	40
420	Spring hanger	Each	1	1300
421	Spring Main -2nd	No	1	1
422	Spring Main Rear	No	1	1
423	Spring Main-3rd	No	1	1
424	Spring Main-4th	No	1	1
425	Spring Main-5th	No	1	1
426	Spring pin	Each	1	550
427	Spring plate	Each	1	380
428	Spring shackle	Each	1	780
429	Spring washer	Each	1	10
430	Stabilizer Bar Bush - Front	No	1	1
431	Stabilizer link rod	Each	1	1
432	Starter carbon	Each	1	120
433	Starter coil	Each	1	2100
434	Starter relay 12v	Each	1	500
435	Steering adjuster bolt assy	Each	1	170
436	Steering box oil seal	Each	1	450
437	Steering box overhauling	Each	1	2200
438	Steering column (Inner)	Each	1	1600
439	Steering column (Outer)	Each	1	1600
440	Steering cross	Each	1	1650
441	Steering cross bearing	Each	1	1650
442	Steering Damper	Set	1	1
443	Steering rack end	Each	1	1
444	Steering wheel cover	No	1	650

412	Rear second leap changing	600
413	Rear shackle assy change	200
414	Rear shackle pin changing	100
415	rear shocker changing	100
416	Rear spring opening and pad chan	600
417	Rear tail board railing changing	1
418	Rectifier changing	250
419	Red paper changing	1
420	Relay 2 pin 12v changing	20
421	Relay 3 pin 12v changing	20
422	Relay 4 pin 12v changing	20
423	Relay 5 pin 12v changing	20
424	Release bearing changing	450
425	Release bearing fork changing	450
426	Release bearing lock changing	450
427	Removing & Fitting of spring assy	800
428	Resoling of tyres	1
429	Rocker Arm changing	350
430	Rocker shaft changing	350
431	Rotor coil changing	450
432	Screw changing	5
433	Seal kit changing	1
434	seat cover changing	250
435	Seat new making changing	1200
436	Self Armaure changing	250
437	Self Armerture 12v changing	250
438	Self Bush changing	250
439	Self carbon changing	150
440	Self Carnon Rocker changing	200
441	Self field coil 12v changing	200
442	Self housing changing	300
443	Self Overhauling changing	1

445	Suspension arm bush lower sma	Each	1	1
446	Suspension arm bush upper sma	Each	1	1
447	Sycronizer circlip lock	Each	1	40
448	Sycronizer hub	Each	1	2200
449	Sycronizer lock	Each	1	120
450	Sycronizer ring	Each	1	580
451	Sycronizer sheeve	Each	1	550
452	Sycronizer sheeve inddle bearing	Each	1	450
453	Tail Inner Bearing	Set	1	2100
454	Tail Oil Seal	Set	1	350
455	Tail Outer Bearing	Set	1	1850
456	Tail pinion bearing inner	Each	1	1500
457	Tail pinion bearing outer	Each	1	1400
458	Tail pinion chechnut washer	Each	1	70
459	Tail pinion checknut	Each	1	170
460	Tail Pinion oil seal	piece	1	1100
461	Tappid cover packing	Each	1	220
462	Tempering spring	Each	1	100
463	Threading tape	Each	1	30
464	Thrust washer	Each	1	220
465	Tie clip	Each	1	20
466	Tie rod end	Each	1	1200
467	Tie Rod End-Big	Set	1	550
468	Tie Rod End-Small	Set	1	550
469	Tie rod kit	Each	1	580
470	Timing belt	Each	1	1
471	Timing cover front	Each	1	220
472	Timing cover gear	Each	1	1700
473	Timing cover oil seal	Each	1	1100
474	Timing pinion chain and adjuster	set	1	1
475	Top shaft bearing	Each	1	550
476	Transmission half over hauling	Each	1	2000

444	Self Plunge changing	150
445	Self rewinding changing	500
446	Self starter overhauling changing	480
447	Self top cover changing	50
448	Shaft yoke & Teeth changing	800
449	Shakle Pin Assy changing	50
450	Shock Absorber Bush changing	50
451	Shock absorber changing	50
452	Shock Absover Front changing	50
453	Shock Absover Rear changing	50
454	shocker bush changing	50
455	Shocker Front changing	50
456	Shocker nut bolt changing	20
457	Side door glass changing	400
458	Side Light Bulb changing	50
459	Side Light changing	50
460	Side Light Clamp changing	1
461	Silencer box changing	200
462	Silencer pipe changing	200
463	Socket (6mm-32mm) changing	1
464	Solonoid switch 12v changing	430
465	Spark Plug changing	1
466	Speedo meter Assy changing	350
467	Speedo meter cable changing	250
468	Speedo meter pinion changing	300
469	Spring 2nd leaf (F) changing	200
470	Spring 2nd leaf (R) changing	300
471	Spring 3rd leaf (F) changing	200
472	Spring 3rd leaf ® changing	300
473	Spring 4th leaf (F) changing	200
474	Spring 4th leaf ® changing	300
475	Spring 5th leaf (F) changing	200

477	Transmission over hauling	Each	1	3500
478	U bolt front	Each	1	550
479	U bolt nut	Each	1	40
480	U bolt plate	Each	1	1
481	U bolt rear	Each	1	600
482	U bolt rear	Each	1	500
483	U-Bolt	No	1	400
484	UJ cross	Each	1	700
485	Upper bolt joint	Each	1	1
486	vacuum nozzle pipe	per piece	1	1
487	Vacuum pipe	Each	1	480
488	Valve guide	Each	1	920
489	Valve key	Each	1	20
490	valve oil seal	each	1	220
491	Valve seal	Each	1	120
492	Valve spring	Each	1	820
493	Valve washer	Each	1	20
494	washer hat	Each	1	1
495	Water pump	No	1	3200
496	water pump Assy	Each	1	1
497	Wheel alignment	Each	1	300
498	Wheel Bearing	Set	1	200
499	Wheel bearing inner front	Each	1	1300
500	Wheel bearing inner rear	Each	1	1600
501	Wheel bearing oil seal inner front	Each	1	170
502	Wheel bearing oil seal inner rear	Each	1	170
503	Wheel bearing outer front	Each	1	1100
504	Wheel bearing outer rear	Each	1	1300
505	Wheel bolt	Each	1	380
506	Wheel cylinder	Each	1	1400
507	Wheel Cylinder Assy	Set	1	1
508	Wheel cylinder bucket	Each	1	210

476	Spring 5th leaf ® changing	300
477	Spring 6th leaf (F) changing	200
478	Spring 6th leaf ® changing	300
479	Spring buffer mounting changing	250
480	Spring bush changing	300
481	Spring Bush Metal Labour Charge	300
482	Spring Changing	650
483	Spring clam changing	150
484	spring clam welding	100
485	Spring cycle pin Labour Charge	300
486	Spring Greasing Labour Charge	200
487	Spring griping washer Labour Charge	10
488	Spring hanger changing	250
489	Spring Main -2nd. Labour Charge	1
490	Spring Main Rear Labour Charge	1
491	Spring Main-3rd Labour Charge	1
492	Spring Main-4th Labour Charge	1
493	Spring Main-5th Labour Charge	1
494	Spring opening and fitting charges	800
495	Spring pad changing	1
496	Spring pin bush changing	200
497	Spring pin Labour Charge	100
498	Spring plate Labour Charge	250
499	Spring shackle Labour Charge	200
500	Spring Shackle pin changing	100
501	Spring washer Labour Charge	25
502	Stabilizer Bar Bush - Front Labour Charge	1
503	Stabilizer bush	1
	changing	
504	Stabilizer link assy changing	1
505	Stabilizer link rod Labour Charge	1
506	Starter coil Labour Charge	200

509	wheel Drum	Each	1	6400
510	Wheel nut	Each	1	320
511	Wheel wrench	Each	1	1400
512	Wind shield replacing	Each	1	1000
513	Window glass	Each	1	1800
514	Wiper Arm	Each	1	420
515	Wiper Blade	Set	1	500
516	Wiper blade	Each	1	300
517	Wiper blade Assy	Each	1	230
518	Wiper motor	Each	1	1000
519	Wiper motor Assy	Each	1	2800
520	Wiring clip	Each	1	5
521	Zip cock	Each	1	5

507	Starter relay 12v Labour Charge	50
508	Steering adjuster bolt assy Labour	20
509	Steering box kit changing	1200
510	Steering box oil seal changing	1200
511	Steering box oil seal Labour Charge	1
512	Steering box overhauling Labour Charge	1500
513	Steering column (Inner) Labour Charge	1
514	Steering column (Outer) Labour Charge	1
515	Steering Column changing inner	350
516	Steering Column changing outer	350
517	Steering cross bearing changing	320
518	Steering cross changing	300
519	Steering Damper Labour Charge	1
520	Steering rack changing	1
521	Steering Rack end assy (Link)changing	1
522	Steering rack end changing	1
523	Steering wheel cover Labour Charge	25
524	Steering wheel opening & refitting	250
525	Suspension arm bush lower small	1
526	Suspension arm bush upper small	1
527	suspension arm changing	1
528	Synchronizer circlip lock changing	100
529	Synchronizer hub changing	250
530	Synchronizer lock changing	100
531	Synchronizer ring changing	250
532	Synchronizer sheeve changing	250
533	Synchronizer sheeve inddle bearing changing	200
534	Tail Inner Bearing changing	1
535	Tail Oil Seal changing	1
536	Tail Outer Bearing changing	1
537	Tail pinion bearing inner changing	500
538	Tail pinion bearing outer changing	350

539	Tail pinion chechnut washer chang	150
540	Tail pinion checknut changing	300
541	Tail pinion oil seal changing	300
542	Tail Pinion oil seal changing	300
543	Tailgate Repairing	3500
544	Tappet adjustment	250
545	Tappid cover packing changing	200
546	Tempering spring change	100
547	Threading tape changing	1
548	Thrust washer changing	300
549	Tie clip changing	100
550	Tie rod end changing	200
551	Tie Rod End-Big changing	200
552	Tie Rod End-Small changing	200
553	Tie rod kit changing	200
554	Timing belt changing	1
555	Timing cover front changing	450
556	Timing cover gear changing	450
557	Timing cover oil seal changing	350
558	Timing pinion chain and adjuster k	1
559	Top shaft bearing changing	450
560	Transmission half over hauling ch	1500
561	Transmission over hauling changin	2300
562	Tyre changing	200
563	Tyre opening and drum change	200
564	U bolt changing	230
565	U bolt front changing	200
566	U bolt nut changing	100
567	U bolt plate changing	200
568	U bolt rear changing	200
569	UJ cross changing	350
570	Upper bolt joint changing	1

571	Upper clutch kit changing	280
572	Upper Radiator hose pipe changin	180
573	Vaccum pipe changing	1
574	vacuum nozzle pipe changing	1
575	Vacuum pipe changing	1
576	Vacuum pipe socket changing	1
577	Valve guide changing	350
578	Valve key changing	100
579	Valve O ring changing	200
580	valve oil seal changing	200
581	Valve seal changing	200
582	Valve spring changing	200
583	Valve washer changing	50
584	Vane pump changing	500
585	washer hat changing	1
586	Water filter changing	100
587	Water level indicator pipe changing	180
588	water pump Assy changing	850
589	Water pump assy servicing	250
590	Water pump changing	1
591	Water pump opening and fitting	850
592	Water separator servicing	100
593	Welding Labour Charge	150
594	Wheel Alignment Labour Charge	350
595	Wheel Bearing changing	200
596	Wheel bearing inner front changin	200
597	Wheel bearing inner rear changing	200
598	Wheel bearing oil seal inner front c	200
599	Wheel bearing oil seal inner rear cl	200
600	Wheel bearing outer front changin	200
601	Wheel bearing outer rear changing	200
602	Wheel bolt change	50

603	Wheel Cylinder Assy changing	350
604	Wheel cylinder bucket changing	350
605	Wheel cylinder changing	200
606	wheel Drum changing	250
607	Wheel nut changing	50
608	Wheel wrench changing	1
609	Whole body greasing Labour Cha	450
610	Wind shelid glass fitting Labour C	1500
611	Wind shield replacing Labour Cha	1
612	Window glass changing	500
613	Wiper alignment Labour Charge	1
614	Wiper arm changing	50
615	Wiper blade Assy changing	25
616	Wiper blade changing	25
617	Wiper motor Assy changing	300
618	Wiper motor changing	180
619	Wiper motor repairing	1100
620	Wiring clip changing	5