

SPARE PARTS			
	Description of Item	Unit	Eastern Automobile Workshop
1	A/C filter	per piece	1
2	AC Belt	Pcs	1
3	Accelerator cable	Each	50
4	Accelerator cable assy	Each	280
5	Air filter	Each	250
6	Air filter hose pipe	Each	380
7	Air filter inside	Each	50
8	Air filter outside	Each	50
9	Air unloader opening & new service kit fitting	Each	1
10	Alternator Assy	Each	6200
11	Alternator carbon bush	Each	230
12	Alternator cut out	Each	720
13	Alternator Fan belt pully bearing	Each	250
14	Alternator magnet pully	Each	950
15	Alternator overhauling	Each	440
16	Alternator rectifile	Each	750
17	Anabond	No	50
18	Anabond GUM (Big)	Each	190
19	Anabond GUM (Small)	Each	60
20	Arm Bush Lower	Set	1
21	Arm Bush Upper	Set	1
22	Arm bushing	Each	1

LABOUR CHARGE		
	Description of Item	Eastern Automobile Workshop
1	A/C filter changing	80
2	AC Belt changing	150
3	AC gas refilling labour charge	3000
4	Accelerator cable assy changing	1
5	Accelerator cable changing	220
6	Air cleaner filter changing	100
7	Air compressor leakage repairing	1
8	Air Element changing	90
9	Air filter changing	90
10	Air filter hose pipe changing	90
11	Air filter inside changing	1
12	Air filter outside changing	1
13	Air filter servicing	100
14	Air tank opening & refitting	1
15	Air unloader opening & new service kit fitting changing	1
16	Alternator Assy changing	450
17	Alternator carbon bush changing	150
18	Alternator cut out changing	120
19	Alternator Fan belt pully bearing changing	350
20	Alternator magnet pully changing	200
21	Alternator overhauling changing	800
22	Alternator rectifile changing	300

23	Arm bushing lower big	Each	1
24	Arm bushing lower small	Each	1
25	Arm Lower	set	700
26	Arm Upper	Set	1
27	Axel lock	Each	30
28	Axel shaft	Each	1700
29	Axel shaft oil seal	Each	250
30	Axel spacer	Each	80
31	Axle	Set	1
32	Axle Oil Seal Outer	No	2
33	Axle Tube Oil Seal	No	2
34	Back bumper	Each	1700
35	Back gear bearing	Each	420
36	Back glass	Each	1750
37	Back Light	No	2
38	Back light Assy (Left)	Each	230
39	Back light Assy (Right)	Each	230
40	Back Light Bulb	No	20
41	ball joint	per piece	1
42	Ball Joint Lower	Set	1
43	Ball Joint Upper	Set	1
44	Battery	No	2
45	Battery (Amaron)	Each	4300
46	Battery (Bosch)	Each	4100
47	Battery box new making	Each	650
48	Battery cable -ive	Each	230
49	Battery cable +ive	Each	230
50	Battery terminal end	Each	40
51	Bear Box	Set	1
52	Bearing 6202	Each	250

23	Anabond changing	20
24	Anabond GUM (Big) changing	30
25	Anabond GUM (Small) changing	30
26	Arm Bush Lower changing	600
27	Arm Bush Upper changing	650
28	Arm bushing changing	550
29	Arm bushing lower big changing	1
30	Arm bushing lower small changing	1
31	Arm Lower changing	1
32	Arm Upper changing	1
33	Axel lock changing	250
34	Axel shaft changing	650
35	Axel shaft oil seal changing	1
36	Axel spacer changing	650
37	Axle changing	600
38	Axle oil seal changing	450
39	Axle Oil Seal Outer Labour Charge	2
40	Axle Tube Oil Seal Labour Charge	2
41	Back bumper Labour Charge	800
42	Back gear bearing Labour Charge	650
43	Back glass Labour Charge	500
44	Back light Assy (Left) Labour Charge	150
45	Back light Assy (Right) Labour Charge	150
46	Back Light Bulb Labour Charge	150
47	Back Light Labour Charge	150
48	ball joint Labour Charge	1
49	Ball Joint Lower Labour Charge	1
50	Ball Joint Upper Labour Charge	1
51	Battery box new making Labour Charge	380
52	Battery cable -ive Labour Charge	50

53	Bearing 6302	Each	250
54	Belt power string A/B	Each	1
55	Bendix pinion	Each	900
56	Benjo washer	Each	10
57	Benzu Bolt	Each	120
58	Black tape	per piece	20
59	Brake Booster	No	1
60	Brake Booster Assy	Each	3800
61	Brake Booster kit	Each	230
62	Brake bucket	Each	1
63	Brake Bucket Kit	Set	100
64	Brake calliper lock	Each	1
65	Brake cam	Each	1
66	Brake cam Arm	Each	1
67	Brake cam Arm lock	Each	1
68	Brake cam bush	Each	1
69	brake disc	Each	1800
70	Brake flexible pipe front	Each	150
71	Brake fluid	Each	1
72	Brake fluid dot3	Each	80
73	Brake Hub Front	Set	1200
74	Brake Hub Rear	Set	1
75	brake light bulb	per piece	20
76	Brake light switch	Each	150
77	Brake lining	Each	1
78	Brake lining back and front	Each	1
79	Brake Oil	Lts	180
80	Brake Pad	Set	900
81	Brake pad	Each	225

53	Battery cable +ive Labour Charge	50
54	Battery change Labour Charge	50
55	Battery terminal end Labour Charge	90
56	Bear Box Labour Charge	1
57	Bearing 6202 Labour Charge	100
58	Bearing 6302 Labour Charge	100
59	Belt power string A/B Labour Charge	1
60	Bendix pinion Labour Charge	450
61	Bendix pinion repairing & replacing	650
62	Benjo washer Labour Charge	10
63	Benzu Bolt Labour Charge	50
64	Black tape Labour Charge	20
65	Brake adjuster opening & refitting	150
66	Brake Booster Assy Labour Charge	450
67	Brake Booster kit Labour Charge	350
68	Brake Booster Labour Charge	450
69	Brake Bucket Kit Labour Charge	150
70	Brake bucket Labour Charge	150
71	Brake cable changing	120
72	Brake calliper lock Labour Charge	200
73	Brake cam Arm Labour Charge	1
74	Brake cam Arm lock Labour Charge	1
75	Brake cam bush Labour Charge	1
76	Brake cam bush opening & fitting	1
77	Brake cam Labour Charge	1
78	Brake diafam opening & new service kit changing	1
79	brake disc Labour Charge	400
80	Brake dise cutting	600
81	Brake drum cutting	600

82	Brake pipe (Rear)	Each	150
83	brake pipe bleasting	each	50
84	Brake servo	Each	1
85	Brake Shoe	Set	1200
86	Brake shoe	Each	350
87	Brake shoe	Each	1
88	Brake shoe lock with spring	Each	80
89	Brass blezzing	Each	50
90	Bulb 1016	Each	20
91	Bulb 1141	Each	20
92	Bulb 67	Each	10
93	Bumper indicator light assy	Each	120
94	bush stabilzer	per piece	1
95	Bypass filter	Each	1
96	C.V joint	per piece	1
97	Cam shaft	Each	1100
98	Cam Shaft Bearing	Set	200
99	Cam shaft bush	Each	1
100	Cam shaft gear	Each	200
101	Carbon bush 12 v	Each	120
102	Carbon holder	Each	150
103	Carbon rocker 12v	Each	650
104	Carbon soldering	Each	30
105	Center Bolt	No	30
106	Center lock	Each	2400
107	Center lock remote key	Each	1000
108	Check nut front	Each	50
109	Check nut lock	No	25
110	Clamp for pipe	Each	30
111	Clutch cylinder (lower)	Each	1

82	Brake dual valve kit changing	1
83	Brake flexible pipe changing	180
84	Brake flexible pipe front Labour Charge	50
85	Brake fluid dot3 Labour Charge	50
86	Brake Hub Front Labour Charge	350
87	Brake Hub Rear Labour Charge	350
88	brake light bulb Labour Charge	150
89	Brake light switch Labour Charge	200
90	Brake lining back and front Labour Charge	1
91	Brake lining Labour Charge	1
92	Brake Oil Labour Charge	50
93	Brake Pad Labour Charge	200
94	Brake pipe (Rear) Labour Charge	230
95	brake pipe bleasting Labour Charge	230
96	Brake pipe changing	200
97	Brake pipe leakage repairing	230
98	Brake servicing 4 wheel changing	150
99	Brake servo Labour Charge	1
100	Brake servo repairing & servicing	1
101	Brake Shoe Labour Charge	450
102	Brake shoe lock with spring Labour Charge	250
103	Brass blezzing Labour Charge	230
104	Bulb 1016 Labour Charge	50
105	Bulb 1141 Labour Charge	50
106	Bulb 67 Labour Charge	50
107	Bumper indicator light assy Labour Charge	100
108	bush stabilzer Labour Charge	200
109	Bypass filter Labour Charge	1
110	C.V joint Labour Charge	1
111	Cam Shaft Bearing Labour Charge	1200

112	Clutch cylinder (Upper)	Each	1
113	Clutch cylinder Assy	Each	1
114	Clutch cylinder kit	Each	1
115	Clutch Cylinder Lower	Set	1
116	Clutch Cylinder Upper	Set	1
117	Clutch kit	Each	1
118	Clutch kit box	Each	1
119	Clutch Plate	Set	1850
120	Clutch plate (Fan Type)	Each	1
121	Clutch plate (Round Type)	Each	1
122	Clutch relese bearing	Each	430
123	Clutch rod	Each	1
124	Connecting Bearing	Set	700
125	Connecting bearing	Each	100
126	Connecting bush	Each	230
127	Connecting rod	Each	300
128	Connection Rod	Set	860
129	Controlling cylinder Assy	Each	1
130	Controlling overhauling	Each	1
131	Controlling pipe	Each	1
132	Controlling switch Assy	Each	1
133	Coolant	per litres	280
134	Crank Shaft	set	2500
135	Crank shaft	Each	1
136	Crank shaft oil seal	Each	90
137	Cross	Each	1
138	Cross Bearing	set	400
139	Cross bearing	Each	1
140	Cross holder	Each	750
141	Cross propeller shaft	Each	450

112	Cam shaft bush Labour Charge	1
113	Cam shaft gear Labour Charge	350
114	Cam shaft Labour Charge	250
115	Carbon bush 12 v Labour Charge	50
116	Carbon holder Labour Charge	100
117	Carbon rocker 12v Labour Charge	200
118	Carbon soldering Labour Charge	190
119	Center bearing changing	10
120	Center Bolt Labour Charge	650
121	Center lock Labour Charge	600
122	Center lock remote key Labour Charge	500
123	Centre bolt changing	650
124	Chain socket	1
	changing	
125	Check nut front Labour Charge	200
126	Clamp for pipe Labour Charge	60
127	Clutch cable changing	150
128	Clutch cylinder (lower) Labour Charge	350
129	Clutch cylinder (Upper) Labour Charge	350
130	Clutch cylinder Assy Labour Charge	1
131	Clutch cylinder kit Labour Charge	300
132	Clutch kit box Labour Charge	1
133	Clutch kit Labour Charge	1
134	Clutch plate (Fan Type) Labour Charge	1
135	Clutch plate (Round Type) Labour Charge	1
136	Clutch Plate Labour Charge	3500
137	Clutch relese bearing Labour Charge	1450
138	Clutch rod Labour Charge	200
139	Coil Spring changing	620
140	Complete electricial line checking	1800

142	Crown & Tail Assy	Set	2300
143	Crown Overhauling	Each	800
144	Crown tail assy	Each	1
145	CV Joint Assembly	set	1
146	Cycle pin	Each	80
147	Dashboard polish	each	245
148	Dial wrench (6-32mm)	Set	1200
149	Diesel filter	Each	1
150	distilled water	per litre	25
151	Door agrnish inner	Each	150
152	Door agrnish outer	Each	150
153	Door lock new making	Each	200
154	Drag link kit	Each	1
155	Drain plug	Each	100
156	Dual brake valve Assy	Each	1
157	Dust Guard	Pcs	200
158	Dust guard back and front	Set	300
159	Dynamo bearing	Each	220
160	Dynamo rocker	Each	230
161	E/ paper	Each	20
162	EGR pipe	Each	1
163	Electric horn 2v	Each	430
164	Electric welding	Each	50
165	Element Assy, Fuel	Each	1
166	Element kit spin on	Each	1
167	Element sub assy, Air	Each	1
168	EML life max oil	Each	1
169	Engine Bolt	each	50
170	Engine head assy	each	3000
171	Engine head gasket	Each	300

141	Connecting Bearing changing	250
142	Connecting bush changing	300
143	Connecting rod changing	300
144	Controlling cylinder Assy changing	1
145	Controlling overhauling changing	1
146	Controlling pipe changing	1
147	Controlling switch Assy changing	1
148	Coolant Change	100
149	Crank shaft changing	600
150	Crank shaft oil seal changing	450
151	Cross Bearing changing	400
152	Cross bearing greasing changing	420
153	Cross change	1
154	Cross Coupling cutting by lath machine changing	900
155	Cross holder changing	350
156	Cross holder cutting and welding changing	920
157	Cross propeller shaft changing	350
158	Crown & Tail Assy changing	1
159	Crown Overhauling changing	2400
160	Crown tail assy changing	2200
161	CV Joint Assembly changing	1
162	CV joint Boot changing	1
163	CV Joint changing	1
164	CV joint oil seal changing	1
165	Cycle pin changing	320
166	Dashboard polish changing	50
167	denting and painting changing	4500
168	Dial wrench (6-32mm) changing	1
169	Diesel filter	200
	Changing	

172	Engine mounting	Each	250
173	Engine oil 15w40	ltr	330
174	Engine Oil Filter	No	95
175	Engine oil seal	each	120
176	Engine pacing	Each	350
177	Engine ring	Each	700
178	Engine Twining	Each	150
179	Engine valve intake	each	150
180	Exhaust manifold	Each	900
181	Fan belt	Each	230
182	Feed Pump	Set	1
183	Feed pump Assy	Each	1
184	Fender liner front left	Each	1
185	Fender liner front right	Each	1
186	Fender liner rear left	Each	1
187	Fender liner rear right	Each	1
188	Flate washer	Each	10
189	Fly wheel	Each	1200
190	Fly wheel ring	Each	450
191	Fog Light	Set	800
192	foot mat	Set	1900
193	Front bumper	Each	1850
194	Front door inner clamel rubber	Each	1
195	Front hub bearing inner	Each	1200
196	Front hub bearing outer	Each	1
197	Front Windshield glass	Each	2800
198	fuel and water separator	per piece	1
199	Fuel filter	Each	380
200	Fuel injection overflow pipe	Each	1
201	Fuel injector nozzel	Each	1

170	distilled water changing	20
171	Door agrnish inner changing	50
172	Door agrnish outer changing	50
173	Door lock new making changing	420
174	Drag link kit changing	350
175	Drain plug changing	150
176	Driver shaft oil seal changing	350
177	Dual brake valve Assy changing	1
178	Dust guard back and front changing	100
179	Dust Guard changing	100
180	Dynamo bearing changing	210
181	Dynamo rocker changing	250
182	E/ paper changing	1
183	ECM scanned changing	1500
184	EGR pipe change	1
185	Electric horn 2v changing	200
186	Electric welding changing	300
187	Electrical line checking and rectified changing	850
188	Element Assy, Fuel changing	1
189	Element kit spin on changing	1
190	Element sub assy, Air changing	1
191	EML life max oil changing	1
192	Engine Bolt changing	50
193	Engine head assy changing	2500
194	Engine head gasket changing	2400
195	Engine mount changing	420
196	Engine oil changing	200
197	Engine Oil Changing with oil filter	250
198	Engine oil seal changing	600
199	Engine over hauling changing	12500

202	Fuel injector pipe	Each	1
203	fuel pipe	per piece	100
204	Fuel pump Assy	Each	3500
205	Fuel pump washer	Each	1
206	Fuel strainer A/B	Each	1
207	Fuel Supply Pump	Set	1
208	Full Engine Overhauling	Each	3400
209	Fuse	No	15
210	Fuse 10 Amp	Each	15
211	Fuse 15 Amp	Each	15
212	Fuse 20 Amp	Each	15
213	Fuse 25 Amp	Each	15
214	Fuse 30 Amp	Each	15
215	Fuse 5 Amp	Each	15
216	Gas kit	Each	1
217	Gear box assembly	Each	12000
218	Gear box mounting	Each	330
219	Gear box oil seal front	Each	80
220	Gear box oil seal rear	Each	150
221	Gear box packing	Each	20
222	Gear counter	Each	1300
223	Gear oil	per litre	360
224	Gear pinion	Each	900
225	Gear pinion 2nd	Each	1500
226	Gear pinion shaft	Each	180
227	Glow Plug	Set	1
228	Glow plug	Each	1
229	Grease	per kg	540
230	Grease gun	Each	850
231	Half Engine Overhauling	Each	1400

200	Engine pacing changing	200
201	Engine ring changing	250
202	Engine Twining changing	600
203	Engine valve changing and setting changing	1500
204	Engine valve intake changing	200
205	Engine water pump changing	600
206	Exhaust manifold changing	150
207	Fan belt bearing changing	420
208	Fan belt changing	250
209	Feed pump assy changing	200
210	Feed Pump changing	1
211	Feed pump repairing changing	100
212	Fender liner front left changing	1
213	Fender liner front right changing	1
214	Fender liner rear left changing	1
215	Fender liner rear right changing	1
216	Flate washer changing	30
217	Fly wheel changing	1450
218	Fly wheel poolishing changing	1100
219	Fly wheel ring changing	1400
220	Fog Light changing	150
221	foot mat changing	100
222	Front bumper opening & fitting	800
223	Front door inner clamel rubber changing	1
224	Front hub bearing inner changing	550
225	Front hub bearing outer changing	550
226	Front Windshield glass changing	3000
227	fuel and water separator changing	80
228	Fuel filter changing	180
229	Fuel injection overflow pipe changing	200

232	Hand Brake Cable	Set	850
233	Hand brake cable	Each	1
234	Head Gasket	No	250
235	Head light assembly	set	1
236	Head light Assy (Left)	Each	1700
237	Head light Assy (Right)	Each	1700
238	Head Light Bulb	Set	1
239	Head light bulb	Each	120
240	Head light bulb (Halogen)	Each	150
241	Head light cover	Each	150
242	Head light Set	Set	1
243	Helper leaf Spring	Each	700
244	Horn and switch	set	200
245	Horn high	Each	430
246	Horn low	Each	430
247	Horn relay	Each	180
248	horn switch	per piece	90
249	Hose pipe clamp	Each	30
250	Hour meter	Each	1
251	Hub Bearing Front Inner	Set	450
252	Hub Bearing Front Outer	Set	1
253	Hub Check Nut	Set	80
254	Hub greasing (Front)	Each	1
255	Hub greasing (Rear)	Each	1
256	Hub Oil Seal	Set	1
257	Hub Splender	Set	250
258	Hubs bearing	per piece	1250
259	Hubs checknut	Each	50
260	Hubs checknut lock	Each	30
261	Hubs oil	Each	1

230	Fuel injection pump opening & fitting	1000
231	Fuel injector nozzel changing	150
232	Fuel injector pipe changing	200
233	Fuel over flow pipe changing	200
234	fuel pipe changing	100
235	Fuel pump Assy changing	2500
236	Fuel pump washer changing	50
237	Fuel strainer A/B changing	1
238	Fuel Supply Pump changing	300
239	Fuel tank opening & fitting	800
240	Fuel tank servicing changing	900
241	Full Engine Overhauling	8300
242	Fuse 10 Amp changing	10
243	Fuse 15 Amp changing	10
244	Fuse 20 Amp changing	10
245	Fuse 25 Amp changing	10
246	Fuse 30 Amp changing	10
247	Fuse 5 Amp changing	10
248	Fuse changing	20
249	Gas kit changing	1
250	Gear box assembly change	4000
251	Gear Box mounting & dismounting changing	350
252	Gear box mounting changing	350
253	Gear box oil seal front changing	550
254	Gear box oile seal rear changing	350
255	Gear Box Opening and fitting charges	9500
256	Gear box packing changing	250
257	Gear counter changing	450
258	Gear oil changing	320
259	Gear pinion 2nd changing	350

262	Hubs oil seal front	Each	1
263	Hubs oil seal rear	Each	1
264	Hydraulic filter	Each	1
265	Hydraulic jack (Heavy Duty)	Each	1
266	Hydraulic jack (Light Duty)	Each	1500
267	Hydraulic jack oil seal (Set of 12 pcs)	Each	100
268	Hydraulic oil	per litre	250
269	Hydraulic pipe	Each	1
270	Hydraulic pump & pipe line new fitting	Each	1
271	Hydraulic tank servicing	Each	1
272	Ignition switch	Each	1850
273	Indicator light	Each	120
274	Inner door lock (R)	Each	120
275	Inner door lock(L)	Each	120
276	Intake manifold	Each	90
277	Intake valve	Set	400
278	Jack lever	Each	90
279	Key Lock Set	Set	1
280	Kilimeter cable	Each	380
281	Kimpin Bearing	Set	1
282	King Pin Bearing	Set	1
283	King pin bush machinery cutting bothr side	Each	1
284	King pin kit	Set	1
285	King pin overhauling bothside	Each	1
286	Link assy front	Each	1
287	Link assy rear	Each	1
288	Link Bush Front	Pcs	1
289	Link Bush Rear	Pcs	1
290	Link Rod	Pcs	1

260	Gear pinion changing	300
261	Gear pinion shaft changing	350
262	Gear shaft changing	250
263	Gear shaft polishing changing	120
264	Glow plug changing	200
265	Grease changing	50
266	Grease gun changing	1
267	Half Engine Overhauling changing	3400
268	Hand Brake Cable changing	450
269	Head Gasket changing	3500
270	Head light assembly changing	250
271	Head light Assy (Left) changing	300
272	Head light Assy (Right) changing	300
273	Head Light Bulb changing	180
274	Head light bulb fitting changing	180
275	Head light cover changing	1
276	Head light Set changing	1
277	Helper leaf Spring changing	1
278	horn and switch fitting changing	220
279	Horn fitting	150
280	Horn high changing	150
281	Horn low changing	150
282	Horn relay fitting	80
283	horn switch changing	100
284	Hose pipe clamp changing	80
285	Hour meter changing	50
286	Hub Bearing Front Inner changing	200
287	Hub Bearing Front Outer changing	200
288	Hub Check Nut changing	200

291	Link rod Front	Each	1
292	Lock pati	Each	10
293	Looking glass (R)	Each	180
294	Looking glass (L)	Each	180
295	Lower bolt joine	Each	1
296	LT wire 5mm	Each	20
297	LT wire 6mm	Each	20
298	LT wire 8mm	Each	20
299	Main Bearing	Set	850
300	Main bearing	Each	150
301	Main Bearing Oil Seal	Set	350
302	Main leaf spring (R)	Each	1200
303	Main leaf spring (F)	Each	1
304	Master cylinder	Each	1700
305	Master Cylinder Kit	Set	550
306	Master cylinder kit	Each	1
307	Mobile	per litre	370
308	Mobile (15w40)	per litre	1
309	Mobile Filter	No	90
310	nozzle pipe	per piece	1
311	Number Plate	each	350
312	Nut & Bolts	Each	10
313	Nuts and Bolts(4 Wheel)	Set	30
314	Oil filter	Ltr	90
315	Oil seal	Each	1
316	Oil Supply Pump	No	1000
317	Open end wrench set (6-32mm)	Set	1250
318	Pilot bearing	Each	330
319	Piston	set	1400

289	Hub greasing (Front) changing	550
290	Hub greasing (Rear) changing	550
291	Hub Oil Seal changing	250
292	Hub Splender changing	350
293	hubs bearing changing	120
294	Hubs checknut changing	150
295	Hubs checknut lock changing	150
296	Hubs oil changing	1
297	Hubs oil seal front changing	250
298	Hubs oil seal rear changing	1
299	Hydraulic control valve opening servicing & refitting	1
300	Hydraulic filter changing	1
301	Hydraulic hose pipe changing	1
302	Hydraulic jack (Heavy Duty) changing	1
303	Hydraulic jack (Light Duty) changing	1
304	Hydraulic jack oil seal (Set of 12 pcs) changing	1
305	Hydraulic oil changing	1
306	Hydraulic pipe changing	1
307	Hydraulic pipe leakage repairing	1
308	Hydraulic pump & pipe line new fitting	1
309	Hydraulic tank servicing	1
310	Ignition switch changing	620
311	Indicator light changing	120
312	Inner door lock (R) changing	250
313	Inner door lock(L) changing	250
314	Inner wheel bearing changing front	120
315	Inner wheel bearing changing rear	120
316	Inner wheel bearing oil seal changing front	120
317	Inner wheel bearing oil seal changing rear	120

320	Piston	Each	350
321	Piston Ring	No	700
322	Plastic lock	Each	10
323	Plastic tape	Each	20
324	Plastic washer	Each	1
325	Power steering bearing	Each	1
326	Power Steering Belt	No	1
327	Power steering box Assy	Each	1
328	Power Steering Oil	ltrs	1
329	Power steering overhauling	Each	1
330	Power steering pipe	Each	1
331	Pressure Plate	Set	1750
332	Pressure plate	Each	1
333	Propeller shaft	Each	2400
334	Propeller shaft bolt	Each	20
335	PTO bracket new making	Each	1
336	PTO bracket removal	Each	1
337	PVC tape	Each	15
338	Radiator assy	Each	3100
339	Radiator cap	Each	120
340	Radiator coolant	each	280
341	radiator hose pipe lower	Each	230
342	Radiator hose pipe upper	Each	230
343	Rain guard	Set	1100
344	Rear Axle Corn	Set	380
345	Rear bush adjust	Each	20
346	Rear center bolt	Each	40
347	Rear Differential Assy	No	7000
348	Rear hub bearing inner	Each	550

318	Intake manifold changing	200
319	Intake valve changing	200
320	Jack lever changing	1
321	Key Lock Set changing	350
322	Kilimeter cable changing	250
323	Kimpin Bearing changing	1
324	King Pin Bearing changing	650
325	King pin bush machinery cutting both side changing	1
326	King pin greasing changing	250
327	King pin kit changing	1
328	King pin overhauling bothside changing	620
329	KM cable changing & refitting	220
330	Knuckle arm fitting	1
331	Link assy front changing	150
332	Link assy rear changing	200
333	Link Bush Front changing	150
334	Link Bush Rear changing	150
335	Link rod changing	1
336	Lock pati changing	20
337	Looking glass (R) changing	50
338	Looking glass (L) changing	50
339	Lower bolt joint changing	1
340	Lower clutch kit changing	320
341	Lower Radiator hose pipe changing	220
342	LT wire 5mm changing	50
343	LT wire 6mm changing	50
344	LT wire 8mm changing	50
345	Main Bearing changing	350
346	Main Bearing Oil Seal changing	300

349	Rear hub bearing outer	Each	1
350	Rear second leap	Each	600
351	Rear shackle Assy	Each	280
352	Rear shackle pin	Each	230
353	rear shocker	Each	80
354	Rear Spring cushion plastic plate	Each	800
355	Rear tail board railing	Each	80
356	recovery van hiring charges	Per Km	1
357	Rectifier	Each	1000
358	Red paper	Each	20
359	Relay 2 pin 12v	Each	130
360	Relay 3 pin 12v	Each	130
361	Relay 4 pin 12v	Each	180
362	Relay 5 pin 12v	Each	180
363	Release Bearing	Set	430
364	Relese bearing fork	Each	200
365	Relese bearing lock	Each	30
366	Rocker Arm	Each	230
367	Rocker shaft	Each	320
368	Rotor coil	Each	700
369	Screw	Each	10
370	seat cover	Set	3200
371	Seat new making	Set	2300
372	Self Armaure	Set	1
373	Self Armerture 12v	Each	1300
374	Self bush 12V	Each	40
375	Self Carbon	Set	120
376	Self carbon 12V	Each	1
377	Self Carnon Rocker	Set	600
378	Self field coil 12v	Each	420

347	Main leaf spring (R) changing	750
348	Main leaf spring (F) changing	1
349	Master cylinder changing	420
350	Master cylinder kit changing	420
351	Master cylinder repairing	420
352	Mobile (15w40) changing	50
353	Mobile changing	200
354	mobile filter changing	90
355	nozzle pipe changing	200
356	Number Plate change	50
357	Number Plate new making	50
358	Nut & Bolts changing	10
359	Nuts and Bolts(4 Wheel) changing	30
360	Oil filter changing	50
361	Oil Seal changing	1
362	Oil Supply Pump changing	450
363	Open end wrench set (6-32mm) changing	1
364	Opening and fitting of tyres	50
365	Opening and fitting tear spring	350
366	Outer wheel bearing changing front	120
367	Outer wheel bearing changing rear	120
368	Outer wheel bearing oil seal changing Front	120
369	Outer wheel bearing oil seal changing rear	120
370	Overhual starter and change carbon	450
371	Pilot bearing changing	300
372	Piston changing	600
373	Piston Ring changing	6500
374	Plastic lock changing	20
375	Plastic tape changing	20
376	Plastic washer changing	1

379	Self housing	Each	320
380	Self Overhauling	Each	420
381	Self Plunge	No	1
382	Self rewinding	Each	150
383	Self top cover	Each	80
384	Shaft yoke & Teeth	No	2200
385	Shakle Pin Assy	set	960
386	Shock absorber	Each	1
387	Shock Absorber Bush	set	80
388	Shock Absover Front	Set	2650
389	Shock Absover Rear	Set	800
390	shocker bush	Each	40
391	Shocker Front	Each	1
392	Shocker nut bolt	Each	20
393	Side Light	No	120
394	Side Light Bulb	No	20
395	Side Light Clamp	Set	1
396	Silencer box	Each	2500
397	Silencer pipe	Each	1300
398	Socket (6mm-32mm)	Set	4300
399	Solonoid switch 12v	Each	600
400	Spark Plug	Set	450
401	Speedo meter Assy	Each	1150
402	Speedo meter cable	Each	330
403	Speedo meter pinion	Each	20
404	Spring 2nd leaf (F)	Each	1
405	Spring 2nd leaf (R)	Each	720
406	Spring 3rd leaf (F)	Each	1
407	Spring 3rd leaf ®	Each	500

377	Power steering bearing changing	650
378	Power steering belt changing	200
379	Power steering box Assy changing	1200
380	Power Steering Oil changing	50
381	Power steering overhauling changing	2400
382	Power steering pipe changing	300
383	Power steering pump change	800
384	Pressure plate changing	2450
385	Pressure water pump removal, refitting and gasket changing	120
386	Propeller shaft bolt changing	30
387	Propeller shaft changing	350
388	Propeller shaft york changing	420
389	PTO bracket new making changing	1
390	PTO bracket removal changing	1
391	PTO pump servicing changing	1
392	PVC tape changing	1
393	Quarter pin changing	1
394	Radiator assy changing	800
395	Radiator cap changing	50
396	Radiator coolant changing	100
397	radiator hose pipe lower changing	200
398	Radiator hose pipe upper changing	200
399	Radiator opening and fitting	800
400	Radiator repairing	1500
401	Radiator Servicing	1200
402	Rain guard changing	1
403	Rain guard fitting	50
404	Rear Axle Corn changing	1
405	Rear bumpeer open fitting and welding	1200

408	Spring 4th leaf (F)	Each	1
409	Spring 4th leaf ®	Each	380
410	Spring 5th leaf (F)	Each	1
411	Spring 5th leaf ®	Each	1
412	Spring 6th leaf (F)	Each	1
413	Spring 6th leaf ®	Each	1
414	Spring buffer mounting	Each	120
415	Spring bush	Each	30
416	Spring Bush Metal	No	250
417	Spring Clamp	No	120
418	Spring cycle pin	Each	80
419	Spring griping washer	Each	30
420	Spring hanger	Each	230
421	Spring Main -2nd	No	1
422	Spring Main Rear	No	1
423	Spring Main-3rd	No	1
424	Spring Main-4th	No	1
425	Spring Main-5th	No	1
426	Spring pin	Each	100
427	Spring plate	Each	150
428	Spring shackle	Each	230
429	Spring washer	Each	10
430	Stabilizer Bar Bush - Front	No	40
431	Stabilizer link rod	Each	1
432	Starter carbon	Each	1
433	Starter coil	Each	330
434	Starter relay 12v	Each	180
435	Steering adjuster bolt assy	Each	30
436	Steering box oil seal	Each	80
437	Steering box overhauling	Each	600

406	Rear bush adjust changing	120
407	Rear center bolt changing	750
408	Rear Differential Assy changing	1500
409	Rear hub bearing inner changing	550
410	Rear hub bearing outer changing	550
411	Rear hydraulic jack opening & new seal kit fitting	1
412	Rear second leap changing	750
413	Rear shackle assy change	200
414	Rear shackle pin changing	200
415	rear shocker changing	150
416	Rear spring opening and pad changing	100
417	Rear tail board railing changing	1
418	Rectifier changing	250
419	Red paper changing	1
420	Relay 2 pin 12v changing	30
421	Relay 3 pin 12v changing	30
422	Relay 4 pin 12v changing	30
423	Relay 5 pin 12v changing	30
424	Release bearing changing	1400
425	Release bearing fork changing	200
426	Release bearing lock changing	200
427	Removing & Fitting of spring assy	650
428	Resoling of tyres	1
429	Rocker Arm changing	350
430	Rocker shaft changing	250
431	Rotor coil changing	200
432	Screw changing	20
433	Seal kit changing	80
434	seat cover changing	600
435	Seat new making changing	2500

438	Steering column (Inner)	Each	230
439	Steering column (Outer)	Each	230
440	Steering cross	Each	1
441	Steering cross bearing	Each	1
442	Steering Damper	Set	1
443	Steering rack end	Each	1
444	Steering wheel cover	No	700
445	Suspension arm bush lower small	Each	1
446	Suspension arm bush upper small	Each	1
447	Sycronizer circlip lock	Each	30
448	Sycronizer hub	Each	600
449	Sycronizer lock	Each	20
450	Sycronizer ring	Each	250
451	Sycronizer sheeve	Each	400
452	Sycronizer sheeve inddle bearing	Each	300
453	Tail Inner Bearing	Set	1
454	Tail Oil Seal	Set	1
455	Tail Outer Bearing	Set	1
456	Tail pinion bearing inner	Each	430
457	Tail pinion bearing outer	Each	430
458	Tail pinion chechnut washer	Each	20
459	Tail pinion checknut	Each	40
460	Tail Pinion oil seal	piece	80
461	Tappid cover packing	Each	150
462	Tempering spring	Each	100
463	Threading tape	Each	40
464	Thrust washer	Each	40
465	Tie clip	Each	10
466	Tie rod end	Each	320
467	Tie Rod End-Big	Set	300

436	Self Armaure changing	350
437	Self Armerture 12v changing	1
438	Self Bush changing	120
439	Self carbon changing	120
440	Self Carnon Rocker changing	800
441	Self field coil 12v changing	200
442	Self housing changing	200
443	Self Overhauling changing	450
444	Self Plunge changing	200
445	Self rewinding changing	220
446	Self starter overhauling changing	350
447	Self top cover changing	200
448	Shaft yoke & Teeth changing	350
449	Shakle Pin Assy changing	150
450	Shock Absorber Bush changing	150
451	Shock absorber changing	1
452	Shock Absover Front changing	120
453	Shock Absover Rear changing	120
454	shocker bush changing	1
455	Shocker Front changing	150
456	Shocker nut bolt changing	50
457	Side door glass changing	400
458	Side Light Bulb changing	50
459	Side Light changing	50
460	Side Light Clamp changing	1
461	Silencer box changing	350
462	Silencer pipe changing	300
463	Socket (6mm-32mm) changing	1
464	Solonoid switch 12v changing	120
465	Spark Plug changing	1

468	Tie Rod End-Small	Set	250
469	Tie rod kit	Each	1
470	Timing belt	Each	650
471	Timing cover front	Each	80
472	Timing cover gear	Each	80
473	Timing cover oil seal	Each	120
474	Timing pinion chain and adjuster kit set	set	450
475	Top shaft bearing	Each	300
476	Transmission half over hauling	Each	1400
477	Transmission over hauling	Each	1900
478	U bolt front	Each	80
479	U bolt nut	Each	20
480	U bolt plate	Each	130
481	U bolt rear	Each	1
482	U bolt rear	Each	1
483	U-Bolt	No	150
484	UJ cross	Each	350
485	Upper bolt joint	Each	1
486	vacuum nozzle pipe	per piece	1
487	Vacuum pipe	Each	1
488	Valve guide	Each	70
489	Valve key	Each	100
490	valve oil seal	each	40
491	Valve seal	Each	1
492	Valve spring	Each	20
493	Valve washer	Each	5
494	washer hat	Each	1
495	Water pump	No	1
496	water pump Assy	Each	1200
497	Wheel alignment	Each	150

466	Speedo meter Assy changing	500
467	Speedo meter cable changing	250
468	Speedo meter pinion changing	350
469	Spring 2nd leaf (F) changing	1
470	Spring 2nd leaf (R) changing	750
471	Spring 3rd leaf (F) changing	1
472	Spring 3rd leaf ® changing	1
473	Spring 4th leaf (F) changing	1
474	Spring 4th leaf ® changing	1
475	Spring 5th leaf (F) changing	1
476	Spring 5th leaf ® changing	1
477	Spring 6th leaf (F) changing	1
478	Spring 6th leaf ® changing	1
479	Spring buffer mounting changing	350
480	Spring bush changing	100
481	Spring Bush Metal Labour Charge	200
482	Spring Changing	650
483	Spring clam changing	120
484	spring clam welding	100
485	Spring cycle pin Labour Charge	120
486	Spring Greeasing Labour Charge	100
487	Spring griping washer Labour Charge	1
488	Spring hanger changing	120
489	Spring Main -2nd. Labour Charge	1
490	Spring Main Rear Labour Charge	1
491	Spring Main-3rd Labour Charge	1
492	Spring Main-4th Labour Charge	1
493	Spring Main-5th Labour Charge	1
494	Spring opening and fitting charges	650
495	Spring pad changing	100

498	Wheel Bearing	Set	1
499	Wheel bearing inner front	Each	520
500	Wheel bearing inner rear	Each	500
501	Wheel bearing oil seal inner front	Each	80
502	Wheel bearing oil seal inner rear	Each	80
503	Wheel bearing outer front	Each	500
504	Wheel bearing outer rear	Each	400
505	Wheel bolt	Each	100
506	Wheel cylinder	Each	1
507	Wheel Cylinder Assy	Set	320
508	Wheel cylinder bucket	Each	70
509	wheel Drum	Each	1800
510	Wheel nut	Each	30
511	Wheel wrench	Each	300
512	Wind shield replacing	Each	500
513	Window glass	Each	620
514	Wiper Arm	Each	150
515	Wiper Blade	Set	400
516	Wiper blade	Each	200
517	Wiper blade Assy	Each	1
518	Wiper motor	Each	1
519	Wiper motor Assy	Each	2200
520	Wiring clip	Each	5
521	Zip cock	Each	10

496	Spring pin bush changing	320
497	Spring pin Labour Charge	150
498	Spring plate Labour Charge	130
499	Spring shackle Labour Charge	150
500	Spring Shackle pin changing	120
501	Spring washer Labour Charge	20
502	Stabilizer Bar Bush - Front Labour Charge	150
503	Stabilizer bush	150
	changing	
504	Stabilizer link assy changing	120
505	Stabilizer link rod Labour Charge	150
506	Starter coil Labour Charge	250
507	Starter relay 12v Labour Charge	1
508	Steering adjuster bolt assy Labour Charge	80
509	Steering box kit changing	220
510	Steering box oil seal changing	220
511	Steering box oil seal Labour Charge	1
512	Steering box overhauling Labour Charge	2400
513	Steering column (Inner) Labour Charge	80
514	Steering column (Outer) Labour Charge	80
515	Steering Column changing inner	1
516	Steering Column changing outer	1
517	Steering cross bearing changing	320
518	Steering cross changing	1
519	Steering Damper Labour Charge	250
520	Steering rack changing	1
521	Steering Rack end assy (Link)changing	1
522	Steering rack end changing	1
523	Steering wheel cover Labour Charge	50
524	Steering wheel opening & refitting	220

525	Suspension arm bush lower small changing	350
526	Suspension arm bush upper small changing	350
527	suspension arm changing	650
528	Sycronizer circlip lock changing	200
529	Sycronizer hub changing	350
530	Sycronizer lock changing	150
531	Sycronizer ring changing	350
532	Sycronizer sheeve changing	1
533	Sycronizer sheeve inddle bearing changing	1
534	Tail Inner Bearing changing	300
535	Tail Oil Seal changing	410
536	Tail Outer Bearing changing	300
537	Tail pinion bearing inner changing	300
538	Tail pinion bearing outer changing	350
539	Tail pinion chechnut washer changing	150
540	Tail pinion checknut changing	150
541	Tail pinion oil seal changing	450
542	Tail Pinion oil seal changing	1
543	Tailgate Repairing	1
544	Tappet adjustment	220
545	Tappid cover packing changing	450
546	Tempering spring change	150
547	Threading tape changing	1
548	Thrust washer changing	250
549	Tie clip changing	10
550	Tie rod end changing	320
551	Tie Rod End-Big changing	250
552	Tie Rod End-Small changing	250
553	Tie rod kit changing	1
554	Timing belt changing	1200

555	Timing cover front changing	500
556	Timing cover gear changing	220
557	Timing cover oil seal changing	450
558	Timing pinion chain and adjuster kit set changing	1
559	Top shaft bearing changing	250
560	Transmission half over hauling changing	3200
561	Transmission over hauling changing	6200
562	Tyre changing	50
563	Tyre opening and drum change	250
564	U bolt changing	150
565	U bolt front changing	1
566	U bolt nut changing	20
567	U bolt plate changing	150
568	U bolt rear changing	150
569	UJ cross changing	350
570	Upper bolt joint changing	1
571	Upper clutch kit changing	1
572	Upper Radiator hose pipe changing	200
573	Vaccum pipe changing	1
574	vacuum nozzle pipe changing	1
575	Vacuum pipe changing	1
576	Vacuum pipe socket changing	1
577	Valve guide changing	250
578	Valve key changing	200
579	Valve O ring changing	50
580	valve oil seal changing	10
581	Valve seal changing	10
582	Valve spring changing	100
583	Valve washer changing	1
584	Vane pump changing	1

585	washer hat changing	1
586	Water filter changing	90
587	Water level indicator pipe changing	15
588	water pump Assy changing	600
589	Water pump assy servicing	500
590	Water pump changing	800
591	Water pump opening and fitting	650
592	Water separator servicing	1
593	Welding Labour Charge	50
594	Wheel Alignment Labour Charge	250
595	Wheel Bearing changing	550
596	Wheel bearing inner front changing	1
597	Wheel bearing inner rear changing	1
598	Wheel bearing oil seal inner front changing	1
599	Wheel bearing oil seal inner rear changing	1
600	Wheel bearing outer front changing	1
601	Wheel bearing outer rear changing	1
602	Wheel bolt change	150
603	Wheel Cylinder Assy changing	1
604	Wheel cylinder bucket changing	200
605	Wheel cylinder changing	200
606	wheel Drum changing	250
607	Wheel nut changing	30
608	Wheel wrench changing	1
609	Whole body greasing Labour Charge	250
610	Wind shelid glass fitting Labour Charge	3000
611	Wind shield replacing Labour Charge	1
612	Window glass changing	600
613	Wiper alignment Labour Charge	1
614	Wiper arm changing	90

615	Wiper blade Assy changing	90
616	Wiper blade changing	80
617	Wiper motor Assy changing	250
618	Wiper motor changing	600
619	Wiper motor repairing	1400
620	Wiring clip changing	20