

RBP-TATA 407				
	Description of Item (2)	Unit	Qty	Eastern Automobile Workshop
1	2nd leaf	No	1	1400
2	3rd leaf	No	1	1300
3	4x4 Shaft	No	1	0
4	5th leaf	No	1	1000
5	A.C belt	No	1	0
6	Ac refill	No	1	0
7	Acceleration cable	No	1	450
8	Adjusting bearing	No	1	0
9	Air cleaner filter	No	1	0
10	Air filter element	No	1	0
11	Air filter	No	1	900
12	Air horse pipe	No	1	320
13	Alternator bearing	No	1	330
14	Alternator bush holder assy	No	1	600
15	Alternator carbon bush	No	1	300
16	Alternator faxeble pipe	No	1	380
17	Alternator mounting bush	No	1	50
18	Alternator starter coil	No	1	1850
19	Alternator vaccum blade	No	1	0
20	Anobond gum	No	1	60
21	Arm busb sub assy pitman	No	1	1700
22	Arm bush	No	1	0
23	Armature assy	No	1	2800
24	Axle bearing	No	1	0
25	Axle bolt	No	1	45
26	Axle gear (big)	No	1	1100
27	Axle gear (small)	No	1	850
28	Axle oil seal	No	1	80
29	Back light bulb(druble point)	No	1	20
30	Back light cover	No	1	180
31	Banjo washer with bolt	No	1	90
32	Bar front stablizer	No	1	0
33	Battery Amaron(13 plate)	No	1	8500
34	Battery BOSCH (13 plates)	No	1	7800
35	Bearing alternator roter	No	1	450
36	Bearing differential inner	No	1	950
37	Bearing ladder	No	1	850
38	Belt vane pump	No	1	500
39	Bendix pinion	No	1	2650
40	Bhutan battery(13 plates)	No	1	7800
41	Bolt anchore arm	No	1	50
42	Bolt poupoler shaft	No	1	30
43	Bonnet cable	No	1	480
44	Bonnet clip	No	1	90

45	Bonnet lock	No	1	120
46	Boot kit drive shaft inner	No	1	0
47	Brake booster assy	No	1	6500
48	brake chamber	No	1	7700
49	Brake dish	No	1	0
50	Brake drum	No	1	6400
51	Brake fluid	No	1	250
52	Brake Gear oil seal	No	1	0
53	Brake Gear Shaft	No	1	0
54	Brake hose pipe front	No	1	350
55	Brake light assy	Set	1	420
56	Brake light bulb	Set	1	30
57	Brake light cover	No	1	180
58	Brake master cylinder assy	No	1	2100
59	Brake master cylinder repair kit	No	1	650
60	Brake oil Dot-3 per lits	No	1	250
61	Brake pad	No	1	0
62	Brake piston	No	1	650
63	Brake shoe lock with spring	No	1	220
64	Brake shoe	No	1	1050
65	Brake steel pipe	No	1	520
66	Brake w/cup kit rear	No	1	120
67	Bumper Extension	Set	1	900
68	Bumper Support	Set	1	650
69	Bush connecting rod	No	1	120
70	Bush front suspension LWR/U	Set	1	0
71	Bush spring shackle	No	1	60
72	Bush steering idler	No	1	0
73	Bush steering main shaft	No	1	0
74	By pass filter	No	1	0
75	C.B joint	No	1	0
76	Cabin mountain	No	1	200
77	Cabine mounting	No	1	0
78	Cable speed meter	No	1	750
79	Caliper kit	No	1	0
80	Caliper piston	Set	1	0
81	Cam plate	No	1	3100
82	Cam shaft assy	No	1	4800
83	Cam shaft oil seal	No	1	350
84	Cam shaft valve	No	1	320
85	Cap assy fuel filter	No	1	1800
86	center bearing	No	1	1100
87	Center bolt	No	1	100
88	Chain adjuster	No	1	0
89	Chain lock	No	1	0
90	Chaises mounting	No	1	0
91	Check nut lock	No	1	80
92	Check nut washer	No	1	80

93	Chillim oil seal	No	1	180
94	Clutch Cable	No	1	0
95	Clutch cover gasket	No	1	300
96	Clutch cylinder kit Uper	Set	1	320
97	Clutch cylinder kit lower	Set	1	320
98	Clutch fork	No	1	750
99	Clutch housing	No	1	3500
100	Clutch lower assy	No	1	2100
101	Clutch master cylinder	No	1	2100
102	Clutch plate	No	1	4200
103	Clutch release bearing	No	1	1100
104	Clutch upper cylinder assy	No	1	2100
105	Coil spring front	No	1	0
106	Connecting Switch	No	1	0
107	Connection bearing	No	1	322
108	Controlling switch engine	No	1	1800
109	Controlling switch assy	No	1	2400
110	CRB(Engine oil)per lits	No	1	400
111	Cross Bearing	No	1	820
112	Crown Differential Assembly	No	1	15000
113	Crown set	No	1	8500
114	Crown spider kit	Set	1	2300
115	Crown washer	Set	1	350
116	Cycle pin	No	1	150
117	Cylinder kit disc front(calibar)	No	1	0
118	Dash board polish	No	1	250
119	dash board assy	No	1	4500
120	D-bush	No	1	120
121	Diesel filter cover	No	1	2300
122	Diesel filter double type mico	No	1	300
123	Diesel filter single type mico	No	1	150
124	Disc clutch	No	1	4300
125	Distilled water per lits	No	1	25
126	Dom Light	No	1	350
127	Door beat	No	1	750
128	Door glass back	No	1	1100
129	Door glass front	No	1	1050
130	Door lock Front	No	1	650
131	Door lock Rear	No	1	650
132	Door nophe	No	1	70
133	Door opener inner	No	1	480
134	Door regulator handle	No	1	80
135	Door regulator machine	No	1	680
136	Door regulator	No	1	680
137	Door RH/LH	No	1	8700
138	Door rubber channel RH/LH	No	1	1500
139	Double seat form	No	1	2300
140	Drive shaft boot	No	1	0

141	Drive Shaft oil seal	No	1	0
142	Drive shaft	No	1	0
143	Drum sub assy Rear	No	1	7700
144	Dumper shock obsorber	No	1	1300
145	Dust guard front	No	1	300
146	Dynamic mobile pipe	No	1	480
147	Dynamo assy	No	1	7000
148	Dynamo carbon	No	1	420
149	Dynamo cut out	No	1	950
150	Dynamo flexibal pipe	No	1	380
151	Dynamo oil Pump	No	1	200
152	Dynamo pully	No	1	300
153	Dynamo rectifier reaping	No	1	350
154	Dynamo regulator	No	1	450
155	Eicher logo	No	1	300
156	Engine bolt	No	1	40
157	Engine chamber	No	1	2200
158	Engine connecting rod	No	1	2800
159	Engine connection bush	No	1	300
160	Engine main oil seal rear	No	1	430
161	Engine mounting	No	1	700
162	Engine oil cap	No	1	210
163	Engine oil seal set	No	1	1600
164	Engine piston liner	No	1	1900
165	Engine piston ring	No	1	4800
166	Engine valve	No	1	320
167	Fan assy	No	1	950
168	Fan relay	No	1	350
169	Field post kit	No	1	0
170	FIP service kit	No	1	2500
171	Fixibal pipe	No	1	320
172	Floor mate	No	1	1200
173	Fly wheel ring	No	1	2500
174	Fog light assy	No	1	450
175	Fog light assy	No	1	0
176	Fog light bulb	No	1	120
177	Foot mate bucket type	No	1	2600
178	Foot mate(Brush type)	No	1	120
179	Free lock assy	No	1	0
180	Front 4th leaf	No	1	950
181	Front 5th leaf	No	1	750
182	Front bumper guard	No	1	500
183	Front bumper light assy	No	1	410
184	Front chain spocket	No	1	0
185	Front greel	No	1	1000
186	Front hubs inner bearing	No	1	950
187	Front hubs outer bearing	No	1	750
188	Front hubs spare	No	1	3000

189	Front Main leaf	No	1	1400
190	Front shockobserber	No	1	1200
191	Front spindal	No	1	1500
192	Front U bolt	No	1	420
193	Front wheel nut bolt	No	1	180
194	Ft. axle bearing	No	1	0
195	Fuel filter	No	1	450
196	Fuel gauge	No	1	600
197	Fuse 20 amps	No	1	20
198	Fuse 60A	No	1	100
199	Gaskit engine over haul	No	1	3800
200	Gaskit power steering	No	1	1250
201	Gear box case oil seal	No	1	230
202	gear box housing	No	1	3000
203	Gear clutch hub	No	1	3100
204	Gear Lever end	No	1	650
205	Gear lever kit	No	1	650
206	Gear link	No	1	0
207	Gear link bush	No	1	0
208	Gear link End	No	1	0
209	Gear oil hypo Castrol 90	No	1	350
210	Gear top cover	No	1	1200
211	Glow plug	No	1	0
212	Glow timer realy	No	1	0
213	Grease cap	No	1	450
214	Grease MP3	No	1	500
215	Grill radiator	No	1	3500
216	GTX Engine oil	No	1	4000
217	Guage water temparature send	No	1	450
218	Hand brake cable front	No	1	0
219	Hand brake cable rear	No	1	0
220	Head lamp relay	No	1	380
221	Head light	No	1	650
222	Head light assy	No	1	750
223	Head light Bezer(RH/LH)	No	1	300
224	Head light bulb	No	1	150
225	Head light relay	No	1	380
226	Heah and roter	No	1	10800
227	Heat meter	No	1	380
228	Heat plug	No	1	0
229	Heat switch	No	1	380
230	Helogen bulb	No	1	120
231	Hone high tone	No	1	470
232	Hone low tone	No	1	470
233	Hood sub assy (Taupoline)	No	1	19000
234	Horn	No	1	470
235	Horn contact point	No	1	200
236	Hose radiator in let	No	1	300

237	Hubs nut & bolt	No	1	180
238	Hydraulic oil	No	1	250
239	Ignation coil assy	No	1	0
240	Indicator flasher	No	1	370
241	Indicator holder	No	1	90
242	indicator light bulb	No	1	20
243	Ingection nozzle	No	1	1300
244	Ingector pipe	No	1	500
245	Insualtor engine front	No	1	850
246	Insualtor engine rear	No	1	750
247	Kerosine oil	No	1	55
248	Kilometer cable	No	1	560
249	Kin pin 1 set	No	1	2000
250	Kin pin bearing	No	1	350
251	Kin pin bush	No	1	350
252	Kin pin shim	No	1	45
253	knuckle end	No	1	0
254	Knucle band arm	No	1	1450
255	Latch assy rear body tail	No	1	500
256	Ling-Bush	No	1	0
257	Lock assy rear	No	1	1500
258	Lower control arm bush	No	1	200
259	M/oil Filter paper type	No	1	240
260	Main bearing	No	1	400
261	Main shaft assy	No	1	4200
262	Main shaft bearing	No	1	920
263	Maniful packing	No	1	100
264	Mirrow	No	1	330
265	Mirrow (Chrome)	No	1	0
266	Mobile filter	No	1	420
267	Mobile filter metal type	No	1	420
268	Mobile filter paper type	No	1	400
269	Motor wind shield wiper	No	1	420
270	Mud flap front/rear	No	1	130
271	Nozzel pipe	No	1	620
272	Nozzel spring	No	1	80
273	Nozzel washer	No	1	40
274	Number plate(Computerise)	No	1	350
275	Nut & bolt 15/16/17/18/19/21	No	1	30
276	O ring	No	1	0
277	Oil cooler assy	No	1	3800
278	Oil drain plug	No	1	90
279	Oil pressure switch	No	1	450
280	Oil pump	No	1	2800
281	Oil pump drive gear	No	1	1200
282	Oil pump fixible Pipe	No	1	450
283	Oil sea front diff. side gear sh	No	1	380
284	Over Fender	No	1	0

285	Over fender	No	1	0
286	Over flow bolt	No	1	50
287	Portable emergency revloving	No	1	1800
288	Power steering belt	No	1	650
289	Power steering box assy	No	1	2800
290	Power steering fluid	No	1	280
291	Power steering pump	No	1	9500
292	Pressure plate	No	1	4450
293	Propler shaft coupling	No	1	1800
294	Propler shaft nut bolt	No	1	30
295	Propler shaft yoke with teeth	No	1	2800
296	Pump govener	No	1	950
297	Pump head	No	1	0
298	Pump rotor head assy	No	1	12000
299	Pump service kit	No	1	820
300	Pump switch	No	1	922
301	Radaitor	No	1	10800
302	Radaitor hose pipe LWR	No	1	450
303	Radaitor hose pipe UPR	No	1	450
304	Raer spring jula	No	1	720
305	Rain guard	No	1	1500
306	Rear axle	No	1	3200
307	Rear axle bearing	No	1	0
308	Rear axle cone	No	1	0
309	Rear axle oil seal inner/outer	No	1	0
310	Rear bumper assy	No	1	0
311	Rear center bolt	No	1	130
312	Rear chain spocket	No	1	0
313	Rear control rod bush	No	1	45
314	Rear crank shaft oil seal	No	1	450
315	Rear diff. oil seal	No	1	240
316	Rear door cubja	No	1	350
317	Rear dust guard	No	1	230
318	Rear hubs oil seal inner/outer	No	1	150
319	Rear lamp assy	No	1	380
320	Rear lamp cover assy	No	1	180
321	Rear main leaf	No	1	1600
322	Rear shock observer	No	1	1200
323	Rear Shocker bush	No	1	90
324	Rear spandle lock	No	1	90
325	Rear spring hanger	No	1	780
326	Rear spring matal bush	No	1	60
327	Rear spring shackle pin	No	1	180
328	Rear U bolt	No	1	580
329	Rear view mirrow L/S	No	1	350
330	Rear W.C assy	No	1	1450
331	Rear wheel bearig outer	No	1	1300
332	Rear wheel bearing inner	No	1	1300

333	Rear wheel cyl.kit	No	1	160
334	Rear wheel nut & bolt	No	1	180
335	Release bearing	No	1	1200
336	Release frog	No	1	910
337	Roof light bulb	No	1	25
338	Seat belt	No	1	1200
339	Seat cover	No	1	3800
340	Seat cover(half)	No	1	1500
341	Seat foam	No	1	2400
342	Self bearing	No	1	420
343	Self carbon holder	No	1	500
344	Self carbon micro type 197	No	1	250
345	Self over hauling	No	1	550
346	Self starter armature	No	1	3200
347	Self starter assy	No	1	9500
348	Shackle pin	No	1	200
349	Side indicator light front	No	1	320
350	Silincer bush	No	1	120
351	Silincer pipe assy	No	1	2200
352	Soloneil switch	No	1	2200
353	Spare tyre hanger set	No	1	410
354	Spider kit front prop.shaft joint	No	1	900
355	Spider kit rear prop.shaft joint	No	1	900
356	Spring bush	No	1	80
357	Spring mantal bush	No	1	80
358	Stabilizer bush	No	1	120
359	Stabilizer D bush	No	1	120
360	Stabilizer kit	No	1	0
361	Stading realy arm	No	1	0
362	Steering	No	1	800
363	Steering cover	No	1	550
364	Steering cross bearing assly	No	1	950
365	Steering knuckle spindle	No	1	2000
366	Steering relay assy	No	1	0
367	Suspension arma bush UPR	No	1	0
368	Suspension arms	No	1	0
369	Suspension arms bush LWR	No	1	0
370	Suspension tana rod(bolt bush	No	1	0
371	Tail gate lock	No	1	550
372	Tie rod end	No	1	780
373	Timer pre-heating	No	1	0
374	Timing belt	No	1	0
375	Timing belt idler	No	1	0
376	Timing belt tensioner	No	1	0
377	Timing seal kit	No	1	0
378	Tolls set	No	1	0
379	Top shaft assy	No	1	3200
380	Top shaft bearing	No	1	888

381	Trank cap	No	1	500
382	Valve exhaust	No	1	300
383	Vehicle cleaner brush	No	1	230
384	Visor LH-RH	No	1	1500
385	Voltate Regulator	No	1	0
386	Vonnet lock assy	No	1	650
387	Water pump	No	1	3800
388	water surprise	No	1	0
389	Wheel bearing grease	No	1	540
390	Wheel Chain	No	1	0
391	Wheel cyl.bucket	No	1	177
392	Wheel drum	No	1	5500
393	Wheel nut	No	1	190
394	Wind sheild gum	No	1	1000
395	Wind shield glass front	No	1	6980
396	Wiper arm	No	1	520
397	Wiper blade	No	1	260
398	Wiper guage	No	1	0
399	Wiper link	No	1	3700
400	Wire assy.	No	1	0