

RBP-Land Cruiser Fire Vehicle				
	Description of Item (2)	Unit	Qty	Eastern Automobile Workshop
1	2nd leaf	No	1	3300
2	3rd leaf	No	1	2800
3	4/4 cap assly	No	1	4500
4	4th leaf	No	1	2500
5	5th leaf	No	1	1500
6	A.C belt	No	1	1600
7	AC Filter	No	1	2400
8	AC Radiator	No	1	12000
9	Acceleration cable	No	1	1200
10	Adjusting bearing	No	1	2000
11	Air cleaner filter	No	1	2400
12	Air filter element	No	1	2400
13	Air filter	No	1	2400
14	Air horse pipe	No	1	2200
15	Alternator bearing	No	1	600
16	Alternator bush holder assy	No	1	1800
17	Alternator carbon bush	No	1	320
18	Alternator faxeble pipe	No	1	650
19	Alternator starter coil	No	1	1200
20	Alternator vaccum blade	No	1	1200
21	Anobond gum	No	1	55
22	Arm anchor LR	No	1	0
23	Arm assy front suspension LR	No	1	12300
24	Arm busb sub assy pitman	No	1	3300
25	Arm bush	No	1	950
26	Armature assy	No	1	5700
27	Axle bearing	No	1	2600
28	Axle bolt	No	1	80
29	Axle gear (big)	No	1	3000
30	Axle oil seal	No	1	620
31	Back gear switch	No	1	1800
32	Back light bulb(druble point)	No	1	25
33	Back light bulb(single point)	No	1	25
34	Back light cover	No	1	650
35	Back view mirrow	No	1	2200
36	Ball joint lower	No	1	0
37	Ball joint upper	No	1	0
38	Bar front bumper	No	1	0
39	Bar front stablizer	No	1	3500
40	Battery Amaron (13 plates)	No	1	8500
41	Bhutan Battery (13 plates)	No	1	8300
42	Battery BOSCH (13 plates)	No	1	7700

43	Battery terminal end	No	1	79
44	Bearing alternator roter	No	1	450
45	Bearing differential inner	No	1	2200
46	Bearing front diff. side gear	No	1	2300
47	Belt vane pump	No	1	950
48	Bendix pinion	No	1	5500
49	Body polish	No	1	350
50	Bolt anchore arm	No	1	0
51	Bolt poupoler shaft	No	1	40
52	Bonnet cable	No	1	950
53	Bonnet clip	No	1	200
54	Bonnet lock	No	1	2700
55	Booster repair kit	Set	1	3700
56	Brake booster assy	Set	1	16300
57	brake chamber	No	1	0
58	Brake dish	No	1	6700
59	Brake drum	No	1	7400
60	Brake fluid	No	1	230
61	Brake hose pipe front	No	1	1200
62	Brake light assy	No	1	3800
63	Brake light bulb	No	1	25
64	Brake light cover	No	1	1200
65	Brake lining	No	1	0
66	Brake master cylinder assy	No	1	6700
67	Brake master cylinder repair kit	Set	1	1200
68	Brake pad	Set	1	4800
69	Brake piston	No	1	500
70	Brake shoe	Set	1	5750
71	Brake steel pipe	No	1	950
72	Bumper Extension	No	1	0
73	Bumper Support	No	1	0
	Bush front suspension			
74	LWR/UPR	No	1	950
75	Bush spring shackle	No	1	700
76	Bush steering main shaft	No	1	0
77	C.B joint	No	1	0
78	cabin mountain	No	1	0
79	Cable speed meter	No	1	1500
80	Caliper kit	Set	1	2700
81	Caliper piston	No	1	650
82	Cam plate	No	1	4500
83	Cam shaft assy	No	1	17800
84	Cam shaft bearing	No	1	800
85	Cam shaft oil seal	No	1	450
86	Cam shaft valve	No	1	410

87	Cap assy fuel filter	No	1	3500
88	Carbon holder	No	1	2600
89	Center bolt	No	1	100
90	Center lock	No	1	4500
91	Check nut lock	No	1	220
92	Check nut	No	1	280
93	Check nut washer	No	1	200
94	Clutch boot	No	1	150
95	Clutch Cable	No	1	0
96	Clutch cyinder kit Uper	Set	1	1200
97	Clutch cylinder kit lower	Set	1	810
98	Clutch frok	No	1	3700
99	Clutch lower assy	No	1	3700
100	Clutch master cylinder	No	1	6000
101	Clutch plate	No	1	6750
102	Clutch release bearing	No	1	4880
103	Clutch uper cylinder assy	No	1	6000
104	Coil spring front	No	1	0
105	Combination switch/switch assy head lamp	No	1	6500
106	Connecting Switch	No	1	0
107	Connection bearing	No	1	800
108	Counter 5th gear	No	1	7800
109	Counter Gear	No	1	21300
110	Crank oil seal	No	1	810
111	Crank shaft	No	1	25000
112	Cross Bearing	No	1	2450
113	crown deferential assy	No	1	0
114	Crown set per set	Set	1	0
115	Crown spider kit	Set	1	6500
116	Cycle pin	No	1	500
117	Cylinder kit disc front(calibar)	No	1	0
118	Dash boadd polish	No	1	250
119	dash board assy	No	1	0
120	D-bush	No	1	450
121	Diesel filter cover	No	1	2400
122	Diesel filter duoble type mico	No	1	0
123	Diesel filter	No	1	1200
124	Differentail 4x4	No	1	0
125	Disc clutch	No	1	6500
126	Distilled water	No	1	25
127	DK lock	No	1	0
128	Door beat	No	1	0
129	Door channel	No	1	0
130	Door glass back	No	1	0

131	Door glass front	No	1	4500
132	Door lock Front	No	1	3700
133	Door lock Rear	No	1	0
134	Door noppe	No	1	300
135	Door opener inner	No	1	3200
136	Door opener outer	No	1	3200
137	Door pad	No	1	0
138	Door regulator handle	No	1	250
139	Door regulator	No	1	3700
140	Door RH/LH	No	1	0
141	Door rubber channel RH/LH	No	1	0
142	Double horn set imported	No	1	650
143	Double seat form	No	1	0
144	Dramtshi Dhen(for vigo)	Set	1	0
145	Deak link kit	Set	1	2400
146	Deak link end	No	1	0
147	Drive shaft boot	No	1	0
148	Drive Shaft oil seal	No	1	0
149	Drive shaft	No	1	0
150	Drum sub assy Rear	No	1	7000
151	Dumper shock obsorber	No	1	5700
152	Dust guard front	No	1	450
153	Dust guard rear	No	1	450
154	Dynamic mobile pipe	No	1	650
155	Dynamo armature	No	1	0
156	Dynamo assy	No	1	0
157	Dynamo bearing	No	1	0
158	Dynamo carbon	No	1	0
159	Dynamo cut out	No	1	0
160	Dynamo fexibal pipe	No	1	0
161	Dynamo oil pump	No	1	0
162	Dynamo pully	No	1	0
163	Dynamo rectifier reaping	No	1	0
164	Dynamo Rectifire	No	1	0
165	Dynamo regulator	No	1	0
166	Engine bolt	No	1	220
167	Engine chamber	No	1	2500
168	Engine connecting rod	No	1	3800
169	Engine main oil seal front	No	1	2500
170	Engine main oil seal rear	No	1	1200
171	Engine mounting	No	1	2200
172	Engine oil cap	No	1	450
173	Engine oil seal	No	1	650
174	Engine piston liner	No	1	2800
175	Engine piston ring	No	1	6000

176	Engine valve	No	1	420
177	Fan assy	No	1	5700
178	Fan belt	No	1	2100
179	Feed pump	No	1	3700
180	Flasher indicator	No	1	650
181	Floor mate	No	1	3200
182	Fly wheel ring	No	1	3500
183	Fog light assy	No	1	950
184	Fog light assy	No	1	0
185	Fog light bulb	No	1	120
186	Foot mate bucket type	Set	1	2700
187	Foot mate(Brush type)	Set	1	2600
188	Front 2nd leaf	No	1	3500
189	Front 3rd leaf	No	1	1400
190	Front 4th leaf	No	1	1100
191	Front 5th leaf	No	1	999
192	Front bumper assy	No	1	16000
193	Front bumper guard	No	1	0
194	Front bumper lock	No	1	0
195	Front coil spring	No	1	0
196	Front hubs inner bearing	No	1	1600
197	Front hubs outer bearing	No	1	1500
198	Front Main leaf	No	1	2300
199	Front shock obsorber	No	1	5900
200	Front show grill assy	No	1	4500
201	Front spindal	No	1	5000
202	Front U bolt	No	1	500
203	Front wheel nut bolt	No	1	350
204	Ft. axle bearing	No	1	0
205	Fuel filter	No	1	1200
206	Fuel meter	No	1	3700
207	Fuse 20 amps	No	1	20
208	Fuse 30 amps	No	1	20
209	Fuse 60A	No	1	90
210	Gaskit engine over haul	No	1	4700
211	Gaskit set engine including head	No	1	4700
212	Gear box case oil seal	No	1	650
213	Gear box mounting	No	1	2700
214	Gear oil hypo Castrol 90	No	1	350
215	Gear shafter key spring	No	1	220
216	Gear synchronizer brass ring	No	1	4650
217	Glow plug	No	1	0
218	Guage bush for stablizer link bolt	No	1	0

219	Hand brake cable front	No	1	2700
220	Hand brake cable rear	No	1	2700
221	Hand pump	No	1	3200
222	Head lamp relay	No	1	0
223	Head light bulb	No	1	120
224	Head light relay	No	1	950
225	Heah and roter	No	1	16000
226	Heat meter	No	1	750
227	Heat switch	No	1	0
228	Helogen bulb	No	1	120
229	Horn	No	1	550
230	Hose air cleaner	No	1	2100
231	Hose radiator in let	No	1	950
232	Hubs nut & bolt	No	1	350
233	Hydraulic oil	No	1	250
234	Indicator assy front	No	1	1600
235	Indicator flasher	No	1	910
236	Indicator holder	No	1	90
237	Ingection nozzle	No	1	1400
238	Key front door	No	1	950
239	Key ignition switch	No	1	6000
240	Kilometer cable	No	1	1500
241	kin pin bush	No	1	0
242	Ling-Bush	No	1	80
243	Link rod assy	No	1	2700
244	Lower control arm bush	No	1	950
245	Main bearing	No	1	800
246	Main shaft assy	No	1	26000
247	Maniful packing	No	1	430
248	Mirrow	No	1	3700
249	Mobile filter	No	1	940
250	Motor wind shield wiper	No	1	300
251	Mud flap front/rear	No	1	500
252	Nozzel	No	1	1400
253	Nozzel pipe	No	1	830
254	Nozzel spring	No	1	80
255	Nozzel washer	No	1	40
256	Number plate(Computerise)	No	1	350
257	Number plate(Hand writing)	No	1	0
258	Nut & bolt 15/16/17/18/19/21	No	1	45
259	Oil cooler assy	No	1	6500
260	Oil drain plug	No	1	350
261	Oil pump drive gear	No	1	2400
262	Oil pump fixible Pipe	No	1	650
263	Oil seal	No	1	200

264	Oil seal froont hubs outer	No	1	450
265	Over Fender	No	1	0
266	Piston	No	1	3000
267	Piston ring	No	1	6400
268	Plunger	No	1	650
269	Power steering belt	No	1	1600
270	Power steering box assy	No	1	45000
271	Power steering fluid	No	1	350
272	Power steering kit	Set	1	3500
273	Power steering rag kit	Set	1	0
274	Power steering van pump	No	1	22000
275	Pressure plate	No	1	8400
276	Propler shaft coupling	No	1	2700
277	Propler shaft nut bolt	No	1	50
278	Propler shaft yoke with teeth	No	1	4300
279	Pump head	No	1	0
280	Pump switch	No	1	1200
281	Radaitor	No	1	22000
282	Radaitor cap	No	1	650
283	Radaitor grill	No	1	0
284	Radaitor hose pipe LWR	No	1	1200
285	Radaitor hose pipe UPR	No	1	1200
286	Rain guard	No	1	0
287	Realy horn	No	1	650
288	Rear axle	No	1	14000
289	Rear axle bearing	No	1	0
290	Rear axle cone	No	1	0
291	Rear axle oil seal inner/outer	No	1	600
292	Rear brake brum	No	1	7800
293	Rear bumper assy	No	1	0
294	Rear center bolt	No	1	120
295	Rear diff. oil seal	No	1	750
296	Rear door cubja	No	1	0
297	Rear dust guard	No	1	650
298	Rear hubs oil seal inner/outer	No	1	620
299	Rear lamp assy	No	1	0
300	Rear lamp cover assy	No	1	0
301	Rear main leaf	No	1	3700
302	Rear shock observer	No	1	3200
303	Rear Shocker bush	No	1	120
304	Rear spandle lock	No	1	0
305	Rear spring matal bush	No	1	0
306	Rear spring shackle pin	No	1	620
307	Rear U bolt	No	1	700
308	Rear view mirrow L/S	No	1	3700

309	Rear W.C assy	No	1	2700
310	Rear w.C kit	Set	1	220
311	Rear wheel bearing inner	No	1	1600
312	Rear wheel bearing outer	No	1	1500
313	Rear wheel cyl.kit	Set	1	220
314	Rear wheel nut & bolt	No	1	350
315	Release bearing	No	1	2800
316	Release frog	No	1	2200
317	Roof light bulb	No	1	60
318	Seat cover	No	1	2600
319	Seat foam	No	1	2200
320	Self armature	No	1	6400
321	Self bearing	No	1	450
322	Self carbon	No	1	310
323	Self carbon holder	No	1	3800
324	Self conect point	No	1	340
325	self Contact point	No	1	330
326	Self over hauling	No	1	650
327	Self starter armature	No	1	5500
328	Self starter assy	No	1	18000
329	Shackle pin rear	No	1	230
330	Side indicator light front	No	1	0
331	Side indicator lightrear	No	1	0
332	Silincer bush	No	1	450
333	Silincer Moutain bush	No	1	450
334	Silincer pipe assy	No	1	4500
335	Soloneil switch	No	1	2300
336	Spare tyre hanger set	Set	1	3700
337	Spider kit front prop.shaft joint	No	1	2500
338	Spider kit rear prop.shaft joint	No	1	2500
339	Spiral cable(Horn)	No	1	0
340	Spring Bush	No	1	90
341	spring bush	No	1	0
342	Spring cycle pin with plate	No	1	0
343	Spring mantal bush	No	1	950
344	Stabilizer bar	No	1	0
345	Stabilizer bush	No	1	90
346	Stabilizer D bush	No	1	430
347	Stabilizer kit	No	1	0
348	Stabilizer link bush	No	1	100
349	Stabilizer rod	No	1	0
350	Stading realy arm	No	1	0
351	steering	No	1	0
352	Steering arms	No	1	0
353	Steering box	No	1	0

354	Steering clumn	No	1	0
355	Steering cover	No	1	620
356	Steering cross bearing	No	1	2000
357	Steering cross bearing assly	No	1	0
358	Steering knuckle spindle	No	1	0
359	Steering rack kit	No	1	0
360	Steering racket assy	No	1	0
361	Steering relay assy	No	1	0
362	Suspension arma bush UPR	No	1	950
363	Suspension arms	No	1	15000
364	Suspension arms bush LWR	No	1	950
365	Tail gate lock	No	1	0
366	Tail pinion bearing outer	No	1	1600
367	Tail pinion bearing inner	No	1	1600
368	Tail pinion oil seal	No	1	1200
369	Tee tee horn	No	1	580
370	Thermostat valve	No	1	950
371	Tie ped cover gas kit	Set	1	450
372	Tie pid cover gas kit	Set	1	450
373	Tie rod end	No	1	2700
374	Timing belt	No	1	3799
375	Tolls set	No	1	0
376	Top shaft bearing	No	1	1650
377	Top shaft pilot bearing	No	1	1200
378	Trank cap	No	1	1200
379	Valve exhaust	No	1	500
380	Valve in let	No	1	500
381	Vehicle cleaner brush	No	1	300
382	Visor LH-RH	No	1	0
383	Voltate Regulator	No	1	3800
384	Vonnet cable	No	1	1600
385	Vonnet lock assy	No	1	2600
386	Water pump	No	1	4800
387	Waxy(Dash board polish)	No	1	250
388	Wheel bearing grease	No	1	530
389	Wheel drum	No	1	7000
390	Wheel nut	No	1	500
391	Wheel wrench	No	1	650
392	Wind sheild gum	No	1	950
393	Wind shield glass front	No	1	18000
394	Wind shield glass rear	No	1	5500
395	Window glass motor	No	1	3500
396	Wiper arm	No	1	2200
397	Wiper blade	No	1	250
398	Wiper coil	No	1	1200

399	Wiper link	No	1	4800
400	Wiper motor	No	1	6500
401	Wire assy.	No	1	0