

Vigo Hilux									
				Pema Khangsar Motor Works					
	Description of Item (2)	Unit	Qty	Spare Parts			Labour Charge		
1	A/C filter	per piece	1	2200		1	A/C filter changing		250
2	AC Belt	Pcs	1	1250		2	AC Belt changing		250
3	Accelerator cable	Each	1	450		3	AC gas refilling labour charge		2000
4	Accelerator cable assy	Each	1	450		4	Accelerator cable assy changing		5
5	Air filter	Each	1	2500		5	Accelerator cable changing		5
6	Air filter hose pipe	Each	1	1250		6	Air cleaner filter changing		250
7	Air filter inside	Each	1	5		7	Air compressor leakage repairing		100
8	Air filter outsude	Each	1	5		8	Air Element changing		250
9	Air unloader opening & new service kit fitting	Each	1	5		9	Air filter changing		250
10	Alternator Assy	Each	1	28500		10	Air filter hose pipe changing		100
11	Alternator carbon bush	Each	1	1650		11	Air filter inside changing		5
12	Alternator cut out	Each	1	2950		12	Air filter outside changing		5
13	Alternator Fan belt pully bearing	Each	1	3850		13	Air filter servicing		250
14	Alternator magnet pully	Each	1	5850		14	Air tank opening & refitting		5
15	Alternator overhauling	Each	1	850		15	Air unloader opening & new service kit fitting changing		5
16	Alternator rectifile	Each	1	2500		16	Alternator Assy changing		450
17	Anabond	No	1	50		17	Alternator carbon bush changing		100
18	Anabond GUM (Big)	Each	1	85		18	Alternator cut out changing		50
19	Anabond GUM (Small)	Each	1	50		19	Alternator Fan belt pully bearing changing		250
20	Arm Bush Lower	Set	1	2200		20	Alternator magnet pully changing		50
21	Arm Bush Upper	Set	1	1800		21	Alternator overhauling changing		650
22	Arm bushing	Each	1	2200		22	Alternator rectifile changing		100
23	Arm bushing lower big	Each	1	2200		23	Anabond changing		5
24	Arm bushing lower small	Each	1	2200		24	Anabond GUM (Big) changing		5

25	Arm Lower	set	1	14850
26	Arm Upper	Set	1	7500
27	Axel lock	Each	1	250
28	Axel shaft	Each	1	12500
29	Axel shaft oil seal	Each	1	1450
30	Axel spacer	Each	1	1250
31	Axle	Set	1	12500
32	Axle Oil Seal Outer	No	1	1850
33	Axle Tube Oil Seal	No	1	1250
34	Back bumper	Each	1	18500
35	Back gear bearing	Each	1	850
36	Back glass	Each	1	8500
37	Back Light	No	1	5850
38	Back light Assy (Left)	Each	1	5850
39	Back light Assy (Right)	Each	1	5850
40	Back Light Bulb	No	1	25
41	ball joint	per piece	1	2950
42	Ball Joint Lower	Set	1	3200
43	Ball Joint Upper	Set	1	2950
44	Battery	No	1	7850
45	Battery (Amaron)	Each	1	7850
46	Battery (Bosch)	Each	1	7850
47	Battery box new making	Each	1	450
48	Battery cable -ive	Each	1	1250
49	Battery cable +ive	Each	1	1250
50	Battery terminal end	Each	1	125
51	Bear Box	Set	1	10

25	Anabond GUM (Small) changing	5
26	Arm Bush Lower changing	450
27	Arm Bush Upper changing	450
28	Arm bushing changing	450
29	Arm bushing lower big changing	450
30	Arm bushing lower small changing	450
31	Arm Lower changing	450
32	Arm Upper changing	450
33	Axel lock changing	50
34	Axel shaft changing	650
35	Axel shaft oil seal changing	450
36	Axel spacer changing	50
37	Axle changing	650
38	Axle oil seal changing	250
39	Axle Oil Seal Outer Labour Charge	250
40	Axle Tube Oil Seal Labour Charge	250
41	Back bumper Labour Charge	1500
42	Back gear bearing Labour Charge	100
43	Back glass Labour Charge	2000
44	Back light Assy (Left) Labour Charge	250
45	Back light Assy (Right) Labour Charge	250
46	Back Light Bulb Labour Charge	250
47	Back Light Labour Charge	250
48	ball joint Labour Charge	450
49	Ball Joint Lower Labour Charge	450
50	Ball Joint Upper Labour Charge	450
51	Battery box new making Labour Charge	100

52	Bearing 6202	Each	1	200
53	Bearing 6302	Each	1	200
54	Belt power string A/B	Each	1	650
55	Bendix pinion	Each	1	6850
56	Benjo washer	Each	1	5
57	Benzu Bolt	Each	1	25
58	Black tape	per piece	1	25
59	Brake Booster	No	1	18500
60	Brake Booster Assy	Each	1	18500
61	Brake Booster kit	Each	1	3850
62	Brake bucket	Each	1	350
63	Brake Bucket Kit	Set	1	350
64	Brake calliper lock	Each	1	650
65	Brake cam	Each	1	5
66	Brake cam Arm	Each	1	5
67	Brake cam Arm lock	Each	1	5
68	Brake cam bush	Each	1	5
69	brake disc	Each	1	12500
70	Brake flexible pipe front	Each	1	975
71	Brake fluid	Each	1	250
72	Brake fluid dot3	Each	1	450
73	Brake Hub Front	Set	1	2500
74	Brake Hub Rear	Set	1	2500
75	brake light bulb	per piece	1	25
76	Brake light switch	Each	1	1250
77	Brake lining	Each	1	6850
78	Brake lining back and front	Each	1	6850

52	Battery cable -ive Labour Charge	150
53	Battery cable +ive Labour Charge	150
54	Battery change Labour Charge	100
55	Battery terminal end Labour Charge	100
56	Bear Box Labour Charge	50
57	Bearing 6202 Labour Charge	100
58	Bearing 6302 Labour Charge	100
59	Belt power string A/B Labour Charge	350
60	Bendix pinion Labour Charge	100
61	Bendix pinion repairing & replacing	100
62	Benjo washer Labour Charge	25
63	Benzu Bolt Labour Charge	25
64	Black tape Labour Charge	5
65	Brake adjuster opening & refitting	5
66	Brake Booster Assy Labour Charge	1250
67	Brake Booster kit Labour Charge	100
68	Brake Booster Labour Charge	100
69	Brake Bucket Kit Labour Charge	100
70	Brake bucket Labour Charge	250
71	Brake cable changing	450
72	Brake calliper lock Labour Charge	150
73	Brake cam Arm Labour Charge	5
74	Brake cam Arm lock Labour Charge	5
75	Brake cam bush Labour Charge	5
76	Brake cam bush opening & fitting	5
77	Brake cam Labour Charge	5
78	Brake diafam opening & new service kit changing	5

79	Brake Oil	Lts	1	250
80	Brake Pad	Set	1	6850
81	Brake pad	Each	1	6850
82	Brake pipe (Rear)	Each	1	675
83	brake pipe bleasting	each	1	50
84	Brake servo	Each	1	50
85	Brake Shoe	Set	1	6850
86	Brake shoe	Each	1	6850
87	Brake shoe	Each	1	6850
88	Brake shoe lock with spring	Each	1	450
89	Brass blezzing	Each	1	50
90	Bulb 1016	Each	1	15
91	Bulb 1141	Each	1	15
92	Bulb 67	Each	1	15
93	Bumper indicator light assy	Each	1	250
94	bush stabilzer	per piece	1	585
95	Bypass filter	Each	1	5
96	C.V joint	per piece	1	8500
97	Cam shaft	Each	1	2500
98	Cam Shaft Bearing	Set	1	750
99	Cam shaft bush	Each	1	750
100	Cam shaft gear	Each	1	950
101	Carbon bush 12 v	Each	1	650
102	Carbon holder	Each	1	250
103	Carbon rocker 12v	Each	1	250
104	Carbon soldering	Each	1	200
105	Center Bolt	No	1	100

79	brake disc Labour Charge	450
80	Brake dise cutting	650
81	Brake drum cutting	650
82	Brake dual valve kit changing	5
83	Brake flexible pipe changing	250
84	Brake flexible pipe front Labour Charge	250
85	Brake fluid dot3 Labour Charge	100
86	Brake Hub Front Labour Charge	100
87	Brake Hub Rear Labour Charge	100
88	brake light bulb Labour Charge	100
89	Brake light switch Labour Charge	100
90	Brake lining back and front Labour Charge	350
91	Brake lining Labour Charge	350
92	Brake Oil Labour Charge	100
93	Brake Pad Labour Charge	250
94	Brake pipe (Rear) Labour Charge	250
95	brake pipe bleasting Labour Charge	50
96	Brake pipe changing	250
97	Brake pipe leakage repairing	50
98	Brake servicing 4 wheel changing	350
99	Brake servo Labour Charge	5
100	Brake servo repairing & servicing	5
101	Brake Shoe Labour Charge	350
102	Brake shoe lock with spring Labour Charge	350
103	Brass blezzing Labour Charge	50
104	Bulb 1016 Labour Charge	50
105	Bulb 1141 Labour Charge	50

106	Center lock	Each	1	2850
107	Center lock remote key	Each	1	5800
108	Check nut front	Each	1	250
109	Check nut lock	No	1	175
110	Clamp for pipe	Each	1	25
111	Clutch cylinder (lower)	Each	1	2250
112	Clutch cylinder (Upper)	Each	1	2850
113	Clutch cylinder Assy	Each	1	2250
114	Clutch cylinder kit	Each	1	650
115	Clutch Cylinder Lower	Set	1	2200
116	Clutch Cylinder Upper	Set	1	2850
117	Clutch kit	Each	1	650
118	Clutch kit box	Each	1	650
119	Clutch Plate	Set	1	9850
120	Clutch plate (Fan Type)	Each	1	5
121	Clutch plate (Round Type)	Each	1	9850
122	Clutch relese bearing	Each	1	4850
123	Clutch rod	Each	1	250
124	Connecting Bearing	Set	1	1750
125	Connecting bearing	Each	1	1750
126	Connecting bush	Each	1	750
127	Connecting rod	Each	1	3850
128	Connection Rod	Set	1	3850
129	Controlling cylinder Assy	Each	1	5
130	Controlling overhauling	Each	1	5

106	Bulb 67 Labour Charge	50
107	Bumper indicator light assy Labour Charge	150
108	bush stabilzer Labour Charge	150
109	Bypass filter Labour Charge	5
110	C.V joint Labour Charge	450
111	Cam Shaft Bearing Labour Charge	250
112	Cam shaft bush Labour Charge	250
113	Cam shaft gear Labour Charge	450
114	Cam shaft Labour Charge	250
115	Carbon bush 12 v Labour Charge	100
116	Carbon holder Labour Charge	100
117	Carbon rocker 12v Labour Charge	100
118	Carbon soldering Labour Charge	200
119	Center bearing changing	450
120	Center Bolt Labour Charge	450
121	Center lock Labour Charge	1250
122	Center lock remote key Labour Charge	1250
123	Centre bolt changing	450
124	Chain socket	5
	changing	
125	Check nut front Labour Charge	50
126	Clamp for pipe Labour Charge	50
127	Clutch cable changing	5
128	Clutch cylinder (lower) Labour Charge	350
129	Clutch cylinder (Upper) Labour Charge	450

131	Controlling pipe	Each	1	5
132	Controlling switch Assy	Each	1	5
133	Coolant	per litres	1	295
134	Crank Shaft	set	1	45000
135	Crank shaft	Each	1	45000
136	Crank shaft oil seal	Each	1	1500
137	Cross	Each	1	1650
138	Cross Bearing	set	1	1650
139	Cross bearing	Each	1	1650
140	Cross holder	Each	1	3250
141	Cross propeller shaft	Each	1	12800
142	Crown & Tail Assy	Set	1	85000
143	Crown Overhauling	Each	1	4500
144	Crown tail assy	Each	1	85000
145	CV Joint Assembly	set	1	25000
146	Cycle pin	Each	1	850
147	Dashboard polish	each	1	250
148	Dial wrench (6-32mm)	Set	1	1750
149	Diesel filter	Each	1	1250
150	distilled water	per litre	1	25
151	Door agrnish inner	Each	1	2850
152	Door agrnish outer	Each	1	2850
153	Door lock new making	Each	1	2500
154	Drag link kit	Each	1	5
155	Drain plug	Each	1	50

130	Clutch cylinder Assy Labour Charge	450
131	Clutch cylinder kit Labour Charge	350
132	Clutch kit box Labour Charge	20
133	Clutch kit Labour Charge	25
134	Clutch plate (Fan Type) Labour Charge	5
135	Clutch plate (Round Type) Labour Charge	6500
136	Clutch Plate Labour Charge	6500
137	Clutch relese bearing Labour Charge	100
138	Clutch rod Labour Charge	100
139	Coil Spring changing	650
140	Complete electricial line checking	3500
141	Connecting Bearing changing	1500
142	Connecting bush changing	750
143	Connecting rod changing	750
144	Controlling cylinder Assy changing	5
145	Controlling overhauling changing	5
146	Controlling pipe changing	5
147	Controlling switch Assy changing	5
148	Coolant Change	250
149	Crank shaft changing	1500
150	Crank shaft oil seal changing	1500
151	Cross Bearing changing	450
152	Cross bearing greasing changing	250
153	Cross change	450
154	Cross Coupling cutting by lath machine changing	1250

156	Dual brake valve Assy	Each	1	5
157	Dust Guard	Pcs	1	2500
158	Dust guard back and front	Set	1	6500
159	Dynamo bearing	Each	1	350
160	Dynamo rocker	Each	1	250
161	E/ paper	Each	1	25
162	EGR pipe	Each	1	750
163	Electric horn 2v	Each	1	1250
164	Electric welding	Each	1	200
165	Element Assy, Fuel	Each	1	250
166	Element kit spin on	Each	1	250
167	Element sub assy, Air	Each	1	250
168	EML life max oil	Each	1	450
169	Engine Bolt	each	1	3500
170	Engine head assy	each	1	48500
171	Engine head gasket	Each	1	5800
172	Engine mounting	Each	1	2200
173	Engine oil 15w40	ltr	1	425
174	Engine Oil Filter	No	1	650
175	Engine oil seal	each	1	2850
176	Engine pacing	Each	1	5500
177	Engine ring	Each	1	8500
178	Engine Twining	Each	1	500
179	Engine valve intake	each	1	2200
180	Exhaust manifold	Each	1	1500
181	Fan belt	Each	1	1250
182	Feed Pump	Set	1	1500
183	Feed pump Assy	Each	1	8500
184	Fender liner front left	Each	1	2500

155	Cross holder changing	450
156	Cross holder cutting and welding changing	1250
157	Cross propeller shaft changing	450
158	Crown & Tail Assy changing	2500
159	Crown Overhauling changing	2500
160	Crown tail assy changing	2500
161	CV Joint Assembly changing	650
162	CV joint Boot changing	100
163	CV Joint changing	650
164	CV joint oil seal changing	650
165	Cycle pin changing	250
166	Dashboard polish changing	5
167	denting and painting changing	65000
168	Dial wrench (6-32mm) changing	5
169	Diesel filter	250
	Changing	
170	distilled water changing	5
171	Door agrnish inner changing	100
172	Door agrnish outer changing	100
173	Door lock new making changing	250
174	Drag link kit changing	450
175	Drain plug changing	50
176	Driver shaft oil seal changing	650
177	Dual brake valve Assy changing	5
178	Dust guard back and front changing	450
179	Dust Guard changing	450
180	Dynamo bearing changing	100
181	Dynamo rocker changing	100
182	E/ paper changing	5

185	Fender liner front right	Each	1	2500
186	Fender liner rear left	Each	1	2500
187	Fender liner rear right	Each	1	2500
188	Flate washer	Each	1	5
189	Fly wheel	Each	1	6800
190	Fly wheel ring	Each	1	2850
191	Fog Light	Set	1	2500
192	foot mat	Set	1	3500
193	Front bumper	Each	1	18500
194	Front door inner clamel rubber	Each	1	3500
195	Front hub bearing inner	Each	1	6500
196	Front hub bearing outer	Each	1	750
197	Front Windshield glass	Each	1	24800
198	fuel and water separator	per piece	1	250
199	Fuel filter	Each	1	1250
200	Fuel injection overflow pipe	Each	1	250
201	Fuel injector nozzel	Each	1	4850
202	Fuel injector pipe	Each	1	450
203	fuel pipe	per piece	1	685
204	Fuel pump Assy	Each	1	85000
205	Fuel pump washer	Each	1	25
206	Fuel strainer A/B	Each	1	25
207	Fuel Supply Pump	Set	1	250
208	Full Engine Overhauling	Each	1	12500
209	Fuse	No	1	15
210	Fuse 10 Amp	Each	1	15
211	Fuse 15 Amp	Each	1	15
212	Fuse 20 Amp	Each	1	15

183	ECM scanned changing	2500
184	EGR pipe change	3500
185	Electric horn 2v changing	250
186	Electric welding changing	250
187	Electrical line checking and rectified changing	2500
188	Element Assy, Fuel changing	250
189	Element kit spin on changing	50
190	Element sub assy, Air changing	250
191	EML life max oil changing	250
192	Engine Bolt changing	50
193	Engine head assy changing	4500
194	Engine head gasket changing	4500
195	Engine mount changing	350
196	Engine oil changing	250
197	Engine Oil Changing with oil filter	250
198	Engine oil seal changing	1500
199	Engine over hauling changing	12500
200	Engine pacing changing	750
201	Engine ring changing	4500
202	Engine Twining changing	500
203	Engine valve changing and setting changing	1500
204	Engine valve intake changing	1500
205	Engine water pump changing	450
206	Exhaust manifold changing	350
207	Fan belt bearing changing	250
208	Fan belt changing	250
209	Feed pump assy changing	250
210	Feed Pump changing	250



213	Fuse 25 Amp	Each	1	25
214	Fuse 30 Amp	Each	1	25
215	Fuse 5 Amp	Each	1	15
216	Gas kit	Each	1	200
217	Gear box assembly	Each	1	125000
218	Gear box mounting	Each	1	2800
219	Gear box oil seal front	Each	1	1850
220	Gear box oil seal rear	Each	1	1850
221	Gear box packing	Each	1	250
222	Gear counter	Each	1	7800
223	Gear oil	per litre	1	475
224	Gear pinion	Each	1	3850
225	Gear pinion 2nd	Each	1	3850
226	Gear pinion shaft	Each	1	2850
227	Glow Plug	Set	1	1850
228	Glow plug	Each	1	1850
229	Grease	per kg	1	550
230	Grease gun	Each	1	2250
231	Half Engine Overhauling	Each	1	7500
232	Hand Brake Cable	Set	1	3700
233	Hand brake cable	Each	1	3700
234	Head Gasket	No	1	5850
235	Head light assembly	set	1	12500
236	Head light Assy (Left)	Each	1	12500
237	Head light Assy (Right)	Each	1	12500
238	Head Light Bulb	Set	1	150
239	Head light bulb	Each	1	150

211	Feed pump repairing changing	250
212	Fender liner front left changing	250
213	Fender liner front right changing	250
214	Fender liner rear left changing	250
215	Fender liner rear right changing	250
216	Flate washer changing	5
217	Fly wheel changing	2500
218	Fly wheel poolishing changing	1250
219	Fly wheel ring changing	2500
220	Fog Light changing	350
221	foot mat changing	250
222	Front bumper opening & fitting	1250
223	Front door inner clamel rubber changing	350
224	Front hub bearing inner changing	650
225	Front hub bearing outer changing	250
226	Front Windshield glass changing	3500
227	fuel and water separator changing	50
228	Fuel filter changing	250
229	Fuel injection overflow pipe changing	250
230	Fuel injection pump opening & fitting	4500
231	Fuel injector nozzel changing	1250
232	Fuel injector pipe changing	450
233	Fuel over flow pipe changing	450
234	fuel pipe changing	450
235	Fuel pump Assy changing	100
236	Fuel pump washer changing	100
237	Fuel strainer A/B changing	50

240	Head light bulb (Halogen)	Each	1	150
241	Head light cover	Each	1	50
242	Head light Set	Set	1	12500
243	Helper leaf Spring	Each	1	750
244	Horn and switch	set	1	450
245	Horn high	Each	1	1250
246	Horn low	Each	1	650
247	Horn relay	Each	1	675
248	horn switch	per piece	1	250
249	Hose pipe clamp	Each	1	45
250	Hour meter	Each	1	5
251	Hub Bearing Front Inner	Set	1	6500
252	Hub Bearing Front Outer	Set	1	750
253	Hub Check Nut	Set	1	150
254	Hub greasing (Front)	Each	1	650
255	Hub greasing (Rear)	Each	1	850
256	Hub Oil Seal	Set	1	750
257	Hub Splender	Set	1	25
258	Hubs bearing	per piece	1	6850
259	Hubs checknut	Each	1	285
260	Hubs checknut lock	Each	1	150
261	Hubs oil	Each	1	750
262	Hubs oil seal front	Each	1	750
263	Hubs oil seal rear	Each	1	750
264	Hydraulic filter	Each	1	5
265	Hydraulic jack (Heavy Duty)	Each	1	3250
266	Hydraulic jack (Light Duty)	Each	1	2850

238	Fuel Supply Pump changing	100
239	Fuel tank opening & fitting	1200
240	Fuel tank servicing changing	1500
241	Full Engine Overhauling	12500
242	Fuse 10 Amp changing	5
243	Fuse 15 Amp changing	5
244	Fuse 20 Amp changing	5
245	Fuse 25 Amp changing	5
246	Fuse 30 Amp changing	5
247	Fuse 5 Amp changing	5
248	Fuse changing	5
249	Gas kit changing	100
250	Gear box assembly change	4500
251	Gear Box mounting & dismounting changing	4500
252	Gear box mounting changing	350
253	Gear box oil seal front changing	250
254	Gear box oil seal rear changing	250
255	Gear Box Opening and fitting charges	12500
256	Gear box packing changing	500
257	Gear counter changing	650
258	Gear oil changing	250
259	Gear pinion 2nd changing	750
260	Gear pinion changing	750
261	Gear pinion shaft changing	650
262	Gear shaft changing	650
263	Gear shaft polishing changing	250
264	Glow plug changing	350

267	Hydraulic jack oil seal (Set of 12 pcs)	Each	1	200
268	Hydraulic oil	per litre	1	495
269	Hydraulic pipe	Each	1	5
270	Hydraulic pump & pipe line new fitting	Each	1	5
271	Hydraulic tank servicing	Each	1	5
272	Ignition switch	Each	1	1450
273	Indicator light	Each	1	750
274	Inner door lock ( R )	Each	1	2850
275	Inner door lock(L)	Each	1	2850
276	Intake manifold	Each	1	1850
277	Intake valve	Set	1	2200
278	Jack lever	Each	1	1500
279	Key Lock Set	Set	1	6850
280	Kilimeter cable	Each	1	5
281	Kimpin Bearing	Set	1	5
282	King Pin Bearing	Set	1	5
283	King pin bush machinery cutting bothr side	Each	1	5
284	King pin kit	Set	1	5
285	King pin overhauling bothside	Each	1	5
286	Link assy front	Each	1	3850
287	Link assy rear	Each	1	3850
288	Link Bush Front	Pcs	1	250
289	Link Bush Rear	Pcs	1	250
290	Link Rod	Pcs	1	2850
291	Link rod Front	Each	1	2850
292	Lock pati	Each	1	25
293	Looking glass ( R )	Each	1	4850

265	Grease changing	350
266	Grease gun changing	5
267	Half Engine Overhauling changing	8500
268	Hand Brake Cable changing	650
269	Head Gasket changing	7500
270	Head light assembly changing	250
271	Head light Assy (Left) changing	250
272	Head light Assy (Right) changing	250
273	Head Light Bulb changing	100
274	Head light bulb fitting changing	100
275	Head light cover changing	50
276	Head light Set changing	250
277	Helper leaf Spring changing	100
278	horn and switch fitting changing	250
279	Horn fitting	250
280	Horn high changing	250
281	Horn low changing	250
282	Horn relay fitting	200
283	horn switch changing	200
284	Hose pipe clamp changing	150
285	Hour meter changing	5
286	Hub Bearing Front Inner changing	650
287	Hub Bearing Front Outer changing	250
288	Hub Check Nut changing	100
289	Hub greasing (Front) changing	650
290	Hub greasing (Rear) changing	650
291	Hub Oil Seal changing	100

294	Looking glass (L)	Each	1	4850
295	Lower bolt joine	Each	1	3250
296	LT wire 5mm	Each	1	50
297	LT wire 6mm	Each	1	65
298	LT wire 8mm	Each	1	85
299	Main Bearing	Set	1	1850
300	Main bearing	Each	1	1850
301	Main Bearing Oil Seal	Set	1	1850
302	Main leaf spring ( R)	Each	1	4850
303	Main leaf spring (F)	Each	1	5
304	Master cylinder	Each	1	8500
305	Master Cylinder Kit	Set	1	2950
306	Master cylinder kit	Each	1	2950
307	Mobile	per litre	1	425
308	Mobile (15w40)	per litre	1	425
309	Mobile Filter	No	1	1250
310	nozzle pipe	per piece	1	250
311	Number Plate	each	1	500
312	Nut & Bolts	Each	1	25
313	Nuts and Bolts(4 Wheel)	Set	1	675
314	Oil filter	Ltr	1	1250
315	Oil seal	Each	1	250
316	Oil Supply Pump	No	1	250
317	Open end wrench set (6-32mm)	Set	1	1750

292	Hub Splender changing		100
293	hubs bearing changing		100
294	Hubs checknut changing		100
295	Hubs checknut lock changing		100
296	Hubs oil changing		100
297	Hubs oil seal front changing		100
298	Hubs oil seal rear changing		100
299	Hydraulic control valve opening servicing & refitting		5
300	Hydraulic filter changing		5
301	Hydraulic hose pipe changing		5
302	Hydraulic jack (Heavy Duty) changing		5
303	Hydraulic jack (Light Duty) changing		5
304	Hydraulic jack oil seal (Set of 12 pcs) changing		250
305	Hydraulic oil changing		50
306	Hydraulic pipe changing		50
307	Hydraulic pipe leakage repairing		50
308	Hydraulic pump & pipe line new fitting		50
309	Hydraulic tank servicing		50
310	Ignition switch changing		650
311	Indicator light changing		75
312	Inner door lock (R ) changing		250
313	Inner door lock(L) changing		250
314	Inner wheel bearing changing front		650
315	Inner wheel bearing changing rear		650

318	Pilot bearing	Each	1	1450
319	Piston	set	1	12500
320	Piston	Each	1	12500
321	Piston Ring	No	1	8950
322	Plastic lock	Each	1	250
323	Plastic tape	Each	1	25
324	Plastic washer	Each	1	25
325	Power steering bearing	Each	1	250
326	Power Steering Belt	No	1	250
327	Power steering box Assy	Each	1	63000
328	Power Steering Oil	ltrs	1	450
329	Power steering overhauling	Each	1	2500
330	Power steering pipe	Each	1	250
331	Pressure Plate	Set	1	9500
332	Pressure plate	Each	1	9500
333	Propeller shaft	Each	1	18500
334	Propeller shaft bolt	Each	1	65
335	PTO bracket new making	Each	1	5
336	PTO bracket removal	Each	1	5
337	PVC tape	Each	1	25
338	Radiator assy	Each	1	22500
339	Radiator cap	Each	1	250
340	Radiator coolant	each	1	295
341	radiator hose pipe lower	Each	1	1250
342	Radiator hose pipe upper	Each	1	1250
343	Rain guard	Set	1	3500

316	Inner wheel bearing oil seal changing front	100
317	Inner wheel bearing oil seal changing rear	100
318	Intake manifold changing	1500
319	Intake valve changing	1500
320	Jack lever changing	5
321	Key Lock Set changing	750
322	Kilimeter cable changing	100
323	Kimpin Bearing changing	5
324	King Pin Bearing changing	5
325	King pin bush machinery cutting both side changing	5
326	King pin greasing changing	5
327	King pin kit changing	5
328	King pin overhauling bothside changing	5
329	KM cable changing & refitting	5
330	Knuckle arm fitting	450
331	Link assy front changing	450
332	Link assy rear changing	450
333	Link Bush Front changing	250
334	Link Bush Rear changing	250
335	Link rod changing	250
336	Lock pati changing	5
337	Looking glass ( R ) changing	350
338	Looking glass (L) changing	350
339	Lower bolt joint changing	450
340	Lower clutch kit changing	350
341	Lower Radiator hose pipe changing	150

344	Rear Axle Corn	Set	1	750
345	Rear bush adjust	Each	1	25
346	Rear center bolt	Each	1	100
347	Rear Differential Assy	No	1	125000
348	Rear hub bearing inner	Each	1	6850
349	Rear hub bearing outer	Each	1	750
350	Rear second leap	Each	1	3850
351	Rear shackle Assy	Each	1	1450
352	Rear shackle pin	Each	1	650
353	rear shocker	Each	1	8500
354	Rear Spring cushion plastic plate	Each	1	250
355	Rear tail board railing	Each	1	50
356	recovery van hiring charges	Per Km	1	1000
357	Rectifier	Each	1	2850
358	Red paper	Each	1	25
359	Relay 2 pin 12v	Each	1	50
360	Relay 3 pin 12v	Each	1	50
361	Relay 4 pin 12v	Each	1	450
362	Relay 5 pin 12v	Each	1	675
363	Release Bearing	Set	1	4850
364	Relese bearing fork	Each	1	975
365	Relese bearing lock	Each	1	250
366	Rocker Arm	Each	1	650
367	Rocker shaft	Each	1	950
368	Rotor coil	Each	1	250
369	Screw	Each	1	10
370	seat cover	Set	1	12500

342	LT wire 5mm changing	5
343	LT wire 6mm changing	5
344	LT wire 8mm changing	5
345	Main Bearing changing	1200
346	Main Bearing Oil Seal changing	1200
347	Main leaf spring ( R) changing	450
348	Main leaf spring (F) changing	5
349	Master cylinder changing	650
350	Master cylinder kit changing	450
351	Master cylinder repairing	450
352	Mobile (15w40) changing	250
353	Mobile changing	250
354	mobile filter changing	100
355	nozzle pipe changing	350
356	Number Plate change	100
357	Number Plate new making	500
358	Nut & Bolts changing	25
359	Nuts and Bolts(4 Wheel) changing	350
360	Oil filter changing	100
361	Oil Seal changing	100
362	Oil Supply Pump changing	50
363	Open end wrench set (6-32mm) changing	5
364	Opening and fitting of tyres	350
365	Opening and fitting tear spring	50
366	Outer wheel bearing changing front	250
367	Outer wheel bearing changing rear	250
368	Outer wheel bearing oil seal changing Front	100

371	Seat new making	Set	1	2200
372	Self Armaure	Set	1	5600
373	Self Armerture 12v	Each	1	5600
374	Self bush 12V	Each	1	50
375	Self Carbon	Set	1	1650
376	Self carbon 12V	Each	1	650
377	Self Carnon Rocker	Set	1	2500
378	Self field coil 12v	Each	1	1500
379	Self housing	Each	1	1500
380	Self Overhauling	Each	1	650
381	Self Plunge	No	1	200
382	Self rewinding	Each	1	50
383	Self top cover	Each	1	200
384	Shaft yoke & Teeth	No	1	12500
385	Shakle Pin Assy	set	1	675
386	Shock absorber	Each	1	8500
387	Shock Absorber Bush	set	1	250
388	Shock Absover Front	Set	1	9750
389	Shock Absover Rear	Set	1	8500
390	shocker bush	Each	1	250
391	Shocker Front	Each	1	9750
392	Shocker nut bolt	Each	1	45
393	Side Light	No	1	250
394	Side Light Bulb	No	1	25
395	Side Light Clamp	Set	1	25
396	Silencer box	Each	1	2500
397	Silencer pipe	Each	1	2950

369	Outer wheel bearing oil seal changing rear	100
370	Overhual starter and change carbon	650
371	Pilot bearing changing	250
372	Piston changing	7500
373	Piston Ring changing	7500
374	Plastic lock changing	250
375	Plastic tape changing	5
376	Plastic washer changing	5
377	Power steering bearing changing	50
378	Power steering belt changing	350
379	Power steering box Assy changing	2500
380	Power Steering Oil changing	250
381	Power steering overhauling changing	2500
382	Power steering pipe changing	450
383	Power steering pump change	650
384	Pressure plate changing	6500
385	Pressure water pump removal, refitting and gasket changing	100
386	Propeller shaft bolt changing	150
387	Propeller shaft changing	750
388	Propeller shaft york changing	450
389	PTO bracket new making changing	5
390	PTO bracket removal changing	5
391	PTO pump servicing changing	5
392	PVC tape changing	5
393	Quarter pin changing	5
394	Radiator assy changing	1200
395	Radiator cap changing	50

398	Socket (6mm-32mm)	Set	1	5850
399	Solonoid switch 12v	Each	1	1250
400	Spark Plug	Set	1	5
401	Speedo meter Assy	Each	1	12500
402	Speedo meter cable	Each	1	450
403	Speedo meter pinion	Each	1	2200
404	Spring 2nd leaf (F)	Each	1	5
405	Spring 2nd leaf (R)	Each	1	3500
406	Spring 3rd leaf (F)	Each	1	5
407	Spring 3rd leaf ®	Each	1	2850
408	Spring 4th leaf (F)	Each	1	5
409	Spring 4th leaf ®	Each	1	2500
410	Spring 5th leaf (F)	Each	1	5
411	Spring 5th leaf ®	Each	1	2200
412	Spring 6th leaf (F)	Each	1	5
413	Spring 6th leaf ®	Each	1	1850
414	Spring buffer mounting	Each	1	1650
415	Spring bush	Each	1	250
416	Spring Bush Metal	No	1	1250
417	Spring Clamp	No	1	450
418	Spring cycle pin	Each	1	850
419	Spring griping washer	Each	1	100
420	Spring hanger	Each	1	2200
421	Spring Main -2nd	No	1	500
422	Spring Main Rear	No	1	560
423	Spring Main-3rd	No	1	511
424	Spring Main-4th	No	1	500

396	Radiator coolant changing	200
397	radiator hose pipe lower changing	250
398	Radiator hose pipe upper changing	150
399	Radiator opening and fitting	1200
400	Radiator repairing	2850
401	Radiator Servicing	2850
402	Rain guard changing	250
403	Rain guard fitting	250
404	Rear Axle Corn changing	100
405	Rear bumpeer open fitting and welding	1250
406	Rear bush adjust changing	50
407	Rear center bolt changing	450
408	Rear Differential Assy changing	3500
409	Rear hub bearing inner changing	100
410	Rear hub bearing outer changing	100
411	Rear hydraulic jack opening & new seal kit fitting	250
412	Rear second leap changing	100
413	Rear shackle assy change	250
414	Rear shackle pin changing	250
415	rear shocker changing	150
416	Rear spring opening and pad changing	650
417	Rear tail board railing changing	500
418	Rectifier changing	100
419	Red paper changing	5
420	Relay 2 pin 12v changing	5
421	Relay 3 pin 12v changing	5
422	Relay 4 pin 12v changing	250



425	Spring Main-5th	No	1	500
426	Spring pin	Each	1	650
427	Spring plate	Each	1	350
428	Spring shackle	Each	1	1250
429	Spring washer	Each	1	25
430	Stabilizer Bar Bush - Front	No	1	275
431	Stabilizer link rod	Each	1	2500
432	Starter carbon	Each	1	200
433	Starter coil	Each	1	200
434	Starter relay 12v	Each	1	250
435	Steering adjuster bolt assy	Each	1	25
436	Steering box oil seal	Each	1	550
437	Steering box overhauling	Each	1	2500
438	Steering column (Inner)	Each	1	250
439	Steering column (Outer)	Each	1	250
440	Steering cross	Each	1	2500
441	Steering cross bearing	Each	1	2500
442	Steering Damper	Set	1	9850
443	Steering rack end	Each	1	2500
444	Steering wheel cover	No	1	650
445	Suspension arm bush lower small	Each	1	2100
446	Suspension arm bush upper small	Each	1	1800
447	Synchronizer circlip lock	Each	1	250
448	Synchronizer hub	Each	1	2800
449	Synchronizer lock	Each	1	650
450	Synchronizer ring	Each	1	2200
451	Synchronizer sheeve	Each	1	2950
452	Synchronizer sheeve inddle bearing	Each	1	1600
453	Tail Inner Bearing	Set	1	5850
454	Tail Oil Seal	Set	1	1450

423	Relay 5 pin 12v changing	250
424	Release bearing changing	1250
425	Release bearing fork changing	200
426	Release bearing lock changing	100
427	Removing & Fitting of spring assy	650
428	Resoling of tyres	2850
429	Rocker Arm changing	350
430	Rocker shaft changing	350
431	Rotor coil changing	100
432	Screw changing	5
433	Seal kit changing	100
434	seat cover changing	1200
435	Seat new making changing	1850
436	Self Armaure changing	100
437	Self Armerture 12v changing	100
438	Self Bush changing	50
439	Self carbon changing	100
440	Self Carnon Rocker changing	100
441	Self field coil 12v changing	100
442	Self housing changing	100
443	Self Overhauling changing	650
444	Self Plunge changing	50
445	Self rewinding changing	50
446	Self starter overhauling changing	650
447	Self top cover changing	100
448	Shaft yoke & Teeth changing	850
449	Shakle Pin Assy changing	250
450	Shock Absorber Bush changing	150
451	Shock absorber changing	250
452	Shock Absover Front changing	1250

455	Tail Outer Bearing	Set	1	4850
456	Tail pinion bearing inner	Each	1	5850
457	Tail pinion bearing outer	Each	1	4850
458	Tail pinion chechnut washer	Each	1	100
459	Tail pinion checknut	Each	1	250
460	Tail Pinion oil seal	piece	1	1450
461	Tappid cover packing	Each	1	1500
462	Tempering spring	Each	1	1250
463	Threading tape	Each	1	25
464	Thrust washer	Each	1	250
465	Tie clip	Each	1	25
466	Tie rod end	Each	1	2250
467	Tie Rod End-Big	Set	1	2250
468	Tie Rod End-Small	Set	1	2250
469	Tie rod kit	Each	1	50
470	Timing belt	Each	1	4500
471	Timing cover front	Each	1	2500
472	Timing cover gear	Each	1	1500
473	Timing cover oil seal	Each	1	1250
474	Timing pinion chain and adjuster kit set	set	1	250
475	Top shaft bearing	Each	1	3850
476	Transmission half over hauling	Each	1	7500
477	Transmission over hauling	Each	1	15000
478	U bolt front	Each	1	5
479	U bolt nut	Each	1	5
480	U bolt plate	Each	1	5
481	U bolt rear	Each	1	450
482	U bolt rear	Each	1	450
483	U-Bolt	No	1	5

453	Shock Absover Rear changing	250
454	shocker bush changing	250
455	Shocker Front changing	1250
456	Shocker nut bolt changing	250
457	Side door glass changing	1500
458	Side Light Bulb changing	100
459	Side Light changing	100
460	Side Light Clamp changing	100
461	Silencer box changing	1250
462	Silencer pipe changing	1250
463	Socket (6mm-32mm) changing	5
464	Solonoid switch 12v changing	100
465	Spark Plug changing	5
466	Speedo meter Assy changing	550
467	Speedo meter cable changing	100
468	Speedo meter pinion changing	250
469	Spring 2nd leaf (F) changing	5
470	Spring 2nd leaf (R) changing	100
471	Spring 3rd leaf (F) changing	5
472	Spring 3rd leaf ® changing	100
473	Spring 4th leaf (F) changing	5
474	Spring 4th leaf ® changing	100
475	Spring 5th leaf (F) changing	5
476	Spring 5th leaf ® changing	100
477	Spring 6th leaf (F) changing	5
478	Spring 6th leaf ® changing	100
479	Spring buffer mounting changing	350
480	Spring bush changing	250
481	Spring Bush Metal Labour Charge	450

484	UJ cross	Each	1	2450
485	Upper bolt joint	Each	1	2200
486	vacuum nozzle pipe	per piece	1	100
487	Vacuum pipe	Each	1	100
488	Valve guide	Each	1	1200
489	Valve key	Each	1	150
490	valve oil seal	each	1	950
491	Valve seal	Each	1	250
492	Valve spring	Each	1	200
493	Valve washer	Each	1	50
494	washer hat	Each	1	200
495	Water pump	No	1	4850
496	water pump Assy	Each	1	4850
497	Wheel alignment	Each	1	550
498	Wheel Bearing	Set	1	750
499	Wheel bearing inner front	Each	1	6500
500	Wheel bearing inner rear	Each	1	6850
501	Wheel bearing oil seal inner front	Each	1	950
502	Wheel bearing oil seal inner rear	Each	1	1250
503	Wheel bearing outer front	Each	1	750
504	Wheel bearing outer rear	Each	1	750
505	Wheel bolt	Each	1	650
506	Wheel cylinder	Each	1	3500
507	Wheel Cylinder Assy	Set	1	3500
508	Wheel cylinder bucket	Each	1	650
509	wheel Drum	Each	1	14500
510	Wheel nut	Each	1	250

482	Spring Changing	450
483	Spring clam changing	250
484	spring clam welding	150
485	Spring cycle pin Labour Charge	250
486	Spring Greeasing Labour Charge	100
487	Spring griping washer Labour Charge	250
488	Spring hanger changing	550
489	Spring Main -2nd. Labour Charge	100
490	Spring Main Rear Labour Charge	100
491	Spring Main-3rd Labour Charge	100
492	Spring Main-4th Labour Charge	100
493	Spring Main-5th Labour Charge	100
494	Spring opening and fitting charges	450
495	Spring pad changing	250
496	Spring pin bush changing	150
497	Spring pin Labour Charge	200
498	Spring plate Labour Charge	100
499	Spring shackle Labour Charge	250
500	Spring Shackle pin changing	200
501	Spring washer Labour Charge	150
502	Stabilizer Bar Bush - Front Labour Charge	150
503	Stabilizer bush changing	150
504	Stabilizer link assy changing	250
505	Stabilizer link rod Labour Charge	250
506	Starter coil Labour Charge	100
507	Starter relay 12v Labour Charge	100

511	Wheel wrench	Each	1	2500
512	Wind shield replacing	Each	1	4500
513	Window glass	Each	1	4850
514	Wiper Arm	Each	1	1250
515	Wiper Blade	Set	1	250
516	Wiper blade	Each	1	250
517	Wiper blade Assy	Each	1	250
518	Wiper motor	Each	1	12850
519	Wiper motor Assy	Each	1	12850
520	Wiring clip	Each	1	5
521	Zip cock	Each	1	25

508	Steering adjuster bolt assy Labour Charge	50
509	Steering box kit changing	1500
510	Steering box oil seal changing	250
511	Steering box oil seal Labour Charge	150
512	Steering box overhauling Labour Charge	2500
513	Steering column (Inner) Labour Charge	50
514	Steering column (Outer) Labour Charge	50
515	Steering Column changing inner	50
516	Steering Column changing outer	50
517	Steering cross bearing changing	650
518	Steering cross changing	650
519	Steering Damper Labour Charge	450
520	Steering rack changing	5
521	Steering Rack end assy (Link)changing	5
522	Steering rack end changing	5
523	Steering wheel cover Labour Charge	100
524	Steering wheel opening & refitting	350
525	Suspension arm bush lower small changing	450
526	Suspension arm bush upper small changing	450
527	suspension arm changing	450
528	Sycronizer circlip lock changing	100
529	Sycronizer hub changing	100

530	Sycronizer lock changing	100
531	Sycronizer ring changing	100
532	Sycronizer sheeve changing	100
533	Sycronizer sheeve inddle bearing changing	100
534	Tail Inner Bearing changing	350
535	Tail Oil Seal changing	650
536	Tail Outer Bearing changing	650
537	Tail pinion bearing inner changing	1500
538	Tail pinion bearing outer changing	650
539	Tail pinion chechnut washer changing	100
540	Tail pinion checknut changing	100
541	Tail pinion oil seal changing	450
542	Tail Pinion oil seal changing	450
543	Tailgate Repairing	2500
544	Tappet adjustment	650
545	Tappid cover packing changing	500
546	Tempering spring change	1200
547	Threading tape changing	5
548	Thrust washer changing	100
549	Tie clip changing	5
550	Tie rod end changing	450
551	Tie Rod End-Big changing	450
552	Tie Rod End-Small changing	450
553	Tie rod kit changing	100
554	Timing belt changing	1200
555	Timing cover front changing	1200
556	Timing cover gear changing	1500
557	Timing cover oil seal changing	1500

558	Timing pinion chain and adjuster kit set changing	250
559	Top shaft bearing changing	250
560	Transmission half over hauling changing	12000
561	Transmission over hauling changing	18500
562	Tyre changing	350
563	Tyre opening and drum change	350
564	U bolt changing	250
565	U bolt front changing	5
566	U bolt nut changing	45
567	U bolt plate changing	250
568	U bolt rear changing	250
569	UJ cross changing	450
570	Upper bolt joint changing	450
571	Upper clutch kit changing	350
572	Upper Radiator hose pipe changing	250
573	Vaccum pipe changing	25
574	vacuum nozzle pipe changing	25
575	Vacuum pipe changing	50
576	Vacuum pipe socket changing	25
577	Valve guide changing	1500
578	Valve key changing	100
579	Valve O ring changing	100
580	valve oil seal changing	450
581	Valve seal changing	250
582	Valve spring changing	250
583	Valve washer changing	100
584	Vane pump changing	650

585	washer hat changing	50
586	Water filter changing	50
587	Water level indicator pipe changing	50
588	water pump Assy changing	1500
589	Water pump assy servicing	250
590	Water pump changing	1500
591	Water pump opening and fitting	1500
592	Water separator servicing	5
593	Welding Labour Charge	250
594	Wheel Alignment Labour Charge	450
595	Wheel Bearing changing	650
596	Wheel bearing inner front changing	650
597	Wheel bearing inner rear changing	650
598	Wheel bearing oil seal inner front changing	100
599	Wheel bearing oil seal inner rear changing	100
600	Wheel bearing outer front changing	100
601	Wheel bearing outer rear changing	100
602	Wheel bolt change	250
603	Wheel Cylinder Assy changing	450
604	Wheel cylinder bucket changing	450
605	Wheel cylinder changing	450
606	wheel Drum changing	450
607	Wheel nut changing	450
608	Wheel wrench changing	5
609	Whole body greasing Labour Charge	550
610	Wind shelid glass fitting Labour Charge	4500

611	Wind shield replacing Labour Charge	4500
612	Window glass changing	750
613	Wiper alignment Labour Charge	500
614	Wiper arm changing	100
615	Wiper blade Assy changing	100
616	Wiper blade changing	100
617	Wiper motor Assy changing	350
618	Wiper motor changing	350
619	Wiper motor repairing	1500
620	Wiring clip changing	5