

TATA Xenon Hilux								
Spare parts						Labour charge		
	Description of Item (2)	Unit	Qty	Eastern Automobile Workshop			Description of Item (2)	Eastern Automobile Workshop
1	A/C filter	per piece	1	1900		1	A/C filter changing	50
2	AC Belt	Pcs	1	1250		2	AC Belt changing	120
3	Accelerator cable	Each	1	420		3	AC gas refilling labour charge	2500
4	Accelerator cable assy	Each	1	420		4	Accelerator cable assy changing	20
5	Air filter	Each	1	2100		5	Accelerator cable changing	20
6	Air filter hose pipe	Each	1	430		6	Air cleaner filter changing	50
7	Alternator Assy	Each	1	14300		7	Air compressor leakage repairing	5
8	Alternator carbon bush	Each	1	600		8	Air Element changing	50
9	Alternator cut out	Each	1	6400		9	Air filter changing	50
10	Alternator Fan belt pully bearing	Each	1	550		10	Air filter hose pipe changing	25
11	Alternator overhauling	Each	1	450		11	Air filter inside changing	25
12	Alternator rectifile	Each	1	1450		12	Air filter outside changing	25
13	Anabond GUM (Big)	Each	1	90		13	Air filter servicing	50
14	Anabond GUM (Small)	Each	1	60		14	Air tank opening & refitting	5
							Air unloader opening & new service kit fitting changing	5
15	Arm Bush Lower	Set	1	650		15	Alternator Assy changing	450
16	Arm Bush Upper	Set	1	650		16	Alternator carbon bush changing	100
17	Arm bushing	Each	1	450		17	Alternator cut out changing	100
18	Arm bushing lower big	Each	1	820			Alternator Fan belt pully bearing changing	150
19	Arm bushing lower small	Each	1	820		19	Alternator magnet pully changing	100
20	Arm Lower	set	1	8800		20	Alternator overhauling changing	650
21	Arm Upper	Set	1	6800		21	Alternator rectifile changing	120
22	Axel lock	Each	1	80		22	Anabond changing	20
23	Axel shaft	Each	1	3800		23		

24	Axel shaft oil seal	Each	1	420
25	Axel spacer	Each	1	220
26	Axle	Set	1	5500
27	Axle Oil Seal Outer	No	1	280
28	Axle Tube Oil Seal	No	1	220
29	Back bumper	Each	1	12500
30	Back gear bearing	Each	1	420
31	Back glass	Each	1	2400
32	Back light Assy (Left)	Each	1	2100
33	Back light Assy (Right)	Each	1	2100
34	Back Light Bulb	No	1	20
35	ball joint	per piece	1	850
36	Ball Joint Lower	Set	1	1200
37	Ball Joint Upper	Set	1	1200
38	Battery (Amaron)	Each	1	8500
39	Battery (Bosch)	Each	1	7800
40	Battery box new making	Each	1	550
41	Battery cable -ive	Each	1	320
42	Battery cable +ive	Each	1	320
43	Battery terminal end	Each	1	80
44	Bearing 6202	Each	1	220
45	Bearing 6302	Each	1	220
46	Bendix pinion	Each	1	1230
47	Benjo washer	Each	1	5
48	Benzu Bolt	Each	1	150
49	Black tape	per piece	1	20
50	Brake Booster	No	1	4800

24	Anabond GUM (Big) changing	5
25	Anabond GUM (Small) changing	5
26	Arm Bush Lower changing	300
27	Arm Bush Upper changing	300
28	Arm bushing changing	650
29	Arm bushing lower big changing	300
30	Arm bushing lower small changing	200
31	Arm Lower changing	350
32	Arm Upper changing	300
33	Axel lock changing	80
34	Axel shaft changing	350
35	Axel shaft oil seal changing	200
36	Axel spacer changing	50
37	Axle changing	200
38	Axle oil seal changing	300
39	Axle Oil Seal Outer Labour Charge	150
40	Axle Tube Oil Seal Labour Charge	150
41	Back bumper Labour Charge	500
42	Back gear bearing Labour Charge	25
43	Back glass Labour Charge	500
44	Back light Assy (Left) Labour Charge	80
45	Back light Assy (Right) Labour Charge	80
46	Back Light Bulb Labour Charge	80
47	Back Light Labour Charge	100
48	ball joint Labour Charge	300
49	Ball Joint Lower Labour Charge	300
50	Ball Joint Upper Labour Charge	300

51	Brake Booster Assy	Each	1	9300
52	Brake Booster kit	Each	1	230
53	Brake bucket	Each	1	150
54	Brake Bucket Kit	Set	1	150
55	Brake calliper lock	Each	1	120
56	brake disc	Each	1	2750
57	Brake flexible pipe front	Each	1	230
58	Brake fluid	Each	1	120
59	Brake fluid dot3	Each	1	240
60	brake light bulb	per piece	1	15
61	Brake light switch	Each	1	420
62	Brake Oil	Lts	1	230
63	Brake Pad	Set	1	2850
64	Brake pad	Each	1	700
65	Brake pipe (Rear)	Each	1	230
66	brake pipe bleasting	each	1	100
67	Brake Shoe	Set	1	3800
68	Brake shoe	Each	1	950
69	Brake shoe lock with spring	Each	1	260
70	Brass blezzing	Each	1	120
71	Bulb 1016	Each	1	20
72	Bulb 1141	Each	1	15
73	Bulb 67	Each	1	15
74	Bumper indicator light assy	Each	1	450
75	bush stabilzer	per piece	1	250
76	C.V joint	per piece	1	4700
77	Cam shaft	Each	1	3400

51	Battery box new making Labour Charge	420
52	Battery cable -ive Labour Charge	50
53	Battery cable +ive Labour Charge	50
54	Battery change Labour Charge	50
55	Battery terminal end Labour Charge	80
56	Bear Box Labour Charge	5
57	Bearing 6202 Labour Charge	30
58	Bearing 6302 Labour Charge	30
59	Belt power string A/B Labour Charge	50
60	Bendix pinion Labour Charge	600
61	Bendix pinion repairing & replacing	600
62	Benjo washer Labour Charge	20
63	Benzu Bolt Labour Charge	30
64	Black tape Labour Charge	10
65	Brake adjuster opening & refitting	120
66	Brake Booster Assy Labour Charge	350
67	Brake Booster kit Labour Charge	300
68	Brake Booster Labour Charge	300
69	Brake Bucket Kit Labour Charge	150
70	Brake bucket Labour Charge	150
71	Brake cable changing	150
72	Brake calliper lock Labour Charge	150
73	Brake cam Arm Labour Charge	5
74	Brake cam Arm lock Labour Charge	5
75	Brake cam bush Labour Charge	5
76	Brake cam bush opening & fitting	5
77	Brake cam Labour Charge	5

78	Cam Shaft Bearing	Set	1	230
79	Cam shaft bush	Each	1	400
80	Cam shaft gear	Each	1	220
81	Carbon bush 12 v	Each	1	220
82	Carbon holder	Each	1	1200
83	Carbon rocker 12v	Each	1	1220
84	Carbon soldering	Each	1	100
85	Center Bolt	No	1	80
86	Center lock	Each	1	500
87	Center lock remote key	Each	1	2500
88	Check nut front	Each	1	150
89	Check nut lock	No	1	120
90	Clamp for pipe	Each	1	30
91	Clutch cylinder (lower)	Each	1	1600
92	Clutch cylinder (Upper)	Each	1	2100
93	Clutch cylinder kit	Each	1	350
94	Clutch Cylinder Lower	Set	1	1600
95	Clutch Cylinder Upper	Set	1	2100
96	Clutch kit	Each	1	120
97	Clutch kit box	Each	1	100
98	Clutch Plate	Set	1	4800
99	Clutch relese bearing	Each	1	1280
100	Clutch rod	Each	1	20
101	Connecting Bearing	Set	1	1400
102	Connecting bearing	Each	1	175
103	Connecting bush	Each	1	420

78	Brake diafam opening & new service kit changing	5
79	brake disc Labour Charge	350
80	Brake dise cutting	600
81	Brake drum cutting	650
82	Brake dual valve kit changing	5
83	Brake flexible pipe changing	120
84	Brake flexible pipe front Labour Charge	100
85	Brake fluid dot3 Labour Charge	20
86	Brake Hub Front Labour Charge	20
87	Brake Hub Rear Labour Charge	20
88	brake light bulb Labour Charge	80
89	Brake light switch Labour Charge	80
90	Brake lining back and front Labour Charge	20
91	Brake lining Labour Charge	20
92	Brake Oil Labour Charge	20
93	Brake Pad Labour Charge	100
94	Brake pipe (Rear) Labour Charge	150
95	brake pipe bleasting Labour Charge	120
96	Brake pipe changing	120
97	Brake pipe leakage repairing	120
98	Brake servicing 4 wheel changing	100
99	Brake servo Labour Charge	100
100	Brake servo repairing & servicing	250
101	Brake Shoe Labour Charge	320
102	Brake shoe lock with spring Labour Charge	150
103	Brass blezzing Labour Charge	220

104	Connecting rod	Each	1	525
105	Connection Rod	Set	1	2100
106	Coolant	per litres	1	280
107	Crank Shaft	set	1	19300
108	Crank shaft oil seal	Each	1	1800
109	Cross Bearing	set	1	700
110	Cross bearing	Each	1	700
111	Cross holder	Each	1	800
112	Cross propeller shaft	Each	1	3150
113	Crown & Tail Assy	Set	1	16300
114	Crown Overhauling	Each	1	1500
115	CV Joint Assembly	set	1	4300
116	Cycle pin	Each	1	220
117	Dashboard polish	each	1	250
118	Dial wrench (6-32mm)	Set	1	1250
119	Diesel filter	Each	1	1800
120	distilled water	per litre	1	25
121	Door agrnish inner	Each	1	250
122	Door agrnish outer	Each	1	250
123	Door lock new making	Each	1	250
124	Drain plug	Each	1	80
125	Dust Guard	Pcs	1	450
126	Dust guard back and front	Set	1	1800
127	Dynamo bearing	Each	1	420
128	Dynamo rocker	Each	1	2300
129	E/ paper	Each	1	20

104	Bulb 1016 Labour Charge	50
105	Bulb 1141 Labour Charge	50
106	Bulb 67 Labour Charge	50
107	Bumper indicator light assy Labour Charge	80
108	bush stabilzer Labour Charge	120
109	Bypass filter Labour Charge	5
110	C.V joint Labour Charge	450
111	Cam Shaft Bearing Labour Charge	250
112	Cam shaft bush Labour Charge	220
113	Cam shaft gear Labour Charge	200
114	Cam shaft Labour Charge	200
115	Carbon bush 12 v Labour Charge	80
116	Carbon holder Labour Charge	80
117	Carbon rocker 12v Labour Charge	50
118	Carbon soldering Labour Charge	120
119	Center bearing changing	300
120	Center Bolt Labour Charge	650
121	Center lock Labour Charge	500
122	Center lock remote key Labour Charge	500
123	Centre bolt changing	650
124	Chain socket	20
	changing	
125	Check nut front Labour Charge	220
126	Clamp for pipe Labour Charge	50
127	Clutch cable changing	120
128	Clutch cylinder (lower) Labour Charge	200

130	EGR pipe	Each	1	1200
131	Electric horn 2v	Each	1	420
132	Electric welding	Each	1	50
133	Element Assy, Fuel	Each	1	650
134	Element sub assy, Air	Each	1	950
135	EML life max oil	Each	1	345
136	Engine Bolt	each	1	120
137	Engine head assy	each	1	8500
138	Engine head gasket	Each	1	1800
139	Engine mounting	Each	1	600
140	Engine oil 15w40	ltr	1	380
141	Engine Oil Filter	No	1	450
142	Engine oil seal	each	1	350
143	Engine pacing	Each	1	600
144	Engine ring	Each	1	220
145	Engine Twining	Each	1	200
146	Engine valve intake	each	1	280
147	Exhaust manifold	Each	1	1200
148	Fan belt	Each	1	1200
149	Feed Pump	Set	1	2800
150	Fender liner front left	Each	1	650
151	Fender liner front right	Each	1	650
152	Fender liner rear left	Each	1	650
153	Fender liner rear right	Each	1	650
154	Flate washer	Each	1	30
155	Fly wheel	Each	1	3400

129	Clutch cylinder (Upper) Labour Charge	200
130	Clutch cylinder Assy Labour Charge	200
131	Clutch cylinder kit Labour Charge	80
132	Clutch kit box Labour Charge	80
133	Clutch kit Labour Charge	80
134	Clutch plate (Fan Type) Labour Charge	25
135	Clutch plate (Round Type) Labour Charge	2500
136	Clutch Plate Labour Charge	3500
137	Clutch relese bearing Labour Charge	350
138	Clutch rod Labour Charge	30
139	Coil Spring changing	420
140	Complete electricial line checking	1200
141	Connecting Bearing changing	280
142	Connecting bush changing	120
143	Connecting rod changing	80
144	Controlling cylinder Assy changing	5
145	Controlling overhauling changing	5
146	Controlling pipe changing	5
147	Controlling switch Assy changing	5
148	Coolant Change	120
149	Crank shaft changing	4000
150	Crank shaft oil seal changing	250
151	Cross Bearing changing	420
152	Cross bearing greasing changing	250
153	Cross change	300
154	Cross Coupling cutting by lath machine changing	820

156	Fly wheel ring	Each	1	420
157	Fog Light	Set	1	1200
158	foot mat	Set	1	2400
159	Front bumper	Each	1	12400
160	Front door inner clamel rubber	Each	1	250
161	Front hub bearing inner	Each	1	1400
162	Front hub bearing outer	Each	1	1200
163	Front Windshield glass	Each	1	5700
164	fuel and water separator	per piece	1	1800
165	Fuel filter	Each	1	1200
166	Fuel injection overflow pipe	Each	1	120
167	Fuel injector nozzel	Each	1	12000
168	Fuel injector pipe	Each	1	300
169	fuel pipe	per piece	1	420
170	Fuel pump Assy	Each	1	35000
171	Fuel pump washer	Each	1	10
172	Fuel Supply Pump	Set	1	1800
173	Full Engine Overhauling	Each	1	6000
174	Fuse	No	1	30
175	Fuse 10 Amp	Each	1	10
176	Fuse 15 Amp	Each	1	10
177	Fuse 20 Amp	Each	1	10
178	Fuse 25 Amp	Each	1	10
179	Fuse 30 Amp	Each	1	10
180	Fuse 5 Amp	Each	1	10
181	Gas kit	Each	1	10
182	Gear box assembly	Each	1	26000
183	Gear box mounting	Each	1	920
184	Gear box oil seal front	Each	1	420

155	Cross holder changing	300
156	Cross holder cutting and welding changing	700
157	Cross propeller shaft changing	250
158	Crown & Tail Assy changing	1500
159	Crown Overhauling changing	2400
160	Crown tail assy changing	850
161	CV Joint Assembly changing	550
162	CV joint Boot changing	550
163	CV Joint changing	550
164	CV joint oil seal changing	600
165	Cycle pin changing	120
166	Dashboard polish changing	50
167	denting and painting changing	4200
168	Dial wrench (6-32mm) changing	5
169	Diesel filter	150
	Changing	
170	distilled water changing	5
171	Door agrnish inner changing	150
172	Door agrnish outer changing	150
173	Door lock new making changing	230
174	Drag link kit changing	5
175	Drain plug changing	50
176	Driver shaft oil seal changing	450
177	Dual brake valve Assy changing	5
178	Dust guard back and front changing	120
179	Dust Guard changing	130
180	Dynamo bearing changing	620
181	Dynamo rocker changing	120
182	E/ paper changing	5

185	Gear box oile seal rear	Each	1	300
186	Gear box packing	Each	1	220
187	Gear counter	Each	1	2800
188	Gear oil	per litre	1	380
189	Gear pinion	Each	1	1200
190	Gear pinion 2nd	Each	1	1800
191	Gear pinion shaft	Each	1	450
192	Glow Plug	Set	1	1200
193	Glow plug	Each	1	300
194	Grease	per kg	1	540
195	Grease gun	Each	1	1050
196	Half Engine Overhauling	Each	1	3000
197	Hand Brake Cable	Set	1	780
198	Head Gasket	No	1	2200
199	Head light assembly	set	1	2200
200	Head light Assy (Left)	Each	1	3700
201	Head light Assy (Right)	Each	1	3700
202	Head Light Bulb	Set	1	150
203	Head light bulb	Each	1	250
204	Head light bulb (Halogen)	Each	1	120
205	Head light cover	Each	1	20
206	Head light Set	Set	1	10
207	Horn and switch	set	1	380
208	Horn high	Each	1	550
209	Horn low	Each	1	450
210	Horn relay	Each	1	220
211	horn switch	per piece	1	170
212	Hose pipe clamp	Each	1	60

183	ECM scanned changing	1000
184	EGR pipe change	220
185	Electric horn 2v changing	150
186	Electric welding changing	120
187	Electrical line checking and rectified changing	1500
188	Element Assy, Fuel changing	200
189	Element kit spin on changing	5
190	Element sub assy, Air changing	50
191	EML life max oil changing	40
192	Engine Bolt changing	50
193	Engine head assy changing	2500
194	Engine head gasket changing	2400
195	Engine mount changing	230
196	Engine oil changing	200
197	Engine Oil Changing with oil filter	200
198	Engine oil seal changing	300
199	Engine over hauling changing	6000
200	Engine pacing changing	200
201	Engine ring changing	200
202	Engine Twining changing	750
203	Engine valve changing and setting changing	1200
204	Engine valve intake changing	200
205	Engine water pump changing	1200
206	Exhaust manifold changing	220
207	Fan belt bearing changing	230
208	Fan belt changing	120
209	Feed pump assy changing	120
210	Feed Pump changing	230



213	Hour meter	Each	1	10
214	Hub Bearing Front Inner	Set	1	1230
215	Hub Bearing Front Outer	Set	1	830
216	Hub Check Nut	Set	1	60
217	Hub greasing (Front)	Each	1	350
218	Hub greasing (Rear)	Each	1	350
219	Hub Oil Seal	Set	1	180
220	Hub Splender	Set	1	1200
221	Hubs bearing	per piece	1	350
222	Hubs checknut	Each	1	120
223	Hubs checknut lock	Each	1	40
224	Hubs oil	Each	1	50
225	Hubs oil seal front	Each	1	220
226	Hubs oil seal rear	Each	1	200
227	Hydraulic jack (Light Duty)	Each	1	2650
	Hydraulic jack oil seal (Set of 12 pcs)	Each	1	120
229	Hydraulic oil	per litre	1	200
230	Ignition switch	Each	1	2850
231	Indicator light	Each	1	250
232	Inner door lock (R )	Each	1	700
233	Inner door lock(L)	Each	1	700
234	Intake manifold	Each	1	300
235	Intake valve	Set	1	1850
236	Jack lever	Each	1	620
237	Key Lock Set	Set	1	850
238	Kilimeter cable	Each	1	850

211	Feed pump repairing changing	230
212	Fender liner front left changing	150
213	Fender liner front right changing	150
214	Fender liner rear left changing	150
215	Fender liner rear right changing	150
216	Flate washer changing	30
217	Fly wheel changing	350
218	Fly wheel poolishing changing	1200
219	Fly wheel ring changing	350
220	Fog Light changing	250
221	foot mat changing	100
222	Front bumper opening & fitting	800
	Front door inner clamel rubber changing	100
224	Front hub bearing inner changing	250
225	Front hub bearing outer changing	250
226	Front Windshield glass changing	2000
227	fuel and water separator changing	120
228	Fuel filter changing	150
229	Fuel injection overflow pipe changing	280
230	Fuel injection pump opening & fitting	650
231	Fuel injector nozzel changing	120
232	Fuel injector pipe changing	150
233	Fuel over flow pipe changing	350
234	fuel pipe changing	230
235	Fuel pump Assy changing	900
236	Fuel pump washer changing	200

239	Link assy front	Each	1	650
240	Link assy rear	Each	1	400
241	Link Bush Front	Pcs	1	50
242	Link Bush Rear	Pcs	1	50
243	Link Rod	Pcs	1	550
244	Link rod Front	Each	1	450
245	Lock pati	Each	1	10
246	Looking glass ( R )	Each	1	730
247	Looking glass (L)	Each	1	730
248	LT wire 5mm	Each	1	30
249	LT wire 6mm	Each	1	15
250	LT wire 8mm	Each	1	50
251	Main Bearing	Set	1	1300
252	Main bearing	Each	1	160
253	Main Bearing Oil Seal	Set	1	380
254	Main leaf spring ( R)	Each	1	2100
255	Master cylinder	Each	1	3400
256	Master Cylinder Kit	Set	1	600
257	Mobile	per litre	1	380
258	Mobile (15w40)	per litre	1	380
259	Mobile Filter	No	1	450
260	nozzle pipe	per piece	1	200
261	Number Plate	each	1	350
262	Nut & Bolts	Each	1	20
263	Nuts and Bolts(4 Wheel)	Set	1	30
264	Oil filter	Ltr	1	450
265	Oil seal	Each	1	100
266	Oil Supply Pump	No	1	1200

237	Fuel strainer A/B changing	150
238	Fuel Supply Pump changing	220
239	Fuel tank opening & fitting	1800
240	Fuel tank servicing changing	1200
241	Full Engine Overhauling	7500
242	Fuse 10 Amp changing	10
243	Fuse 15 Amp changing	10
244	Fuse 20 Amp changing	10
245	Fuse 25 Amp changing	10
246	Fuse 30 Amp changing	10
247	Fuse 5 Amp changing	10
248	Fuse changing	50
249	Gas kit changing	30
250	Gear box assembly change	2500
251	Gear Box mounting & dismounting changing	350
252	Gear box mounting changing	300
253	Gear box oil seal front changing	250
254	Gear box oile seal rear changing	280
255	Gear Box Opening and fitting charges	3500
256	Gear box packing changing	220
257	Gear counter changing	350
258	Gear oil changing	80
259	Gear pinion 2nd changing	280
260	Gear pinion changing	250
261	Gear pinion shaft changing	220
262	Gear shaft changing	1400
263	Gear shaft polishing changing	300
264	Glow plug changing	120

267	Open end wrench set (6-32mm)	Set	1	1200
268	Pilot bearing	Each	1	620
269	Piston	set	1	2100
270	Piston Ring	No	1	3400
271	Plastic lock	Each	1	10
272	Plastic tape	Each	1	15
273	Plastic washer	Each	1	15
274	Power Steering Belt	No	1	450
275	Power steering box Assy	Each	1	19300
276	Power Steering Oil	ltrs	1	380
277	Power steering overhauling	Each	1	1800
278	Power steering pipe	Each	1	650
279	Pressure plate	Each	1	4750
280	Propeller shaft	Each	1	3400
281	Propeller shaft bolt	Each	1	30
282	PVC tape	Each	1	20
283	Radiator assy	Each	1	12300
284	Radiator cap	Each	1	230
285	Radiator coolant	each	1	280
286	radiator hose pipe lower	Each	1	330
287	Radiator hose pipe upper	Each	1	330
288	Rain guard	Set	1	2400
289	Rear Axle Corn	Set	1	850
290	Rear bush adjust	Each	1	80
291	Rear center bolt	Each	1	120
292	Rear Differential Assy	No	1	18000
293	Rear hub bearing inner	Each	1	1400
294	Rear hub bearing outer	Each	1	1200
295	Rear second leap	Each	1	2200
296	Rear shackle Assy	Each	1	580

265	Grease changing	200
266	Grease gun changing	5
267	Half Engine Overhauling changing	2400
268	Hand Brake Cable changing	250
269	Head Gasket changing	2500
270	Head light assembly changing	230
271	Head light Assy (Left) changing	150
272	Head light Assy (Right) changing	150
273	Head Light Bulb changing	230
274	Head light bulb fitting changing	230
275	Head light cover changing	120
276	Head light Set changing	150
277	Helper leaf Spring changing	5
278	horn and switch fitting changing	230
279	Horn fitting	130
280	Horn high changing	230
281	Horn low changing	230
282	Horn relay fitting	80
283	horn switch changing	220
284	Hose pipe clamp changing	120
285	Hour meter changing	5
286	Hub Bearing Front Inner changing	200
287	Hub Bearing Front Outer changing	200
288	Hub Check Nut changing	120
289	Hub greasing (Front) changing	420
290	Hub greasing (Rear) changing	520
291	Hub Oil Seal changing	350
292	Hub Splender changing	350
293	hubs bearing changing	600
294	Hubs checknut changing	220

297	Rear shackle pin	Each	1	280
298	rear shocker	Each	1	1200
299	Rear Spring cushion plastic plate	Each	1	120
300	Rear tail board railing	Each	1	2500
301	recovery van hiring charges	Per Km	1	1000
302	Rectifier	Each	1	1200
303	Red paper	Each	1	15
304	Relay 2 pin 12v	Each	1	130
305	Relay 3 pin 12v	Each	1	130
306	Relay 4 pin 12v	Each	1	220
307	Relay 5 pin 12v	Each	1	430
308	Release Bearing	Set	1	1280
309	Relese bearing fork	Each	1	220
310	Relese bearing lock	Each	1	80
311	Rocker Arm	Each	1	1200
312	Rocker shaft	Each	1	1450
313	Rotor coil	Each	1	1400
314	Screw	Each	1	10
315	seat cover	Set	1	5500
316	Seat new making	Set	1	1500
317	Self Armerture 12v	Each	1	2700
318	Self bush 12V	Each	1	40
319	Self Carbon	Set	1	850

295	Hubs checknut lock changing	200
296	Hubs oil changing	120
297	Hubs oil seal front changing	350
298	Hubs oil seal rear changing	350
299	Hydraulic control valve opening servicing & refitting	5
300	Hydraulic filter changing	5
301	Hydraulic hose pipe changing	5
302	Hydraulic jack (Heavy Duty) changing	5
303	Hydraulic jack (Light Duty) changing	5
304	Hydraulic jack oil seal (Set of 12 pcs) changing	5
305	Hydraulic oil changing	5
306	Hydraulic pipe changing	5
307	Hydraulic pipe leakage repairing	5
308	Hydraulic pump & pipe line new fitting	5
309	Hydraulic tank servicing	5
310	Ignition switch changing	420
311	Indicator light changing	80
312	Inner door lock (R ) changing	250
313	Inner door lock(L) changing	250
314	Inner wheel bearing changing front	200
315	Inner wheel bearing changing rear	200
316	Inner wheel bearing oil seal changing front	120
317	Inner wheel bearing oil seal changing rear	120

320	Self carbon 12V	Each	1	250
321	Self field coil 12v	Each	1	1800
322	Self housing	Each	1	1400
323	Self Overhauling	Each	1	650
324	Self rewinding	Each	1	500
325	Self top cover	Each	1	180
326	Shaft yoke & Teeth	No	1	2800
327	Shakle Pin Assy	set	1	480
328	Shock absorber	Each	1	850
329	Shock Absorber Bush	set	1	50
330	Shock Absover Front	Set	1	2400
331	Shock Absover Rear	Set	1	1200
332	shocker bush	Each	1	50
333	Shocker Front	Each	1	2400
334	Shocker nut bolt	Each	1	80
335	Side Light	No	1	115
336	Side Light Bulb	No	1	20
337	Side Light Clamp	Set	1	50
338	Silencer box	Each	1	2400
339	Silencer pipe	Each	1	1900
340	Socket (6mm-32mm)	Set	1	4600
341	Solonoid switch 12v	Each	1	1400
342	Speedo meter Assy	Each	1	2100
343	Speedo meter cable	Each	1	400
344	Speedo meter pinion	Each	1	180
345	Spring 2nd leaf (R)	Each	1	2100
346	Spring 3rd leaf ®	Each	1	1700
347	Spring 4th leaf ®	Each	1	1450

318	Intake manifold changing	220
319	Intake valve changing	250
320	Jack lever changing	5
321	Key Lock Set changing	450
322	Kilimeter cable changing	300
323	Kimpin Bearing changing	5
324	King Pin Bearing changing	5
325	King pin bush machinery cutting both side changing	5
326	King pin greasing changing	5
327	King pin kit changing	5
328	King pin overhauling bothside changing	5
329	KM cable changing & refitting	420
330	Knuckle arm fitting	300
331	Link assy front changing	200
332	Link assy rear changing	200
333	Link Bush Front changing	150
334	Link Bush Rear changing	150
335	Link rod changing	150
336	Lock pati changing	30
337	Looking glass ( R ) changing	50
338	Looking glass (L) changing	50
339	Lower bolt joint changing	350
340	Lower clutch kit changing	320
341	Lower Radiator hose pipe changing	150
342	LT wire 5mm changing	20
343	LT wire 6mm changing	20
344	LT wire 8mm changing	20
345	Main Bearing changing	230

348	Spring 5th leaf ®	Each	1	1350
349	Spring 6th leaf ®	Each	1	1100
350	Spring buffer mounting	Each	1	730
351	Spring bush	Each	1	110
352	Spring Bush Metal	No	1	250
353	Spring Clamp	No	1	220
354	Spring cycle pin	Each	1	800
355	Spring griping washer	Each	1	30
356	Spring hanger	Each	1	1100
357	Spring pin	Each	1	230
358	Spring plate	Each	1	220
359	Spring shackle	Each	1	630
360	Spring washer	Each	1	10
361	Stabilizer Bar Bush - Front	No	1	250
362	Stabilizer link rod	Each	1	550
363	Starter carbon	Each	1	120
364	Starter coil	Each	1	950
365	Starter relay 12v	Each	1	400
366	Steering adjuster bolt assy	Each	1	120
367	Steering box oil seal	Each	1	280
368	Steering box overhauling	Each	1	1800
369	Steering column (Inner)	Each	1	80
370	Steering column (Outer)	Each	1	80
371	Steering cross	Each	1	720
372	Steering cross bearing	Each	1	730
373	Steering Damper	Set	1	1280
374	Steering rack end	Each	1	950

346	Main Bearing Oil Seal changing	200
347	Main leaf spring ( R) changing	850
348	Main leaf spring (F) changing	5
349	Master cylinder changing	420
350	Master cylinder kit changing	250
351	Master cylinder repairing	420
352	Mobile (15w40) changing	80
353	Mobile changing	120
354	mobile filter changing	100
355	nozzle pipe changing	120
356	Number Plate change	50
357	Number Plate new making	50
358	Nut & Bolts changing	10
359	Nuts and Bolts(4 Wheel) changing	50
360	Oil filter changing	120
361	Oil Seal changing	80
362	Oil Supply Pump changing	300
363	Open end wrench set (6-32mm) changing	5
364	Opening and fitting of tyres	100
365	Opening and fitting tear spring	5
366	Outer wheel bearing changing front	120
367	Outer wheel bearing changing rear	120
368	Outer wheel bearing oil seal changing Front	120
369	Outer wheel bearing oil seal changing rear	120
370	Overhual starter and change carbon	350
371	Pilot bearing changing	280
372	Piston changing	220

375	Steering wheel cover	No	1	650
376	Suspension arm bush lower small	Each	1	750
377	Suspension arm bush upper small	Each	1	650
378	Sycronizer circlip lock	Each	1	200
379	Sycronizer hub	Each	1	1700
380	Sycronizer lock	Each	1	220
381	Sycronizer ring	Each	1	850
382	Sycronizer sheeve	Each	1	650
383	Sycronizer sheeve inddle bearing	Each	1	280
384	Tail Inner Bearing	Set	1	1450
385	Tail Oil Seal	Set	1	100
386	Tail Outer Bearing	Set	1	650
387	Tail pinion bearing inner	Each	1	1450
388	Tail pinion bearing outer	Each	1	1250
389	Tail pinion chechnut washer	Each	1	80
390	Tail pinion checknut	Each	1	120
391	Tail Pinion oil seal	piece	1	420
392	Tappid cover packing	Each	1	220
393	Tempering spring	Each	1	150
394	Threading tape	Each	1	20
395	Thrust washer	Each	1	250
396	Tie clip	Each	1	20
397	Tie rod end	Each	1	1200
398	Tie Rod End-Big	Set	1	980
399	Tie Rod End-Small	Set	1	850
400	Timing cover front	Each	1	380

373	Piston Ring changing	200
374	Plastic lock changing	30
375	Plastic tape changing	20
376	Plastic washer changing	120
377	Power steering bearing changing	200
378	Power steering belt changing	250
379	Power steering box Assy changing	1200
380	Power Steering Oil changing	120
381	Power steering overhauling changing	1500
382	Power steering pipe changing	220
383	Power steering pump change	900
384	Pressure plate changing	1000
385	Pressure water pump removal, refitting and gasket changing	1200
386	Propeller shaft bolt changing	20
387	Propeller shaft changing	420
388	Propeller shaft york changing	500
389	PTO bracket new making changing	5
390	PTO bracket removal changing	5
391	PTO pump servicing changing	5
392	PVC tape changing	20
393	Quarter pin changing	10
394	Radiator assy changing	600
395	Radiator cap changing	50
396	Radiator coolant changing	150
397	radiator hose pipe lower changing	150
398	Radiator hose pipe upper changing	150

401	Timing cover gear	Each	1	470
402	Timing cover oil seal	Each	1	650
403	Top shaft bearing	Each	1	450
404	Transmission half over hauling	Each	1	1500
405	Transmission over hauling	Each	1	3500
406	U bolt front	Each	1	350
407	U bolt nut	Each	1	30
408	U bolt plate	Each	1	730
409	U bolt rear	Each	1	450
410	U bolt rear	Each	1	350
411	U-Bolt	No	1	330
412	UJ cross	Each	1	650
413	Upper bolt joint	Each	1	850
414	Valve guide	Each	1	220
415	Valve key	Each	1	20
416	valve oil seal	each	1	80
417	Valve seal	Each	1	50
418	Valve spring	Each	1	20
419	Valve washer	Each	1	5
420	Water pump	No	1	3400
421	Wheel alignment	Each	1	350
422	Wheel Bearing	Set	1	250
423	Wheel bearing inner front	Each	1	1400
424	Wheel bearing inner rear	Each	1	1400
425	Wheel bearing oil seal inner front	Each	1	220
426	Wheel bearing oil seal inner rear	Each	1	220

399	Radiator opening and fitting	800
400	Radiator repairing	1500
401	Radiator Servicing	1800
402	Rain guard changing	80
403	Rain guard fitting	50
404	Rear Axle Corn changing	200
405	Rear bumper open fitting and welding	800
406	Rear bush adjust changing	100
407	Rear center bolt changing	650
408	Rear Differential Assy changing	1500
409	Rear hub bearing inner changing	120
410	Rear hub bearing outer changing	120
411	Rear hydraulic jack opening & new seal kit fitting	5
412	Rear second leap changing	350
413	Rear shackle assy change	150
414	Rear shackle pin changing	150
415	rear shocker changing	150
416	Rear spring opening and pad changing	650
417	Rear tail board railing changing	350
418	Rectifier changing	150
419	Red paper changing	5
420	Relay 2 pin 12v changing	30
421	Relay 3 pin 12v changing	30
422	Relay 4 pin 12v changing	30
423	Relay 5 pin 12v changing	30
424	Release bearing changing	400



427	Wheel bearing outer front	Each	1	1200
428	Wheel bearing outer rear	Each	1	1200
429	Wheel bolt	Each	1	350
430	Wheel cylinder	Each	1	1500
431	Wheel Cylinder Assy	Set	1	420
432	Wheel cylinder bucket	Each	1	120
433	wheel Drum	Each	1	3700
434	Wheel nut	Each	1	180
435	Wheel wrench	Each	1	700
436	Wind shield replacing	Each	1	2500
437	Window glass	Each	1	2050
438	Wiper Arm	Each	1	420
439	Wiper Blade	Set	1	500
440	Wiper blade	Each	1	300
441	Wiper blade Assy	Each	1	200
442	Wiper motor Assy	Each	1	2800
443	Wiring clip	Each	1	5
444	Zip cock	Each	1	10

425	Release bearing fork changing	220
426	Release bearing lock changing	50
427	Removing & Fitting of spring assy	650
428	Resoling of tyres	5
429	Rocker Arm changing	300
430	Rocker shaft changing	300
431	Rotor coil changing	120
432	Screw changing	20
433	Seal kit changing	20
434	seat cover changing	500
435	Seat new making changing	1500
436	Self Armaure changing	400
437	Self Armerture 12v changing	220
438	Self Bush changing	120
439	Self carbon changing	220
440	Self Carnon Rocker changing	150
441	Self field coil 12v changing	120
442	Self housing changing	220
443	Self Overhauling changing	650
444	Self Plunge changing	80
445	Self rewinding changing	500
446	Self starter overhauling changing	650
447	Self top cover changing	120
448	Shaft yoke & Teeth changing	350
449	Shakle Pin Assy changing	120
450	Shock Absorber Bush changing	150
451	Shock absorber changing	230
452	Shock Absover Front changing	300
453	Shock Absover Rear changing	150
454	shocker bush changing	120

455	Shocker Front changing	250
456	Shocker nut bolt changing	80
457	Side door glass changing	230
458	Side Light Bulb changing	80
459	Side Light changing	80
460	Side Light Clamp changing	30
461	Silencer box changing	300
462	Silencer pipe changing	250
463	Socket (6mm-32mm) changing	5
464	Solonoid switch 12v changing	120
465	Spark Plug changing	5
466	Speedo meter Assy changing	120
467	Speedo meter cable changing	220
468	Speedo meter pinion changing	220
469	Spring 2nd leaf (F) changing	5
470	Spring 2nd leaf (R) changing	300
471	Spring 3rd leaf (F) changing	5
472	Spring 3rd leaf ® changing	300
473	Spring 4th leaf (F) changing	5
474	Spring 4th leaf ® changing	300
475	Spring 5th leaf (F) changing	5
476	Spring 5th leaf ® changing	300
477	Spring 6th leaf (F) changing	5
478	Spring 6th leaf ® changing	300
479	Spring buffer mounting changing	320
480	Spring bush changing	220
481	Spring Bush Metal Labour Charge	200
482	Spring Changing	650
483	Spring clam changing	200
484	spring clam welding	180

485	Spring cycle pin Labour Charge	220
486	Spring Greasing Labour Charge	250
487	Spring griping washer Labour Charge	80
488	Spring hanger changing	320
489	Spring Main -2nd. Labour Charge	300
490	Spring Main Rear Labour Charge	300
491	Spring Main-3rd Labour Charge	300
492	Spring Main-4th Labour Charge	300
493	Spring Main-5th Labour Charge	300
494	Spring opening and fitting charges	650
495	Spring pad changing	120
496	Spring pin bush changing	320
497	Spring pin Labour Charge	120
498	Spring plate Labour Charge	150
499	Spring shackle Labour Charge	320
500	Spring Shackle pin changing	120
501	Spring washer Labour Charge	100
502	Stabilizer Bar Bush - Front Labour Charge	150
503	Stabilizer bush changing	120
504	Stabilizer link assy changing	200
505	Stabilizer link rod Labour Charge	150
506	Starter coil Labour Charge	120
507	Starter relay 12v Labour Charge	120
508	Steering adjuster bolt assy Labour Charge	80
509	Steering box kit changing	320
510	Steering box oil seal changing	480

511	Steering box oil seal Labour Charge	450
512	Steering box overhauling Labour Charge	1800
513	Steering column (Inner) Labour Charge	350
514	Steering column (Outer) Labour Charge	350
515	Steering Column changing inner	300
516	Steering Column changing outer	300
517	Steering cross bearing changing	420
518	Steering cross changing	220
519	Steering Damper Labour Charge	180
520	Steering rack changing	1400
521	Steering Rack end assy (Link)changing	220
522	Steering rack end changing	220
523	Steering wheel cover Labour Charge	50
524	Steering wheel opening & refitting	220
525	Suspension arm bush lower small changing	300
526	Suspension arm bush upper small changing	300
527	suspension arm changing	450
528	Sycronizer circlip lock changing	220
529	Sycronizer hub changing	220
530	Sycronizer lock changing	120
531	Sycronizer ring changing	180
532	Sycronizer sheeve changing	180
533	Sycronizer sheeve inddle bearing changing	120

534	Tail Inner Bearing changing	220
535	Tail Oil Seal changing	120
536	Tail Outer Bearing changing	220
537	Tail pinion bearing inner changing	300
538	Tail pinion bearing outer changing	300
539	Tail pinion chechnut washer changing	80
540	Tail pinion checknut changing	100
541	Tail pinion oil seal changing	420
542	Tail Pinion oil seal changing	400
543	Tailgate Repairing	2800
544	Tappet adjustment	600
545	Tappid cover packing changing	500
546	Tempering spring change	150
547	Threading tape changing	20
548	Thrust washer changing	320
549	Tie clip changing	10
550	Tie rod end changing	250
551	Tie Rod End-Big changing	150
552	Tie Rod End-Small changing	150
553	Tie rod kit changing	120
554	Timing belt changing	150
555	Timing cover front changing	250
556	Timing cover gear changing	120
557	Timing cover oil seal changing	220
558	Timing pinion chain and adjuster kit set changing	220
559	Top shaft bearing changing	250
560	Transmission half over hauling changing	1200

561	Transmission over hauling changing	3800
562	Tyre changing	100
563	Tyre opening and drum change	200
564	U bolt changing	230
565	U bolt front changing	200
566	U bolt nut changing	50
567	U bolt plate changing	120
568	U bolt rear changing	200
569	UJ cross changing	350
570	Upper bolt joint changing	250
571	Upper clutch kit changing	320
572	Upper Radiator hose pipe changing	120
573	Vaccum pipe changing	5
574	vacuum nozzle pipe changing	5
575	Vacuum pipe changing	5
576	Vacuum pipe socket changing	5
577	Valve guide changing	220
578	Valve key changing	180
579	Valve O ring changing	180
580	valve oil seal changing	220
581	Valve seal changing	200
582	Valve spring changing	100
583	Valve washer changing	100
584	Vane pump changing	100
585	washer hat changing	5
586	Water filter changing	100
587	Water level indicator pipe changing	80
588	water pump Assy changing	900
589	Water pump assy servicing	200
590	Water pump changing	1200

591	Water pump opening and fitting	800
592	Water separator servicing	120
593	Welding Labour Charge	120
594	Wheel Alignment Labour Charge	350
595	Wheel Bearing changing	120
596	Wheel bearing inner front changing	120
597	Wheel bearing inner rear changing	120
598	Wheel bearing oil seal inner front changing	120
599	Wheel bearing oil seal inner rear changing	80
600	Wheel bearing outer front changing	80
601	Wheel bearing outer rear changing	80
602	Wheel bolt change	150
603	Wheel Cylinder Assy changing	220
604	Wheel cylinder bucket changing	180
605	Wheel cylinder changing	220
606	wheel Drum changing	200
607	Wheel nut changing	30
608	Wheel wrench changing	5
609	Whole body greasing Labour Charge	350
610	Wind shelid glass fitting Labour Charge	2500
611	Wind shield replacing Labour Charge	1500
612	Window glass changing	350
613	Wiper alignment Labour Charge	120
614	Wiper arm changing	180
615	Wiper blade Assy changing	50

616	Wiper blade changing	80
617	Wiper motor Assy changing	250
618	Wiper motor changing	250
619	Wiper motor repairing	800
620	Wiring clip changing	10