

**Toyota Land Cruiser Ambulance FY 2024-25**

	Description of Item (2)	Unit	Eastern Automobile Workshop
1	A/C filter	per piece	1600
2	AC Belt	Pcs	1850
3	Accelerator cable	Each	650
4	Accelerator cable assy	Each	1200
5	Air filter	Each	2100
6	Air filter hose pipe	Each	430
7	Air filter inside	Each	1
8	Air filter outside	Each	1
9	Air unloader opening & new service kit fitting	Each	1
10	Alternator Assy	Each	17850
11	Alternator carbon bush	Each	180
12	Alternator cut out	Each	3100
13	Alternator Fan belt pully bearing	Each	300
14	Alternator magnet pully	Each	250
15	Alternator overhauling	Each	800
16	Alternator rectifile	Each	2200
17	Anabond	No	1
18	Anabond GUM (Big)	Each	90
19	Anabond GUM (Small)	Each	60
20	Arm Bush Lower	Set	1600
21	Arm Bush Upper	Set	1430
22	Arm bushing	Each	1600

	Description of Item (2)	Unit	Eastern Automobile Workshop
1	A/C filter changing	No	80
2	AC Belt changing	No	150
3	AC gas refilling labour charge	No	3000
4	Accelerator cable assy changing	No	1
5	Accelerator cable changing	No	220
6	Air cleaner filter changing	No	100
7	Air compressor leakage repairing	No	1
8	Air Element changing	No	90
9	Air filter changing	No	90
10	Air filter hose pipe changing	No	90
11	Air filter inside changing	No	1
12	Air filter outside changing	No	1
13	Air filter servicing	No	100
14	Air tank opening & refitting	No	1
15	Air unloader opening & new service kit fitting changing	No	1
16	Alternator Assy changing	No	450
17	Alternator carbon bush changing	No	150
18	Alternator cut out changing	No	120
19	Alternator Fan belt pully bearing changing	No	350
20	Alternator magnet pully changing	No	200
21	Alternator overhauling changing	No	800
22	Alternator rectifile changing	No	300

23	Arm bushing lower big	Each	1600
24	Arm bushing lower small	Each	1400
25	Arm Lower	set	1
26	Arm Upper	Set	1
27	Axel lock	Each	180
28	Axel shaft	Each	12700
29	Axel shaft oil seal	Each	230
30	Axel spacer	Each	230
31	Axle	Set	1
32	Axle Oil Seal Outer	No	450
33	Axle Tube Oil Seal	No	1
34	Back bumper	Each	18450
35	Back gear bearing	Each	230
36	Back glass	Each	4750
37	Back Light	No	1
38	Back light Assy (Left)	Each	3480
39	Back light Assy (Right)	Each	3480
40	Back Light Bulb	No	20
41	ball joint	per piece	1
42	Ball Joint Lower	Set	1
43	Ball Joint Upper	Set	1
44	Battery	No	1
45	Battery (Amaron)	Each	8500
46	Battery (Bosch)	Each	7800
47	Battery box new making	Each	380
48	Battery cable -ive	Each	230

23	Anabond changing	No	20
24	Anabond GUM (Big) changing	No	30
25	Anabond GUM (Small) changing	No	30
26	Arm Bush Lower changing	No	600
27	Arm Bush Upper changing	No	650
28	Arm bushing changing	No	550
29	Arm bushing lower big changing	No	1
30	Arm bushing lower small changing	No	1
31	Arm Lower changing	No	1
32	Arm Upper changing	No	1
33	Axel lock changing	No	250
34	Axel shaft changing	No	650
35	Axel shaft oil seal changing	No	1
36	Axel spacer changing	No	650
37	Axle changing	No	600
38	Axle oil seal changing	No	450
39	Axle Oil Seal Outer Labour Charge	No	2
40	Axle Tube Oil Seal Labour Charge	No	2
41	Back bumper Labour Charge	No	800
42	Back gear bearing Labour Charge	No	650
43	Back glass Labour Charge	No	500
44	Back light Assy (Left) Labour Charge	No	150
45	Back light Assy (Right) Labour Charge	No	150
46	Back Light Bulb Labour Charge	No	150
47	Back Light Labour Charge	No	150
48	ball joint Labour Charge	No	1

49	Battery cable +ive	Each	230
50	Battery terminal end	Each	80
51	Bear Box	Set	1
52	Bearing 6202	Each	190
53	Bearing 6302	Each	190
54	Belt power string A/B	Each	1
55	Bendix pinion	Each	2800
56	Benjo washer	Each	5
57	Benzu Bolt	Each	150
58	Black tape	per piece	25
59	Brake Booster	No	1
60	Brake Booster Assy	Each	15500
61	Brake Booster kit	Each	1480
62	Brake bucket	Each	150
63	Brake Bucket Kit	Set	150
64	Brake calliper lock	Each	250
65	Brake cam	Each	1
66	Brake cam Arm	Each	1
67	Brake cam Arm lock	Each	1
68	Brake cam bush	Each	1
69	brake disc	Each	8500
70	Brake flexible pipe front	Each	430
71	Brake fluid	Each	650
72	Brake fluid dot3	Each	230
73	Brake Hub Front	Set	4500

49	Ball Joint Lower Labour Charge	No	1
50	Ball Joint Upper Labour Charge	No	1
51	Battery box new making Labour Charge	No	380
52	Battery cable -ive Labour Charge	No	50
53	Battery cable +ive Labour Charge	No	50
54	Battery change Labour Charge	No	50
55	Battery terminal end Labour Charge	No	90
56	Bear Box Labour Charge	No	1
57	Bearing 6202 Labour Charge	No	100
58	Bearing 6302 Labour Charge	No	100
59	Belt power string A/B Labour Charge	No	1
60	Bendix pinion Labour Charge	No	450
61	Bendix pinion repairing & replacing	No	650
62	Benjo washer Labour Charge	No	10
63	Benzu Bolt Labour Charge	No	50
64	Black tape Labour Charge	No	20
65	Brake adjuster opening & refitting	No	150
66	Brake Booster Assy Labour Charge	No	450
67	Brake Booster kit Labour Charge	No	350
68	Brake Booster Labour Charge	No	450
69	Brake Bucket Kit Labour Charge	No	150
70	Brake bucket Labour Charge	No	150
71	Brake cable changing	No	120
72	Brake calliper lock Labour Charge	No	200
73	Brake cam Arm Labour Charge	No	1

74	Brake Hub Rear	Set	4500
75	brake light bulb	per piece	20
76	Brake light switch	Each	240
77	Brake lining	Each	1
78	Brake lining back and front	Each	1
79	Brake Oil	Lts	230
80	Brake Pad	Set	5450
81	Brake pad	Each	1350
82	Brake pipe (Rear)	Each	230
83	brake pipe bleasting	each	100
84	Brake servo	Each	1
85	Brake Shoe	Set	5450
86	Brake shoe	Each	1500
87	Brake shoe	Each	1
88	Brake shoe lock with spring	Each	480
89	Brass blezzing	Each	250
90	Bulb 1016	Each	20
91	Bulb 1141	Each	20
92	Bulb 67	Each	20
93	Bumper indicator light assy	Each	1
94	bush stabilzer	per piece	450
95	Bypass filter	Each	1
96	C.V joint	per piece	1
97	Cam shaft	Each	2450
98	Cam Shaft Bearing	Set	300

74	Brake cam Arm lock Labour Charge	No	1
75	Brake cam bush Labour Charge	No	1
76	Brake cam bush opening & fitting	No	1
77	Brake cam Labour Charge	No	1
78	Brake diafam opening & new service kit changing	No	1
79	brake disc Labour Charge	No	400
80	Brake dise cutting	No	600
81	Brake drum cutting	No	600
82	Brake dual valve kit changing	No	1
83	Brake flexible pipe changing	No	180
84	Brake flexible pipe front Labour Charge	No	50
85	Brake fluid dot3 Labour Charge	No	50
86	Brake Hub Front Labour Charge	No	350
87	Brake Hub Rear Labour Charge	No	350
88	brake light bulb Labour Charge	No	150
89	Brake light switch Labour Charge	No	200
90	Brake lining back and front Labour Charge	No	1
91	Brake lining Labour Charge	No	1
92	Brake Oil Labour Charge	No	50
93	Brake Pad Labour Charge	No	200
94	Brake pipe (Rear) Labour Charge	No	230
95	brake pipe bleasting Labour Charge	No	230
96	Brake pipe changing	No	200
97	Brake pipe leakage repairing	No	230
98	Brake servicing 4 wheel changing	No	150

99	Cam shaft bush	Each	230
100	Cam shaft gear	Each	240
101	Carbon bush 12 v	Each	130
102	Carbon holder	Each	130
103	Carbon rocker 12v	Each	1800
104	Carbon soldering	Each	100
105	Center Bolt	No	80
106	Center lock	Each	3500
107	Center lock remote key	Each	3000
108	Check nut front	Each	150
109	Check nut lock	No	150
110	Clamp for pipe	Each	30
111	Clutch cylinder (lower)	Each	2150
112	Clutch cylinder (Upper)	Each	2150
113	Clutch cylinder Assy	Each	1
114	Clutch cylinder kit	Each	650
115	Clutch Cylinder Lower	Set	1
116	Clutch Cylinder Upper	Set	1
117	Clutch kit	Each	1
118	Clutch kit box	Each	230
119	Clutch Plate	Set	6450
120	Clutch plate (Fan Type)	Each	1
121	Clutch plate (Round Type)	Each	1
122	Clutch relese bearing	Each	4480
123	Clutch rod	Each	50
124	Connecting Bearing	Set	2100
125	Connecting bearing	Each	260

99	Brake servo Labour Charge	No	1
100	Brake servo repairing & servicing	No	1
101	Brake Shoe Labour Charge	No	450
102	Brake shoe lock with spring Labour Charge	No	250
103	Brass blezzing Labour Charge	No	230
104	Bulb 1016 Labour Charge	No	50
105	Bulb 1141 Labour Charge	No	50
106	Bulb 67 Labour Charge	No	50
107	Bumper indicator light assy Labour Charge	No	100
108	bush stabilzer Labour Charge	No	200
109	Bypass filter Labour Charge	No	1
110	C.V joint Labour Charge	No	1
111	Cam Shaft Bearing Labour Charge	No	1200
112	Cam shaft bush Labour Charge	No	1
113	Cam shaft gear Labour Charge	No	350
114	Cam shaft Labour Charge	No	250
115	Carbon bush 12 v Labour Charge	No	50
116	Carbon holder Labour Charge	No	100
117	Carbon rocker 12v Labour Charge	No	200
118	Carbon soldering Labour Charge	No	190
119	Center bearing changing	No	10
120	Center Bolt Labour Charge	No	650
121	Center lock Labour Charge	No	600
122	Center lock remote key Labour Charge	No	500
123	Centre bolt changing	No	650
124	Chain socket	No	1
	changing		

126	Connecting bush	Each	720
127	Connecting rod	Each	4150
128	Connection Rod	Set	1
129	Controlling cylinder Assy	Each	1
130	Controlling overhauling	Each	1
131	Controlling pipe	Each	1
132	Controlling switch Assy	Each	1
133	Coolant	per litres	280
134	Crank Shaft	set	25000
135	Crank shaft	Each	1
136	Crank shaft oil seal	Each	1230
137	Cross	Each	1
138	Cross Bearing	set	2150
139	Cross bearing	Each	1
140	Cross holder	Each	3200
141	Cross propeller shaft	Each	2150
142	Crown & Tail Assy	Set	1
143	Crown Overhauling	Each	1
144	Crown tail assy	Each	35000
145	CV Joint Assembly	set	1
146	Cycle pin	Each	720
147	Dashboard polish	each	230
148	Dial wrench (6-32mm)	Set	1200

125	Check nut front Labour Charge	No	200
126	Clamp for pipe Labour Charge	No	60
127	Clutch cable changing	No	150
128	Clutch cylinder (lower) Labour Charge	No	350
129	Clutch cylinder (Upper) Labour Charge	No	350
130	Clutch cylinder Assy Labour Charge	No	1
131	Clutch cylinder kit Labour Charge	No	300
132	Clutch kit box Labour Charge	No	1
133	Clutch kit Labour Charge	No	1
134	Clutch plate (Fan Type) Labour Charge	No	1
135	Clutch plate (Round Type) Labour Charge	No	1
136	Clutch Plate Labour Charge	No	3500
137	Clutch relese bearing Labour Charge	No	1450
138	Clutch rod Labour Charge	No	200
139	Coil Spring changing	No	620
140	Complete electricial line checking	No	1800
141	Connecting Bearing changing	No	250
142	Connecting bush changing	No	300
143	Connecting rod changing	No	300
144	Controlling cylinder Assy changing	No	1
145	Controlling overhauling changing	No	1
146	Controlling pipe changing	No	1
147	Controlling switch Assy changing	No	1

149	Diesel filter	Each	2100
150	distilled water	per litre	25
151	Door agrnish inner	Each	1200
152	Door agrnish outer	Each	1200
153	Door lock new making	Each	400
154	Drag link kit	Each	850
155	Drain plug	Each	90
156	Dual brake valve Assy	Each	1
157	Dust Guard	Pcs	800
158	Dust guard back and front	Set	2800
159	Dynamo bearing	Each	230
160	Dynamo rocker	Each	230
161	E/ paper	Each	20
162	EGR pipe	Each	1
163	Electric horn 2v	Each	420
164	Electric welding	Each	320
165	Element Assy, Fuel	Each	1450
166	Element kit spin on	Each	1
167	Element sub assy, Air	Each	2000
168	EML life max oil	Each	1
169	Engine Bolt	each	100
170	Engine head assy	each	18000
171	Engine head gasket	Each	4150
172	Engine mounting	Each	1180
173	Engine oil 15w40	ltr	360
174	Engine Oil Filter	No	1200
175	Engine oil seal	each	1450
176	Engine pacing	Each	100

148	Coolant Change	No	100
149	Crank shaft changing	No	600
150	Crank shaft oil seal changing	No	450
151	Cross Bearing changing	No	400
152	Cross bearing greasing changing	No	420
153	Cross change	No	1
154	Cross Coupling cutting by lath machine changing	No	900
155	Cross holder changing	No	350
156	Cross holder cutting and welding changing	No	920
157	Cross propeller shaft changing	No	350
158	Crown & Tail Assy changing	No	1
159	Crown Overhauling changing	No	2400
160	Crown tail assy changing	No	2200
161	CV Joint Assembly changing	No	1
162	CV joint Boot changing	No	1
163	CV Joint changing	No	1
164	CV joint oil seal changing	No	1
165	Cycle pin changing	No	320
166	Dashboard polish changing	No	50
167	denting and painting changing	No	4500
168	Dial wrench (6-32mm) changing	No	1
169	Diesel filter	No	200
	Changing		
170	distilled water changing	No	20
171	Door agrnish inner changing	No	50
172	Door agrnish outer changing	No	50
173	Door lock new making changing	No	420
174	Drag link kit changing	No	350

177	Engine ring	Each	90
178	Engine Twining	Each	200
179	Engine valve intake	each	700
180	Exhaust manifold	Each	1820
181	Fan belt	Each	1450
182	Feed Pump	Set	1
183	Feed pump Assy	Each	2150
184	Fender liner front left	Each	1
185	Fender liner front right	Each	1
186	Fender liner rear left	Each	1
187	Fender liner rear right	Each	1
188	Flate washer	Each	30
189	Fly wheel	Each	3460
190	Fly wheel ring	Each	1450
191	Fog Light	Set	950
192	foot mat	Set	2700
193	Front bumper	Each	18400
194	Front door inner clamel rubber	Each	1
195	Front hub bearing inner	Each	1550
196	Front hub bearing outer	Each	1500
197	Front Windshield glass	Each	18400
198	fuel and water separator	per piece	1
199	Fuel filter	Each	920
200	Fuel injection overflow pipe	Each	720
201	Fuel injector nozzel	Each	1440
202	Fuel injector pipe	Each	230
203	fuel pipe	per piece	230
204	Fuel pump Assy	Each	60000

175	Drain plug changing	No	150
176	Driver shaft oil seal changing	No	350
177	Dual brake valve Assy changing	No	1
178	Dust guard back and front changing	No	100
179	Dust Guard changing	No	100
180	Dynamo bearing changing	No	210
181	Dynamo rocker changing	No	250
182	E/ paper changing	No	1
183	ECM scanned changing	No	1500
184	EGR pipe change	No	1
185	Electric horn 2v changing	No	200
186	Electric welding changing	No	300
187	Electrical line checking and rectified changing	No	850
188	Element Assy, Fuel changing	No	1
189	Element kit spin on changing	No	1
190	Element sub assy, Air changing	No	1
191	EML life max oil changing	No	1
192	Engine Bolt changing	No	50
193	Engine head assy changing	No	2500
194	Engine head gasket changing	No	2400
195	Engine mount changing	No	420
196	Engine oil changing	No	200
197	Engine Oil Changing with oil filter	No	250
198	Engine oil seal changing	No	600
199	Engine over hauling changing	No	12500
200	Engine pacing changing	No	200
201	Engine ring changing	No	250
202	Engine Twining changing	No	600



205	Fuel pump washer	Each	40
206	Fuel strainer A/B	Each	1
207	Fuel Supply Pump	Set	3800
208	Full Engine Overhauling	Each	8400
209	Fuse	No	20
210	Fuse 10 Amp	Each	20
211	Fuse 15 Amp	Each	20
212	Fuse 20 Amp	Each	20
213	Fuse 25 Amp	Each	20
214	Fuse 30 Amp	Each	20
215	Fuse 5 Amp	Each	20
216	Gas kit	Each	90
217	Gear box assembly	Each	350000
218	Gear box mounting	Each	2150
219	Gear box oil seal front	Each	1550
220	Gear box oil seal rear	Each	1650
221	Gear box packing	Each	230
222	Gear counter	Each	48000
223	Gear oil	per litre	380
224	Gear pinion	Each	1450
225	Gear pinion 2nd	Each	14500
226	Gear pinion shaft	Each	450
227	Glow Plug	Set	920
228	Glow plug	Each	1
229	Grease	per kg	540
230	Grease gun	Each	1020
231	Half Engine Overhauling	Each	3450

203	Engine valve changing and setting changing	No	1500
204	Engine valve intake changing	No	200
205	Engine water pump changing	No	600
206	Exhaust manifold changing	No	150
207	Fan belt bearing changing	No	420
208	Fan belt changing	No	250
209	Feed pump assy changing	No	200
210	Feed Pump changing	No	1
211	Feed pump repairing changing	No	100
212	Fender liner front left changing	No	1
213	Fender liner front right changing	No	1
214	Fender liner rear left changing	No	1
215	Fender liner rear right changing	No	1
216	Flate washer changing	No	30
217	Fly wheel changing	No	1450
218	Fly wheel poolishing changing	No	1100
219	Fly wheel ring changing	No	1400
220	Fog Light changing	No	150
221	foot mat changing	No	100
222	Front bumper opening & fitting	No	800
223	Front door inner clamel rubber changing	No	1
224	Front hub bearing inner changing	No	550
225	Front hub bearing outer changing	No	550
226	Front Windshield glass changing	No	3000
227	fuel and water separator changing	No	80
228	Fuel filter changing	No	180
229	Fuel injection overflow pipe changing	No	200

232	Hand Brake Cable	Set	3400
233	Hand brake cable	Each	1
234	Head Gasket	No	4800
235	Head light assembly	set	1
236	Head light Assy (Left)	Each	14350
237	Head light Assy (Right)	Each	14350
238	Head Light Bulb	Set	250
239	Head light bulb	Each	2
240	Head light bulb (Halogen)	Each	140
241	Head light cover	Each	1
242	Head light Set	Set	1
243	Helper leaf Spring	Each	1
244	Horn and switch	set	400
245	Horn high	Each	550
246	Horn low	Each	500
247	Horn relay	Each	240
248	horn switch	per piece	190
249	Hose pipe clamp	Each	130
250	Hour meter	Each	10
251	Hub Bearing Front Inner	Set	1550
252	Hub Bearing Front Outer	Set	1500
253	Hub Check Nut	Set	200
254	Hub greasing (Front)	Each	420
255	Hub greasing (Rear)	Each	420
256	Hub Oil Seal	Set	750
257	Hub Splender	Set	2800
258	Hubs bearing	per piece	1200

230	Fuel injection pump opening & fitting	No	1000
231	Fuel injector nozzel changing	No	150
232	Fuel injector pipe changing	No	200
233	Fuel over flow pipe changing	No	200
234	fuel pipe changing	No	100
235	Fuel pump Assy changing	No	2500
236	Fuel pump washer changing	No	50
237	Fuel strainer A/B changing	No	1
238	Fuel Supply Pump changing	No	300
239	Fuel tank opening & fitting	No	800
240	Fuel tank servicing changing	No	900
241	Full Engine Overhauling	No	8300
242	Fuse 10 Amp changing	No	10
243	Fuse 15 Amp changing	No	10
244	Fuse 20 Amp changing	No	10
245	Fuse 25 Amp changing	No	10
246	Fuse 30 Amp changing	No	10
247	Fuse 5 Amp changing	No	10
248	Fuse changing	No	20
249	Gas kit changing	No	1
250	Gear box assembly change	No	4000
251	Gear Box mounting & dismounting changing	No	350
252	Gear box mounting changing	No	350
253	Gear box oil seal front changing	No	550
254	Gear box oile seal rear changing	No	350
255	Gear Box Opening and fitting charges	No	9500
256	Gear box packing changing	No	250

259	Hubs checknut	Each	120
260	Hubs checknut lock	Each	90
261	Hubs oil	Each	2
262	Hubs oil seal front	Each	2
263	Hubs oil seal rear	Each	750
264	Hydraulic filter	Each	2
265	Hydraulic jack (Heavy Duty)	Each	1
266	Hydraulic jack (Light Duty)	Each	2400
267	Hydraulic jack oil seal (Set of 12 pcs)	Each	150
268	Hydraulic oil	per litre	240
269	Hydraulic pipe	Each	1
270	Hydraulic pump & pipe line new fitting	Each	1
271	Hydraulic tank servicing	Each	1
272	Ignition switch	Each	2800
273	Indicator light	Each	1
274	Inner door lock (R )	Each	1420
275	Inner door lock(L)	Each	1420
276	Intake manifold	Each	1200
277	Intake valve	Set	2800
278	Jack lever	Each	920
279	Key Lock Set	Set	3800
280	Kilimeter cable	Each	1200
281	Kimpin Bearing	Set	2
282	King Pin Bearing	Set	1200
283	King pin bush machinery cutting bothr side	Each	1
284	King pin kit	Set	1
285	King pin overhauling bothside	Each	1200
286	Link assy front	Each	2450
287	Link assy rear	Each	2200
288	Link Bush Front	Pcs	150

257	Gear counter changing	No	450
258	Gear oil changing	No	320
259	Gear pinion 2nd changing	No	350
260	Gear pinion changing	No	300
261	Gear pinion shaft changing	No	350
262	Gear shaft changing	No	250
263	Gear shaft polishing changing	No	120
264	Glow plug changing	No	200
265	Grease changing	No	50
266	Grease gun changing	No	1
267	Half Engine Overhauling changing	No	3400
268	Hand Brake Cable changing	No	450
269	Head Gasket changing	No	3500
270	Head light assembly changing	No	250
271	Head light Assy (Left) changing	No	300
272	Head light Assy (Right) changing	No	300
273	Head Light Bulb changing	No	180
274	Head light bulb fitting changing	No	180
275	Head light cover changing	No	1
276	Head light Set changing	No	1
277	Helper leaf Spring changing	No	1
278	horn and switch fitting changing	No	220
279	Horn fitting	No	150
280	Horn high changing	No	150
281	Horn low changing	No	150
282	Horn relay fitting	No	80
283	horn switch changing	No	100
284	Hose pipe clamp changing	No	80
285	Hour meter changing	No	50
286	Hub Bearing Front Inner changing	No	200

289	Link Bush Rear	Pcs	150
290	Link Rod	Pcs	1850
291	Link rod Front	Each	2
292	Lock pati	Each	10
293	Looking glass ( R )	Each	3800
294	Looking glass (L)	Each	3800
295	Lower bolt joine	Each	2
296	LT wire 5mm	Each	20
297	LT wire 6mm	Each	20
298	LT wire 8mm	Each	20
299	Main Bearing	Set	2150
300	Main bearing	Each	1
301	Main Bearing Oil Seal	Set	1650
302	Main leaf spring ( R)	Each	1450
303	Main leaf spring (F)	Each	1
304	Master cylinder	Each	6800
305	Master Cylinder Kit	Set	1200
306	Master cylinder kit	Each	1
307	Mobile	per litre	400
308	Mobile (15w40)	per litre	380
309	Mobile Filter	No	1150
310	nozzle pipe	per piece	220
311	Number Plate	each	350
312	Nut & Bolts	Each	10
313	Nuts and Bolts(4 Wheel)	Set	50

287	Hub Bearing Front Outer changing	No	200
288	Hub Check Nut changing	No	200
289	Hub greasing (Front) changing	No	550
290	Hub greasing (Rear) changing	No	550
291	Hub Oil Seal changing	No	250
292	Hub Splender changing	No	350
293	hubs bearing changing	No	120
294	Hubs checknut changing	No	150
295	Hubs checknut lock changing	No	150
296	Hubs oil changing	No	1
297	Hubs oil seal front changing	No	250
298	Hubs oil seal rear changing	No	1
299	Hydraulic control valve opening servicing & refitting	No	1
300	Hydraulic filter changing	No	1
301	Hydraulic hose pipe changing	No	1
302	Hydraulic jack (Heavy Duty) changing	No	1
303	Hydraulic jack (Light Duty) changing	No	1
304	Hydraulic jack oil seal (Set of 12 pcs) changing	No	1
305	Hydraulic oil changing	No	1
306	Hydraulic pipe changing	No	1
307	Hydraulic pipe leakage repairing	No	1
308	Hydraulic pump & pipe line new fitting	No	1
309	Hydraulic tank servicing	No	1
310	Ignition switch changing	No	620
311	Indicator light changing	No	120

314	Oil filter	Ltr	900
315	Oil seal	Each	2
316	Oil Supply Pump	No	4800
317	Open end wrench set (6-32mm)	Set	1650
318	Pilot bearing	Each	820
319	Piston	set	1
320	Piston	Each	3200
321	Piston Ring	No	6450
322	Plastic lock	Each	10
323	Plastic tape	Each	25
324	Plastic washer	Each	15
325	Power steering bearing	Each	450
326	Power Steering Belt	No	1450
327	Power steering box Assy	Each	35000
328	Power Steering Oil	ltrs	350
329	Power steering overhauling	Each	2400
330	Power steering pipe	Each	320
331	Pressure Plate	Set	12500
332	Pressure plate	Each	1
333	Propeller shaft	Each	3000
334	Propeller shaft bolt	Each	30
335	PTO bracket new making	Each	1
336	PTO bracket removal	Each	1
337	PVC tape	Each	20
338	Radiator assy	Each	25500
339	Radiator cap	Each	550

312	Inner door lock ( R ) changing	No	250
313	Inner door lock(L) changing	No	250
314	Inner wheel bearing changing front	No	120
315	Inner wheel bearing changing rear	No	120
316	Inner wheel bearing oil seal changing front	No	120
317	Inner wheel bearing oil seal changing rear	No	120
318	Intake manifold changing	No	200
319	Intake valve changing	No	200
320	Jack lever changing	No	1
321	Key Lock Set changing	No	350
322	Kilimeter cable changing	No	250
323	Kimpin Bearing changing	No	1
324	King Pin Bearing changing	No	650
325	King pin bush machinery cutting both side changing	No	1
326	King pin greasing changing	No	250
327	King pin kit changing	No	1
328	King pin overhauling bothside changing	No	620
329	KM cable changing & refitting	No	220
330	Knuckle arm fitting	No	1
331	Link assy front changing	No	150
332	Link assy rear changing	No	200
333	Link Bush Front changing	No	150
334	Link Bush Rear changing	No	150
335	Link rod changing	No	1
336	Lock pati changing	No	20
337	Looking glass ( R ) changing	No	50

340	Radiator coolant	each	240
341	radiator hose pipe lower	Each	320
342	Radiator hose pipe upper	Each	320
343	Rain guard	Set	1500
344	Rear Axle Corn	Set	1250
345	Rear bush adjust	Each	100
346	Rear center bolt	Each	100
347	Rear Differential Assy	No	15000
348	Rear hub bearing inner	Each	1550
349	Rear hub bearing outer	Each	1500
350	Rear second leap	Each	1850
351	Rear shackle Assy	Each	950
352	Rear shackle pin	Each	680
353	rear shocker	Each	6500
354	Rear Spring cushion plastic plate	Each	320
355	Rear tail board railing	Each	1
356	recovery van hiring charges	Per Km	1000
357	Rectifier	Each	1150
358	Red paper	Each	20
359	Relay 2 pin 12v	Each	130
360	Relay 3 pin 12v	Each	130
361	Relay 4 pin 12v	Each	180
362	Relay 5 pin 12v	Each	180
363	Release Bearing	Set	5500
364	Relese bearing fork	Each	2800
365	Relese bearing lock	Each	280
366	Rocker Arm	Each	140
367	Rocker shaft	Each	140

338	Looking glass (L) changing	No	50
339	Lower bolt joint changing	No	1
340	Lower clutch kit changing	No	320
341	Lower Radiator hose pipe changing	No	220
342	LT wire 5mm changing	No	50
343	LT wire 6mm changing	No	50
344	LT wire 8mm changing	No	50
345	Main Bearing changing	No	350
346	Main Bearing Oil Seal changing	No	300
347	Main leaf spring ( R ) changing	No	750
348	Main leaf spring (F) changing	No	1
349	Master cylinder changing	No	420
350	Master cylinder kit changing	No	420
351	Master cylinder repairing	No	420
352	Mobile (15w40) changing	No	50
353	Mobile changing	No	200
354	mobile filter changing	No	90
355	nozzle pipe changing	No	200
356	Number Plate change	No	50
357	Number Plate new making	No	50
358	Nut & Bolts changing	No	10
359	Nuts and Bolts(4 Wheel) changing	No	30
360	Oil filter changing	No	50
361	Oil Seal changing	No	1
362	Oil Supply Pump changing	No	450
363	Open end wrench set (6-32mm) changing	No	1
364	Opening and fitting of tyres	No	50
365	Opening and fitting tear spring	No	350

368	Rotor coil	Each	340
369	Screw	Each	10
370	seat cover	Set	6300
371	Seat new making	Set	4200
372	Self Armaure	Set	6800
373	Self Armerture 12v	Each	1
374	Self bush 12V	Each	40
375	Self Carbon	Set	850
376	Self carbon 12V	Each	190
377	Self Carnon Rocker	Set	1
378	Self field coil 12v	Each	420
379	Self housing	Each	1200
380	Self Overhauling	Each	850
381	Self Plunge	No	1850
382	Self rewinding	Each	230
383	Self top cover	Each	230
384	Shaft yoke & Teeth	No	6500
385	Shakle Pin Assy	set	1200
386	Shock absorber	Each	1
387	Shock Absorber Bush	set	150
388	Shock Absover Front	Set	6800
389	Shock Absover Rear	Set	6500
390	shocker bush	Each	150

366	Outer wheel bearing changing front	No	120
367	Outer wheel bearing changing rear	No	120
368	Outer wheel bearing oil seal changing Front	No	120
369	Outer wheel bearing oil seal changing rear	No	120
370	Overhual starter and change carbon	No	450
371	Pilot bearing changing	No	300
372	Piston changing	No	600
373	Piston Ring changing	No	6500
374	Plastic lock changing	No	20
375	Plastic tape changing	No	20
376	Plastic washer changing	No	1
377	Power steering bearing changing	No	650
378	Power steering belt changing	No	200
379	Power steering box Assy changing	No	1200
380	Power Steering Oil changing	No	50
381	Power steering overhauling changing	No	2400
382	Power steering pipe changing	No	300
383	Power steering pump change	No	800
384	Pressure plate changing	No	2450
385	Pressure water pump removal, refitting and gasket changing	No	120
386	Propeller shaft bolt changing	No	30
387	Propeller shaft changing	No	350
388	Propeller shaft york changing	No	420

391	Shocker Front	Each	1
392	Shocker nut bolt	Each	90
393	Side Light	No	1
394	Side Light Bulb	No	30
395	Side Light Clamp	Set	1
396	Silencer box	Each	3800
397	Silencer pipe	Each	2500
398	Socket (6mm-32mm)	Set	4800
399	Solonoid switch 12v	Each	2800
400	Spark Plug	Set	1
401	Speedo meter Assy	Each	3200
402	Speedo meter cable	Each	230
403	Speedo meter pinion	Each	90
404	Spring 2nd leaf (F)	Each	1
405	Spring 2nd leaf (R)	Each	4400
406	Spring 3rd leaf (F)	Each	1
407	Spring 3rd leaf ®	Each	1800
408	Spring 4th leaf (F)	Each	1
409	Spring 4th leaf ®	Each	1450
410	Spring 5th leaf (F)	Each	1
411	Spring 5th leaf ®	Each	1150
412	Spring 6th leaf (F)	Each	1
413	Spring 6th leaf ®	Each	800
414	Spring buffer mounting	Each	950
415	Spring bush	Each	190
416	Spring Bush Metal	No	1250
417	Spring Clamp	No	180

389	PTO bracket new making changing	No	1
390	PTO bracket removal changing	No	1
391	PTO pump servicing changing	No	1
392	PVC tape changing	No	1
393	Quarter pin changing	No	1
394	Radiator assy changing	No	800
395	Radiator cap changing	No	50
396	Radiator coolant changing	No	100
397	radiator hose pipe lower changing	No	200
398	Radiator hose pipe upper changing	No	200
399	Radiator opening and fitting	No	800
400	Radiator repairing	No	1500
401	Radiator Servicing	No	1200
402	Rain guard changing	No	1
403	Rain guard fitting	No	50
404	Rear Axle Corn changing	No	1
405	Rear bumper open fitting and welding	No	1200
406	Rear bush adjust changing	No	120
407	Rear center bolt changing	No	750
408	Rear Differential Assy changing	No	1500
409	Rear hub bearing inner changing	No	550
410	Rear hub bearing outer changing	No	550
411	Rear hydraulic jack opening & new seal kit fitting	No	1
412	Rear second leap changing	No	750
413	Rear shackle assy change	No	200
414	Rear shackle pin changing	No	200
415	rear shocker changing	No	150



418	Spring cycle pin	Each	980
419	Spring griping washer	Each	20
420	Spring hanger	Each	1450
421	Spring Main -2nd	No	1
422	Spring Main Rear	No	2850
423	Spring Main-3rd	No	1
424	Spring Main-4th	No	1
425	Spring Main-5th	No	1
426	Spring pin	Each	920
427	Spring plate	Each	1200
428	Spring shackle	Each	1450
429	Spring washer	Each	10
430	Stabilizer Bar Bush - Front	No	450
431	Stabilizer link rod	Each	2
432	Starter carbon	Each	220
433	Starter coil	Each	430
434	Starter relay 12v	Each	250
435	Steering adjuster bolt assy	Each	90
436	Steering box oil seal	Each	90
437	Steering box overhauling	Each	2450
438	Steering column (Inner)	Each	230
439	Steering column (Outer)	Each	230
440	Steering cross	Each	2800
441	Steering cross bearing	Each	2800
442	Steering Damper	Set	6500
443	Steering rack end	Each	2
444	Steering wheel cover	No	650
445	Suspension arm bush lower small	Each	1450
446	Suspension arm bush upper small	Each	1600

416	Rear spring opening and pad changing	No	100
417	Rear tail board railing changing	No	1
418	Rectifier changing	No	250
419	Red paper changing	No	1
420	Relay 2 pin 12v changing	No	30
421	Relay 3 pin 12v changing	No	30
422	Relay 4 pin 12v changing	No	30
423	Relay 5 pin 12v changing	No	30
424	Release bearing changing	No	1400
425	Release bearing fork changing	No	200
426	Release bearing lock changing	No	200
427	Removing & Fitting of spring assy	No	650
428	Resoling of tyres	No	1
429	Rocker Arm changing	No	350
430	Rocker shaft changing	No	250
431	Rotor coil changing	No	200
432	Screw changing	No	20
433	Seal kit changing	No	80
434	seat cover changing	No	600
435	Seat new making changing	No	2500
436	Self Armaure changing	No	350
437	Self Armerture 12v changing	No	1
438	Self Bush changing	No	120
439	Self carbon changing	No	120
440	Self Carnon Rocker changing	No	800
441	Self field coil 12v changing	No	200
442	Self housing changing	No	200
443	Self Overhauling changing	No	450
444	Self Plunge changing	No	200

447	Sycronizer circlip lock	Each	250
448	Sycronizer hub	Each	2850
449	Sycronizer lock	Each	220
450	Sycronizer ring	Each	3800
451	Sycronizer sheeve	Each	2200
452	Sycronizer sheeve inddle bearing	Each	1200
453	Tail Inner Bearing	Set	1
454	Tail Oil Seal	Set	2
455	Tail Outer Bearing	Set	1
456	Tail pinion bearing inner	Each	3850
457	Tail pinion bearing outer	Each	3750
458	Tail pinion chechnut washer	Each	90
459	Tail pinion checknut	Each	230
460	Tail Pinion oil seal	piece	830
461	Tappid cover packing	Each	230
462	Tempering spring	Each	200
463	Threading tape	Each	20
464	Thrust washer	Each	260
465	Tie clip	Each	20
466	Tie rod end	Each	2400
467	Tie Rod End-Big	Set	2800
468	Tie Rod End-Small	Set	2500
469	Tie rod kit	Each	2
470	Timing belt	Each	3450
471	Timing cover front	Each	1850
472	Timing cover gear	Each	730
473	Timing cover oil seal	Each	640
474	Timing pinion chain and adjuster kit set	set	1500
475	Top shaft bearing	Each	1450
476	Transmission half over hauling	Each	3400

445	Self rewinding changing	No	220
446	Self starter overhauling changing	No	350
447	Self top cover changing	No	200
448	Shaft yoke & Teeth changing	No	350
449	Shakle Pin Assy changing	No	150
450	Shock Absorber Bush changing	No	150
451	Shock absorber changing	No	1
452	Shock Absover Front changing	No	120
453	Shock Absover Rear changing	No	120
454	shocker bush changing	No	1
455	Shocker Front changing	No	150
456	Shocker nut bolt changing	No	50
457	Side door glass changing	No	400
458	Side Light Bulb changing	No	50
459	Side Light changing	No	50
460	Side Light Clamp changing	No	1
461	Silencer box changing	No	350
462	Silencer pipe changing	No	300
463	Socket (6mm-32mm) changing	No	1
464	Solonoid switch 12v changing	No	120
465	Spark Plug changing	No	1
466	Speedo meter Assy changing	No	500
467	Speedo meter cable changing	No	250
468	Speedo meter pinion changing	No	350
469	Spring 2nd leaf (F) changing	No	1
470	Spring 2nd leaf (R) changing	No	750
471	Spring 3rd leaf (F) changing	No	1
472	Spring 3rd leaf ® changing	No	1
473	Spring 4th leaf (F) changing	No	1
474	Spring 4th leaf ® changing	No	1

477	Transmission over hauling	Each	6400
478	U bolt front	Each	2
479	U bolt nut	Each	90
480	U bolt plate	Each	430
481	U bolt rear	Each	650
482	U bolt rear	Each	2
483	U-Bolt	No	490
484	UJ cross	Each	1850
485	Upper bolt joint	Each	1
486	vacuum nozzle pipe	per piece	1
487	Vacuum pipe	Each	1
488	Valve guide	Each	930
489	Valve key	Each	10
490	valve oil seal	each	250
491	Valve seal	Each	330
492	Valve spring	Each	230
493	Valve washer	Each	40
494	washer hat	Each	50
495	Water pump	No	1
496	water pump Assy	Each	6500
497	Wheel alignment	Each	350
498	Wheel Bearing	Set	1
499	Wheel bearing inner front	Each	1450
500	Wheel bearing inner rear	Each	1400
501	Wheel bearing oil seal inner front	Each	720
502	Wheel bearing oil seal inner rear	Each	720
503	Wheel bearing outer front	Each	1200
504	Wheel bearing outer rear	Each	1200

475	Spring 5th leaf (F) changing	No	1
476	Spring 5th leaf ® changing	No	1
477	Spring 6th leaf (F) changing	No	1
478	Spring 6th leaf ® changing	No	1
479	Spring buffer mounting changing	No	350
480	Spring bush changing	No	100
481	Spring Bush Metal Labour Charge	No	200
482	Spring Changing	No	650
483	Spring clam changing	No	120
484	spring clam welding	No	100
485	Spring cycle pin Labour Charge	No	120
486	Spring Greasing Labour Charge	No	100
487	Spring griping washer Labour Charge	No	1
488	Spring hanger changing	No	120
489	Spring Main -2nd. Labour Charge	No	1
490	Spring Main Rear Labour Charge	No	1
491	Spring Main-3rd Labour Charge	No	1
492	Spring Main-4th Labour Charge	No	1
493	Spring Main-5th Labour Charge	No	1
494	Spring opening and fitting charges	No	650
495	Spring pad changing	No	100
496	Spring pin bush changing	No	320
497	Spring pin Labour Charge	No	150
498	Spring plate Labour Charge	No	130
499	Spring shackle Labour Charge	No	150
500	Spring Shackle pin changing	No	120
501	Spring washer Labour Charge	No	20
502	Stabilizer Bar Bush - Front Labour Charge	No	150

505	Wheel bolt	Each	450
506	Wheel cylinder	Each	2450
507	Wheel Cylinder Assy	Set	320
508	Wheel cylinder bucket	Each	2450
509	wheel Drum	Each	8400
510	Wheel nut	Each	230
511	Wheel wrench	Each	950
512	Wind shield replacing	Each	2400
513	Window glass	Each	4800
514	Wiper Arm	Each	700
515	Wiper Blade	Set	700
516	Wiper blade	Each	350
517	Wiper blade Assy	Each	330
518	Wiper motor	Each	1
519	Wiper motor Assy	Each	4950
520	Wiring clip	Each	5
521	Zip cock	Each	10

1,304,569.00

503	Stabilizer bush	No	150
	changing		
504	Stabilizer link assy changing	No	120
505	Stabilizer link rod Labour Charge	No	150
506	Starter coil Labour Charge	No	250
507	Starter relay 12v Labour Charge	No	1
508	Steering adjuster bolt assy Labour Charge	No	80
509	Steering box kit changing	No	220
510	Steering box oil seal changing	No	220
511	Steering box oil seal Labour Charge	No	1
512	Steering box overhauling Labour Charge	No	2400
513	Steering column (Inner) Labour Charge	No	80
514	Steering column (Outer) Labour Charge	No	80
515	Steering Column changing inner	No	1
516	Steering Column changing outer	No	1
517	Steering cross bearing changing	No	320
518	Steering cross changing	No	1
519	Steering Damper Labour Charge	No	250
520	Steering rack changing	No	1
521	Steering Rack end assy (Link)changing	No	1
522	Steering rack end changing	No	1
523	Steering wheel cover Labour Charge	No	50
524	Steering wheel opening & refitting	No	220

525	Suspension arm bush lower small changing	No	350
526	Suspension arm bush upper small changing	No	350
527	suspension arm changing	No	650
528	Sycronizer circlip lock changing	No	200
529	Sycronizer hub changing	No	350
530	Sycronizer lock changing	No	150
531	Sycronizer ring changing	No	350
532	Sycronizer sheeve changing	No	1
533	Sycronizer sheeve inddle bearing changing	No	1
534	Tail Inner Bearing changing	No	300
535	Tail Oil Seal changing	No	410
536	Tail Outer Bearing changing	No	300
537	Tail pinion bearing inner changing	No	300
538	Tail pinion bearing outer changing	No	350
539	Tail pinion chechnut washer changing	No	150
540	Tail pinion checknut changing	No	150
541	Tail pinion oil seal changing	No	450
542	Tail Pinion oil seal changing	No	1
543	Tailgate Repairing	No	1
544	Tappet adjustment	No	220
545	Tappid cover packing changing	No	450
546	Tempering spring change	No	150
547	Threading tape changing	No	1
548	Thrust washer changing	No	250
549	Tie clip changing	No	10
550	Tie rod end changing	No	320

551	Tie Rod End-Big changing	No	250
552	Tie Rod End-Small changing	No	250
553	Tie rod kit changing	No	1
554	Timing belt changing	No	1200
555	Timing cover front changing	No	500
556	Timing cover gear changing	No	220
557	Timing cover oil seal changing	No	450
558	Timing pinion chain and adjuster kit set changing	No	1
559	Top shaft bearing changing	No	250
560	Transmission half over hauling changing	No	3200
561	Transmission over hauling changing	No	6200
562	Tyre changing	No	50
563	Tyre opening and drum change	No	250
564	U bolt changing	No	150
565	U bolt front changing	No	1
566	U bolt nut changing	No	20
567	U bolt plate changing	No	150
568	U bolt rear changing	No	150
569	UJ cross changing	No	350
570	Upper bolt joint changing	No	1
571	Upper clutch kit changing	No	1
572	Upper Radiator hose pipe changing	No	200
573	Vaccum pipe changing	No	1
574	vacuum nozzle pipe changing	No	1
575	Vacuum pipe changing	No	1
576	Vacuum pipe socket changing	No	1

577	Valve guide changing	No	250
578	Valve key changing	No	200
579	Valve O ring changing	No	50
580	valve oil seal changing	No	10
581	Valve seal changing	No	10
582	Valve spring changing	No	100
583	Valve washer changing	No	1
584	Vane pump changing	No	1
585	washer hat changing	No	1
586	Water filter changing	No	90
587	Water level indicator pipe changing	No	15
588	water pump Assy changing	No	600
589	Water pump assy servicing	No	500
590	Water pump changing	No	800
591	Water pump opening and fitting	No	650
592	Water separator servicing	No	1
593	Welding Labour Charge	No	50
594	Wheel Alignment Labour Charge	No	250
595	Wheel Bearing changing	No	550
596	Wheel bearing inner front changing	No	1
597	Wheel bearing inner rear changing	No	1
598	Wheel bearing oil seal inner front changing	No	1
599	Wheel bearing oil seal inner rear changing	No	1
600	Wheel bearing outer front changing	No	1
601	Wheel bearing outer rear changing	No	1
602	Wheel bolt change	No	150

603	Wheel Cylinder Assy changing	No	1
604	Wheel cylinder bucket changing	No	200
605	Wheel cylinder changing	No	200
606	wheel Drum changing	No	250
607	Wheel nut changing	No	30
608	Wheel wrench changing	No	1
609	Whole body greasing Labour Charge	No	250
610	Wind shelid glass fitting Labour Charge	No	3000
611	Wind shield replacing Labour Charge	No	1
612	Window glass changing	No	600
613	Wiper alignment Labour Charge	No	1
614	Wiper arm changing	No	90
615	Wiper blade Assy changing	No	90
616	Wiper blade changing	No	80
617	Wiper motor Assy changing	No	250
618	Wiper motor changing	No	600
619	Wiper motor repairing	No	1400
620	Wiring clip changing	No	20

226,887.00